



Adjust Water Budget

Adjusting the Water Budget feature is the easiest way to increase or decrease the run times of all stations on a program. You can use Water Budget to decrease watering during cool winter months, or to increase watering during hot, dry periods.



You can set the Water Budget percentage from 10% to 200% (all station run times doubled), in increments of 10%. Changing the Water Budget percentage affects all stations on all three programs (A, B, and C).

Water Budget percentages are calculated on the normal programmed run time for each station. For example, if a station is programmed to run for 10 minutes, and you set the Water Budget to 80%, the station will only run for 8 minutes (80% of 10 minutes). If you set the Water Budget to 120%, that same station will run for 12 minutes (120% of 10 minutes).



NOTE: Water Budget will not split a minute. One whole minute is the lowest run time allowed.

1. Turn the Programming Dial to **WATER BUDGET**.
2. The number "100" appears in the display. This indicates that all stations are running at 100% of their programmed watering time.
3. Press Plus to increase the Water Budget percentage, or press Minus to decrease the Water Budget percentage.
4. When the Water Budget percentage is set to any figure other than 100, all programs (A, B, and C) display a percent sign (%) in front of the program letter.
5. After setting the Water Budget percentage, turn the Programming Dial back to **AUTO**. All station run times will be increased or decreased by the selected Water Budget percentage.

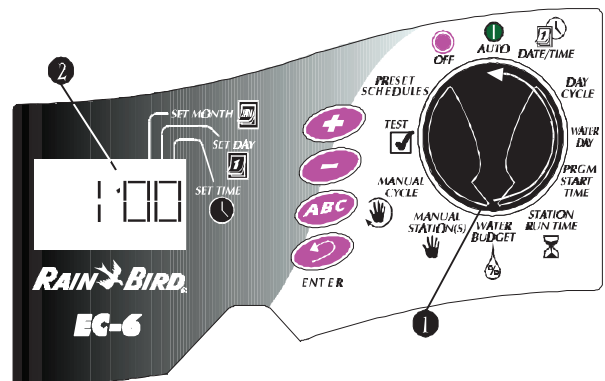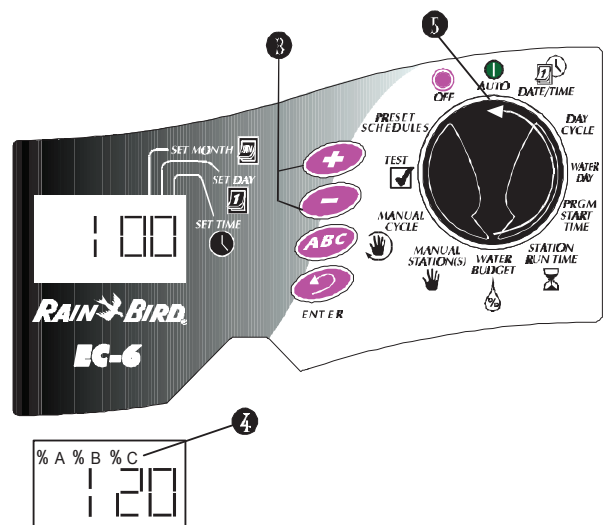

Manually Run Stations and Programs

You can manually run individual stations if you think a particular area needs additional watering.

You can also run an entire program manually. Each station assigned to the program will run for its allotted time.

(Continued on the next page)