


NOTE:


### ▲ OPTICAL PICKUP

## A

⇒ :CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE

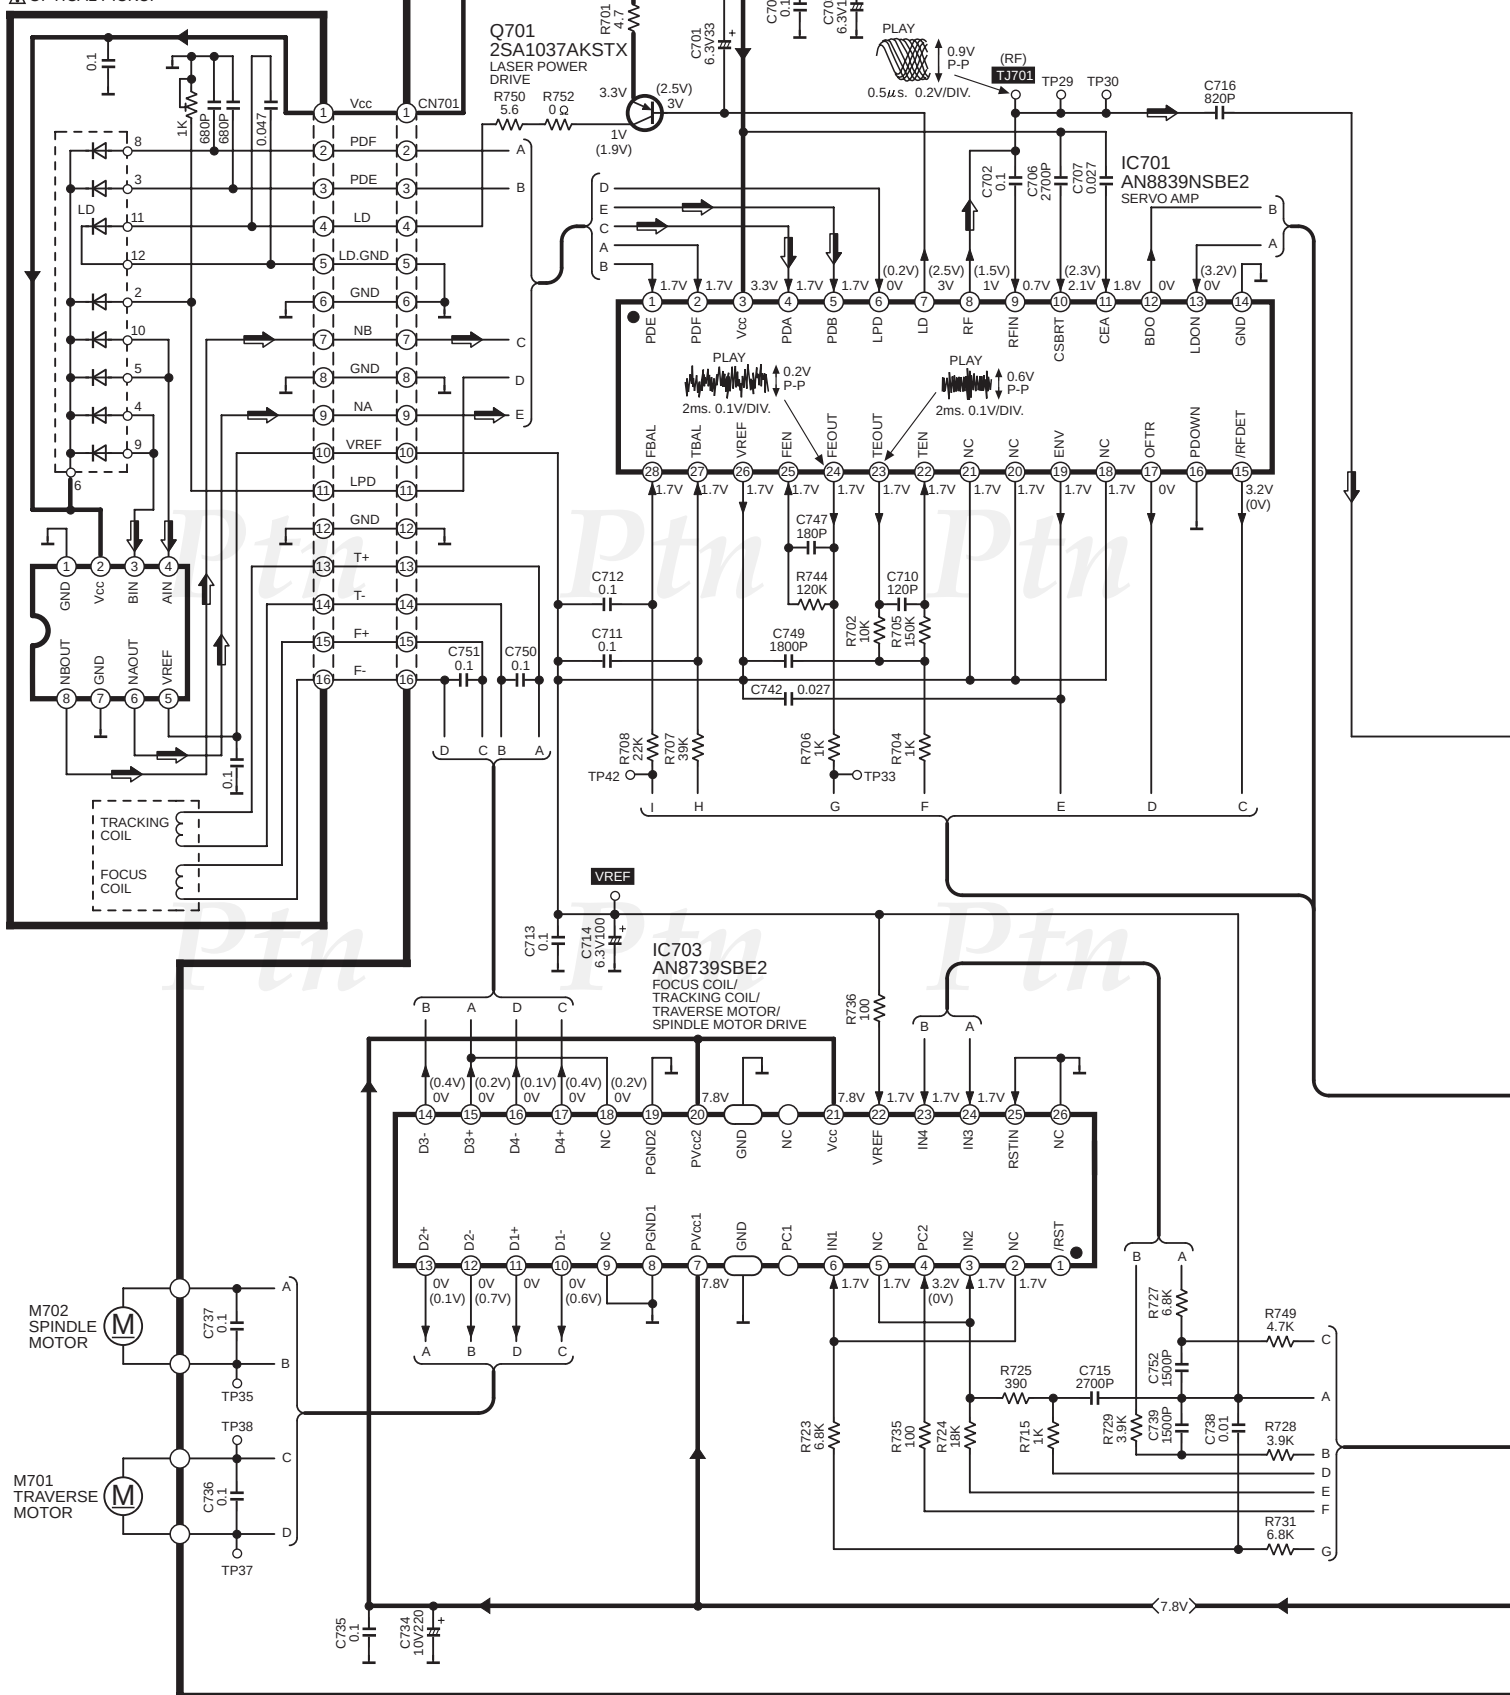

 : POSITIVE VOLTAGE LINE    
  : CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE    
  : CD-DA/V-CD(AUDIO) SIGNAL LINE

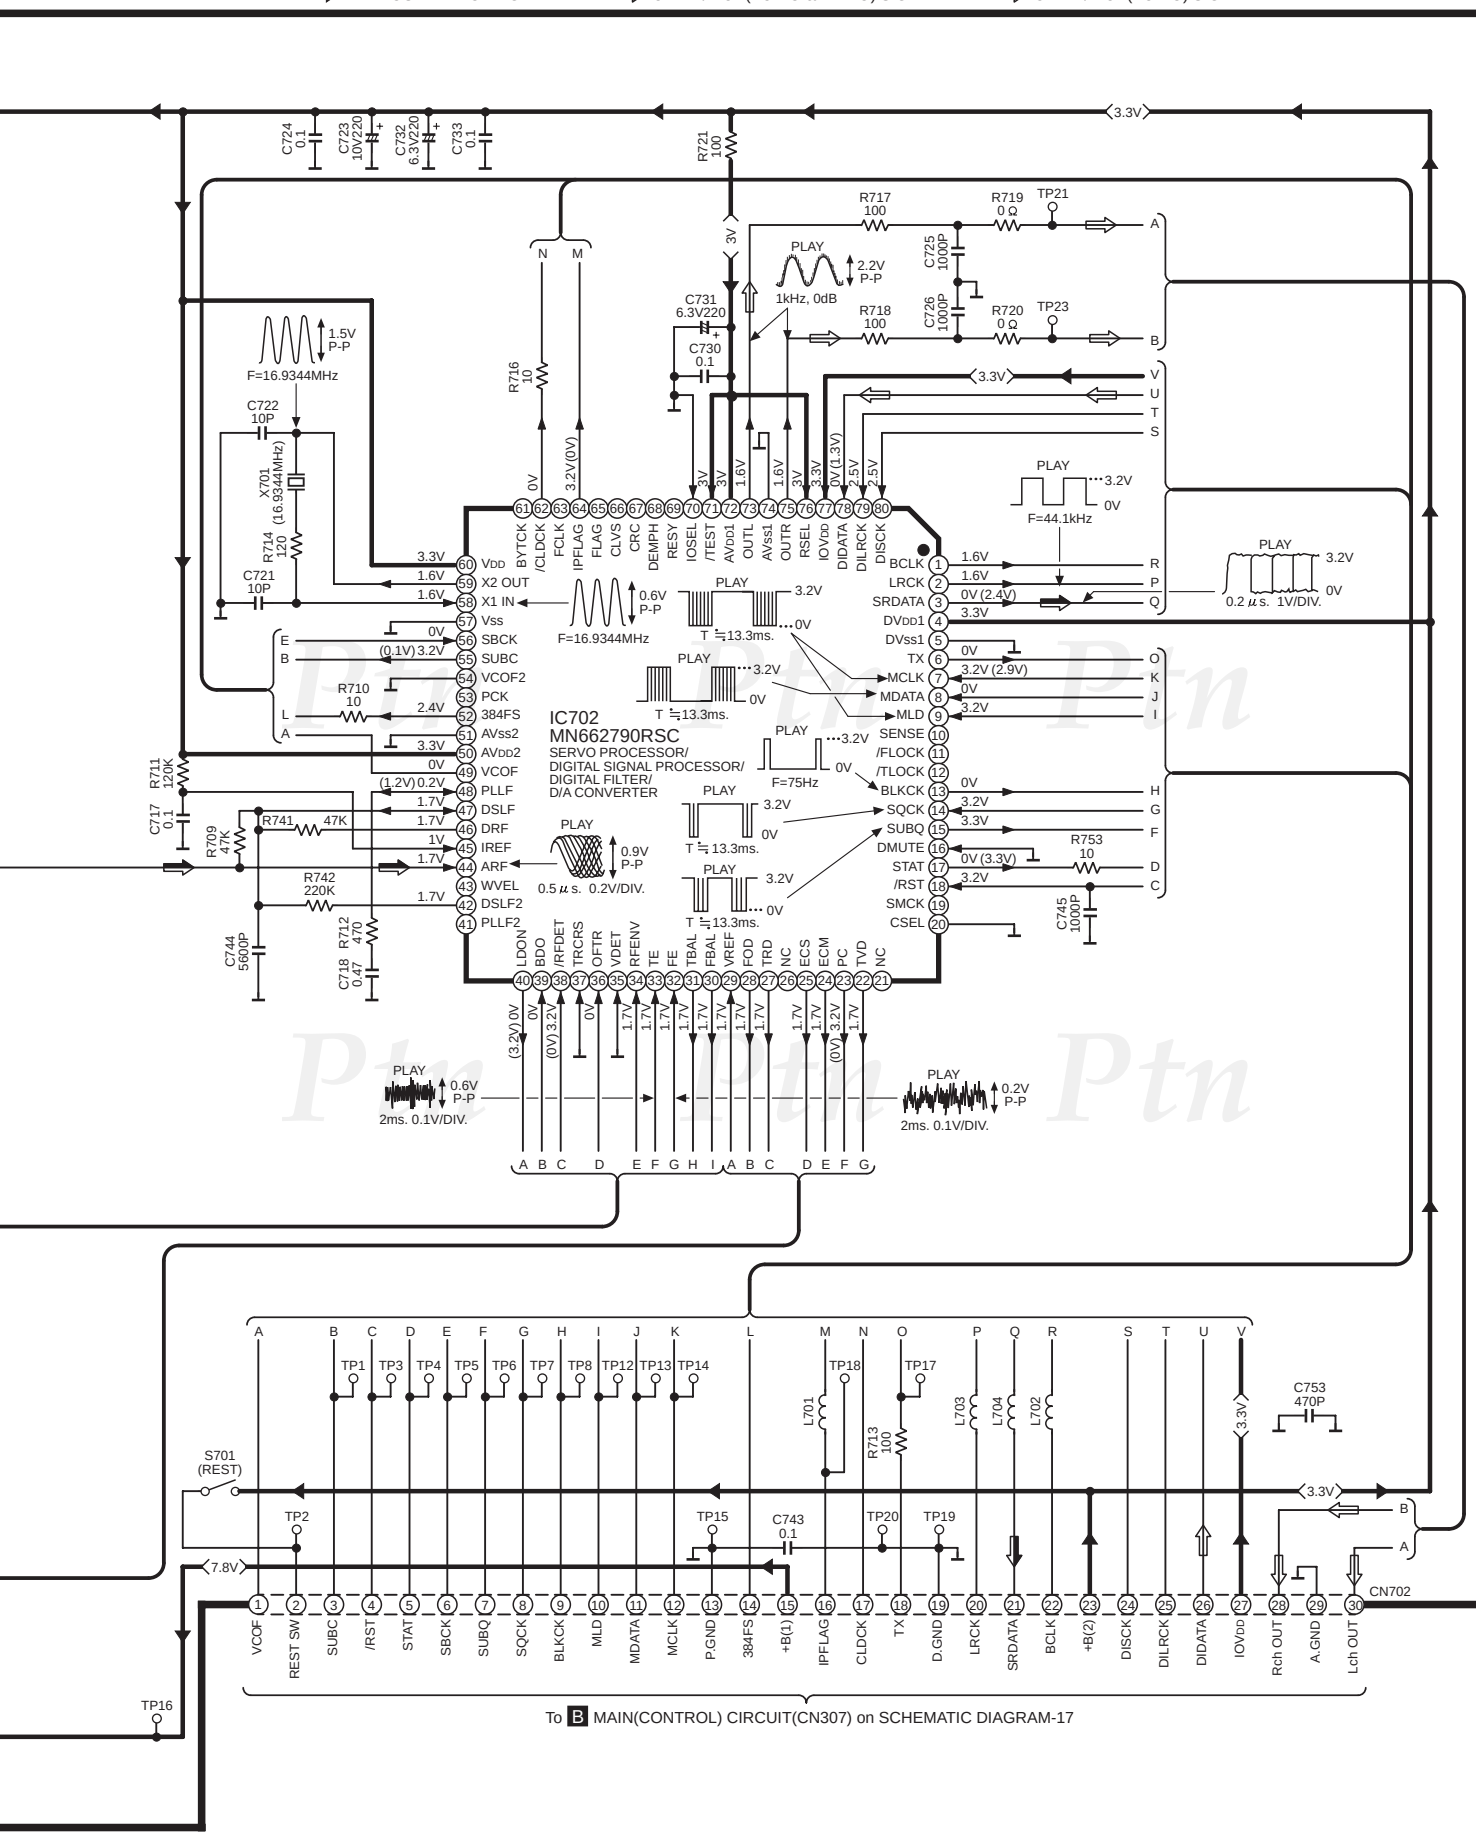

**B** MAIN(TUNER) CIRCUIT


→ : POSITIVE VOLTAGE LINE

□ : FM SIGNAL LINE

■ : AM SIGNAL LINE


□ : FM OSC SIGNAL LINE

■ : AM OSC SIGNAL LINE

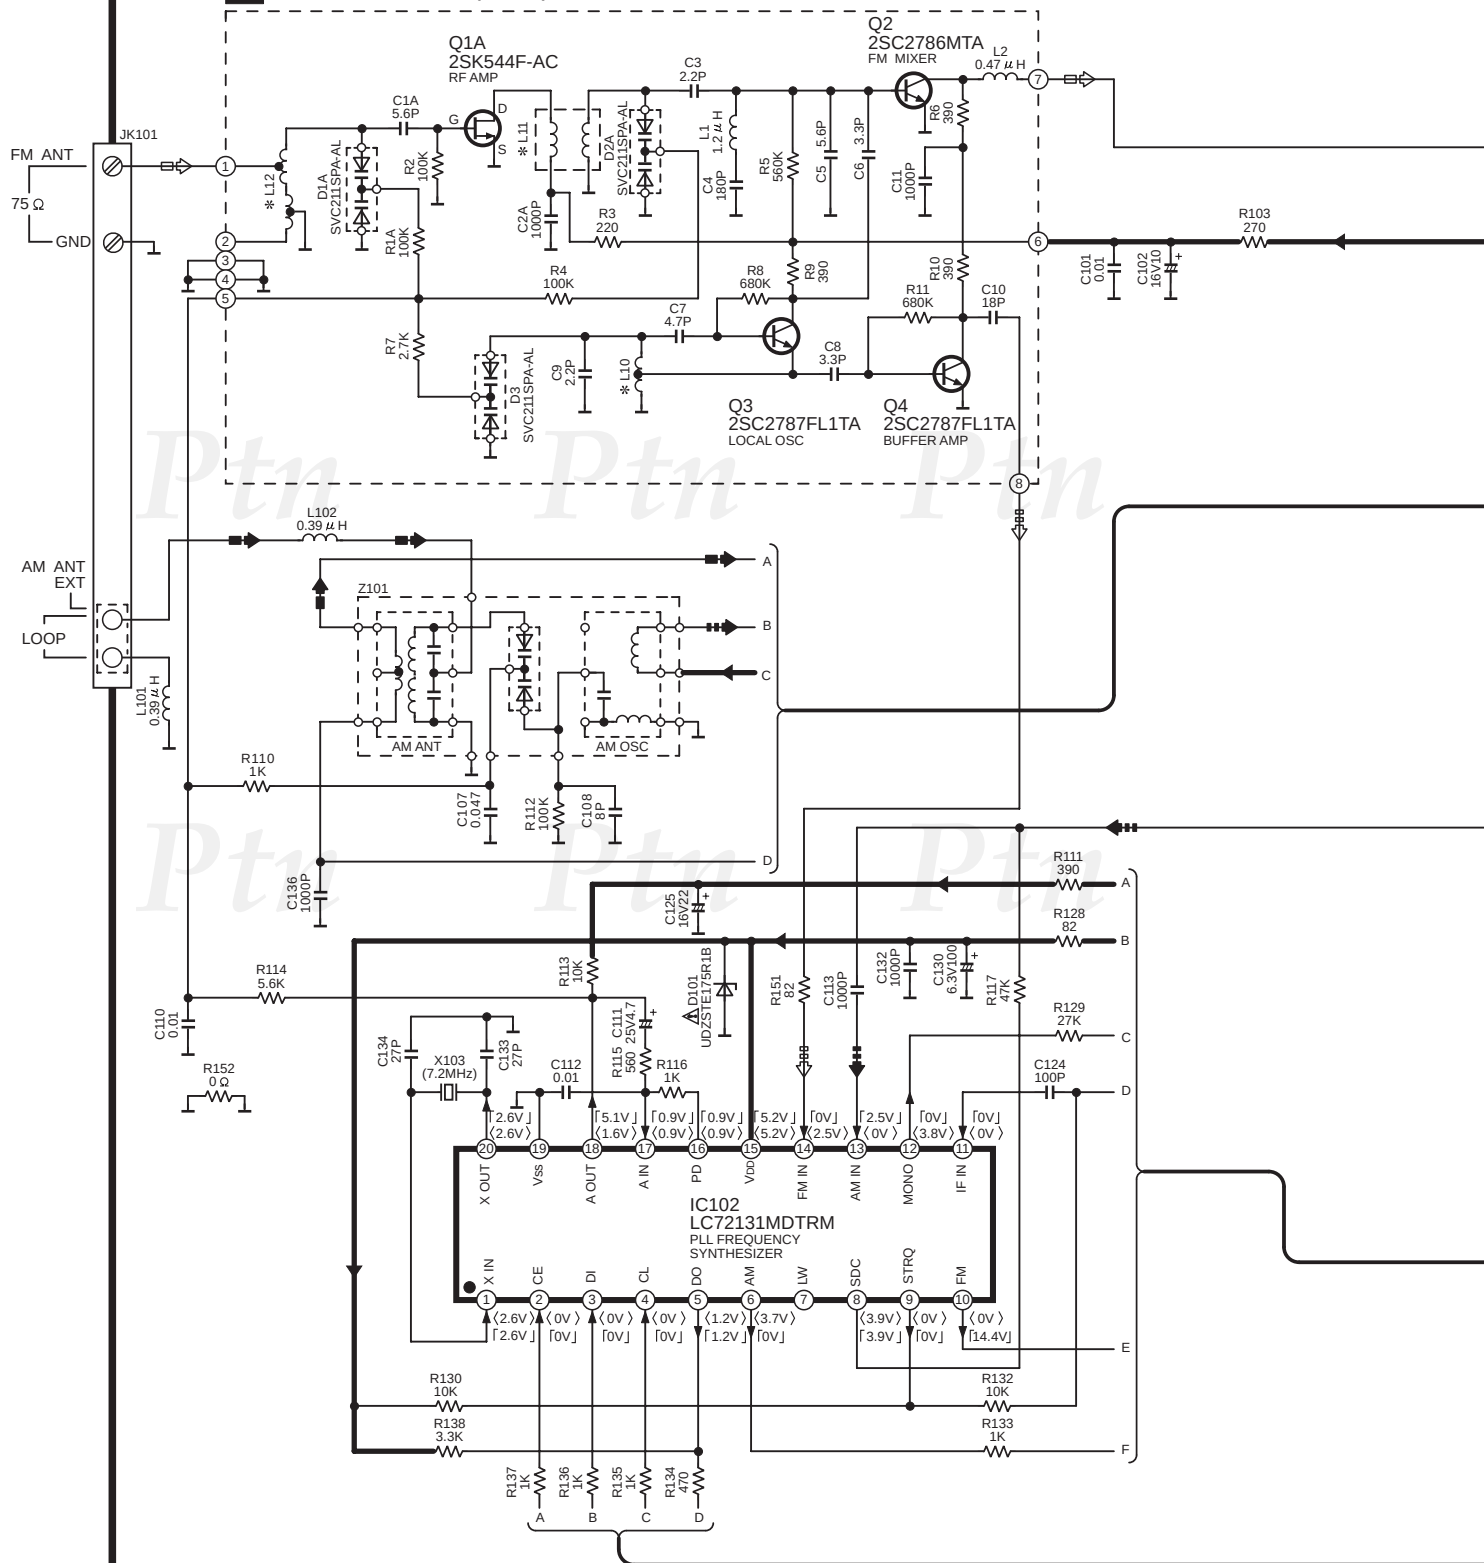**P** FM FRONT END(Z120) CIRCUIT

# SCHEMATIC DIAGRAM-4


——— : POSITIVE VOLTAGE LINE    □ ◁ : FM SIGNAL LINE    ■ ▶ : AM SIGNAL LINE    ■ ■ ▶ : AM OSC SIGNAL LINE

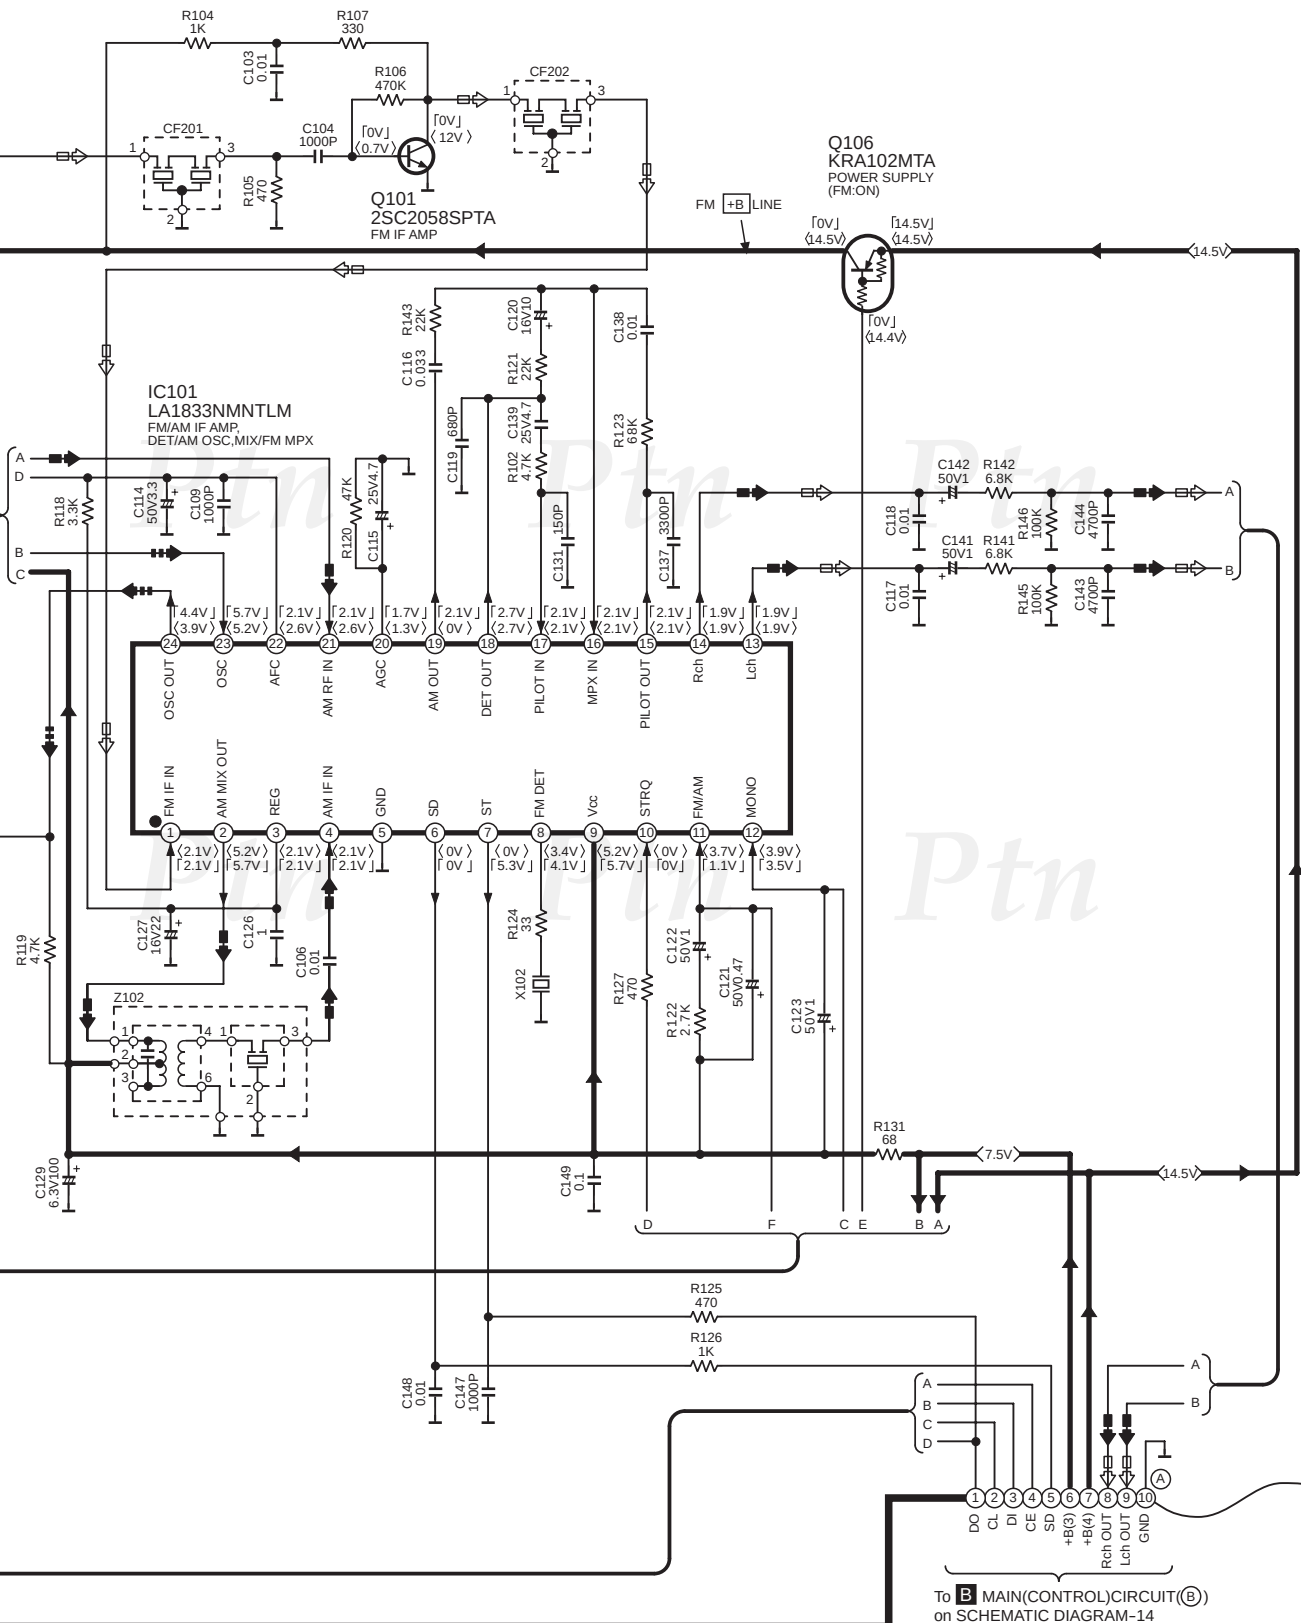

## C MECHANISM CONTROL CIRCUIT


▶ : TAPE PLAYBACK SIGNAL LINE

◀ : TAPE RECORDING SIGNAL LINE

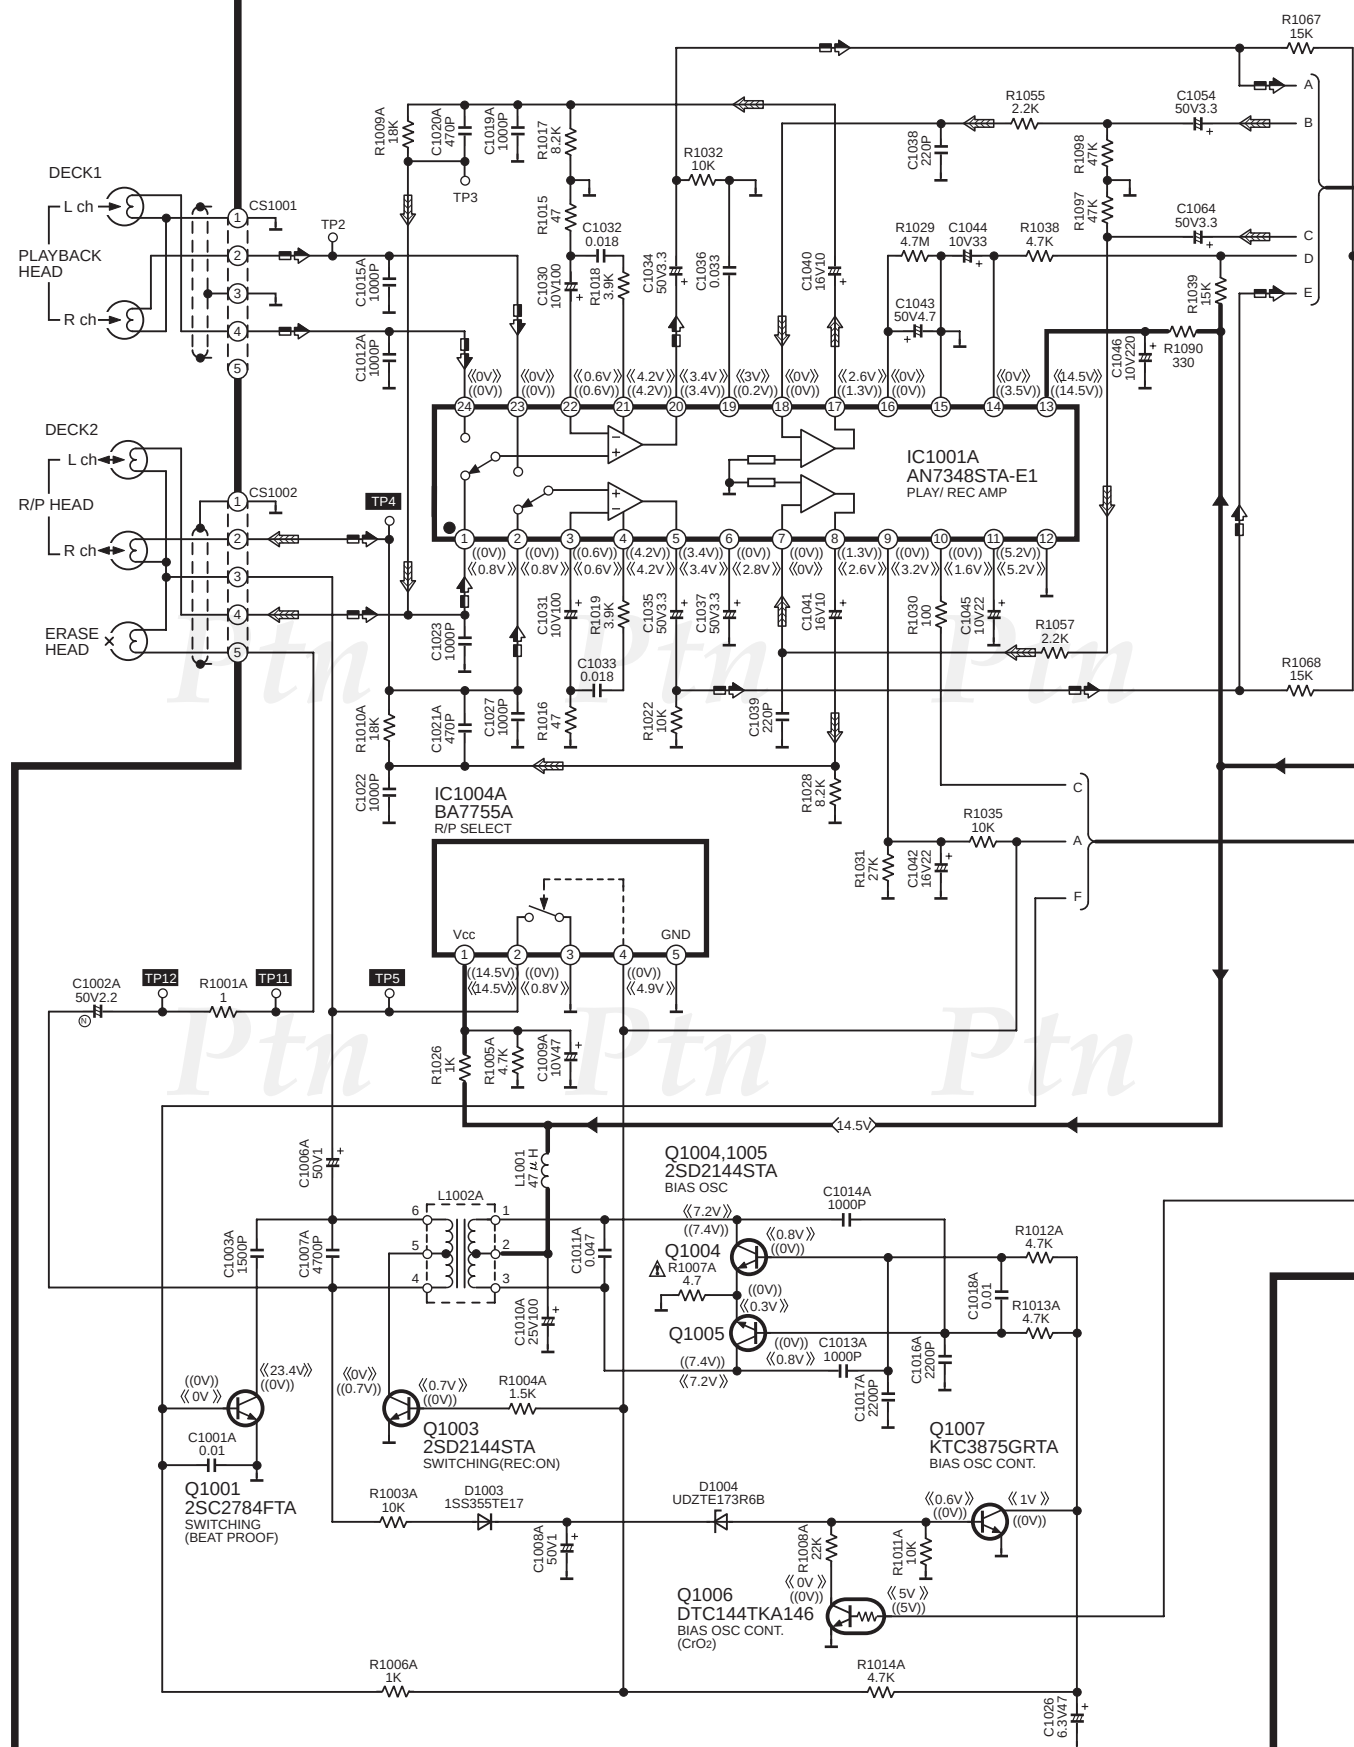

# SCHEMATIC DIAGRAM-6

→ : POSITIVE VOLTAGE LINE

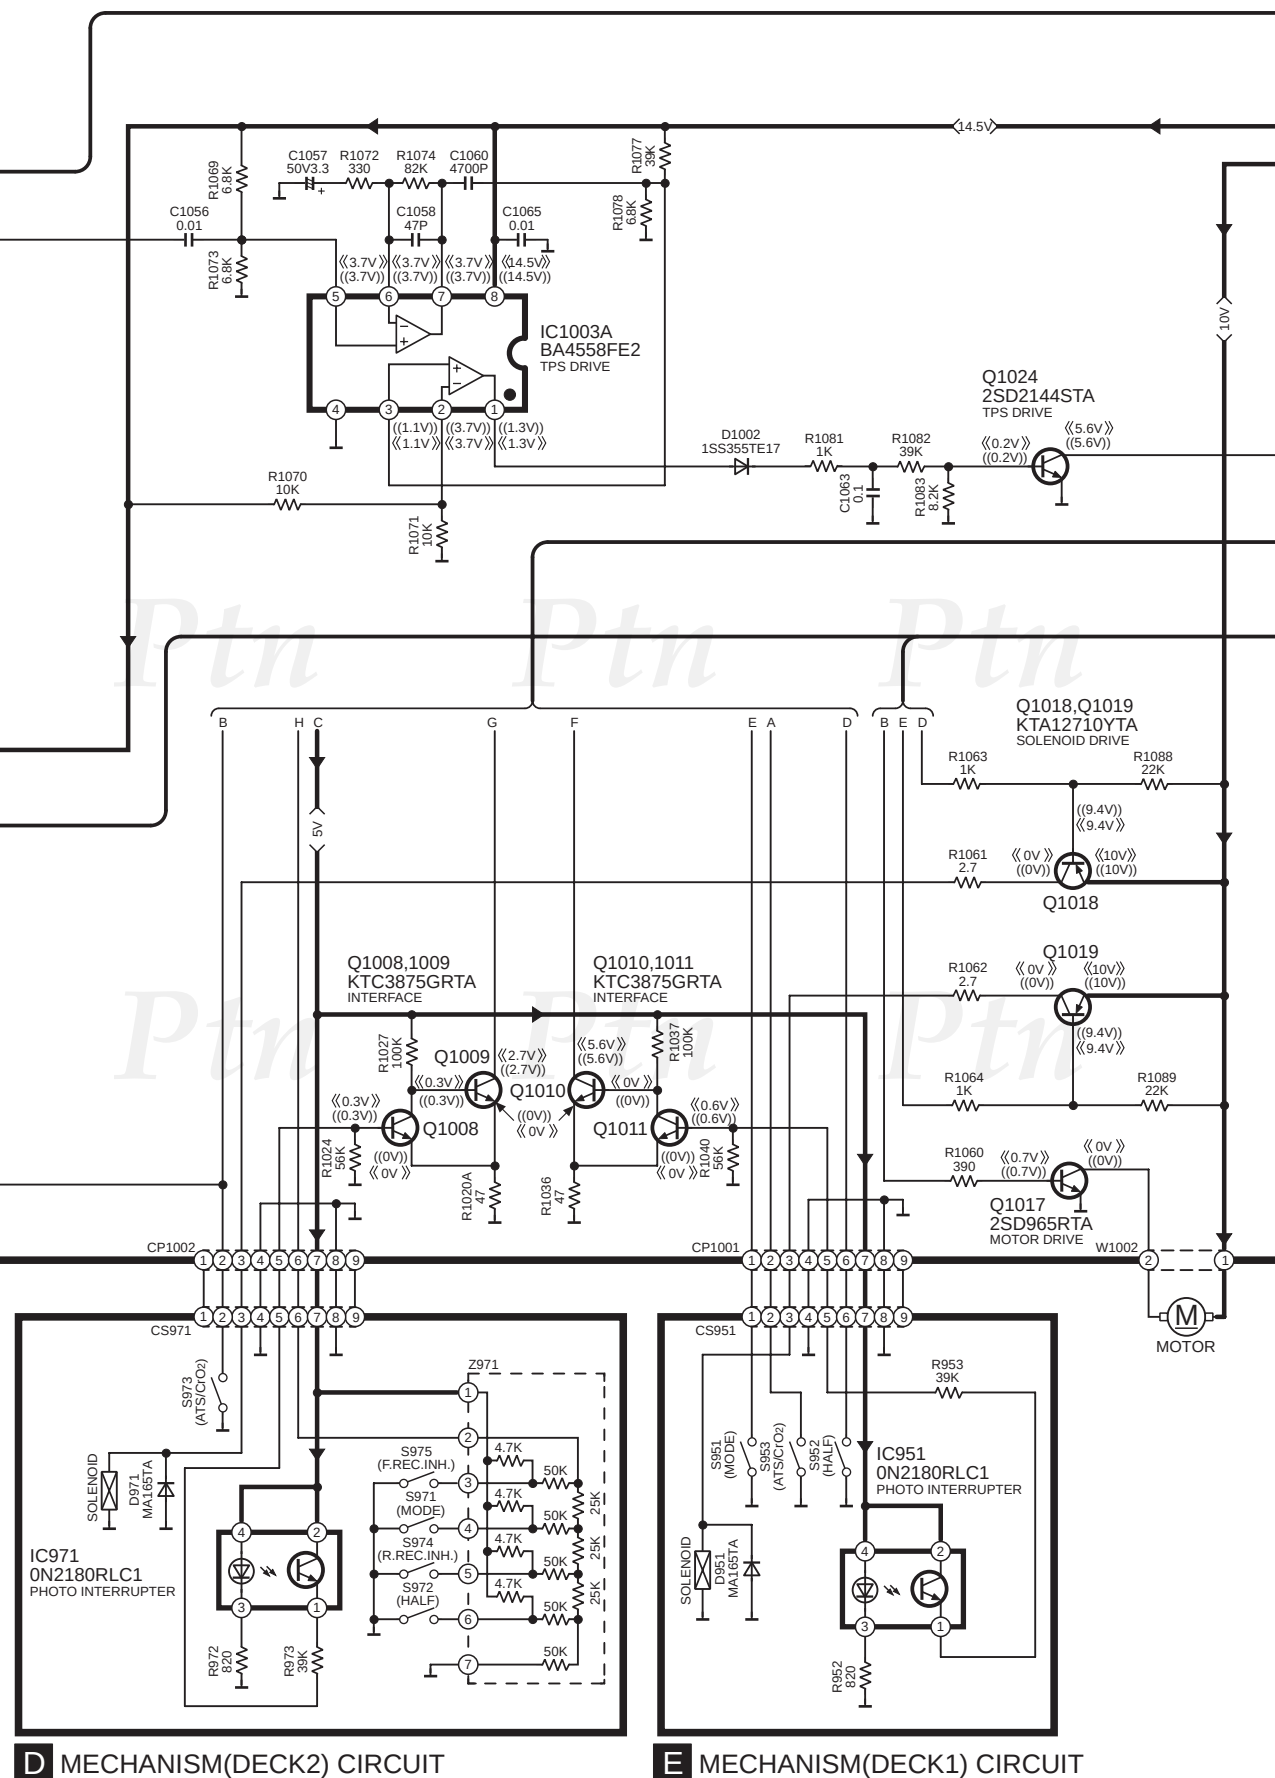


# SCHEMATIC DIAGRAM-7

## C MECHANISM CONTROL CIRCUIT

▶ : TAPE PLAYBACK SIGNAL LINE

→ : POSITIVE VOLTAGE LINE

◀ : TAPE RECORDING SIGNAL LINE

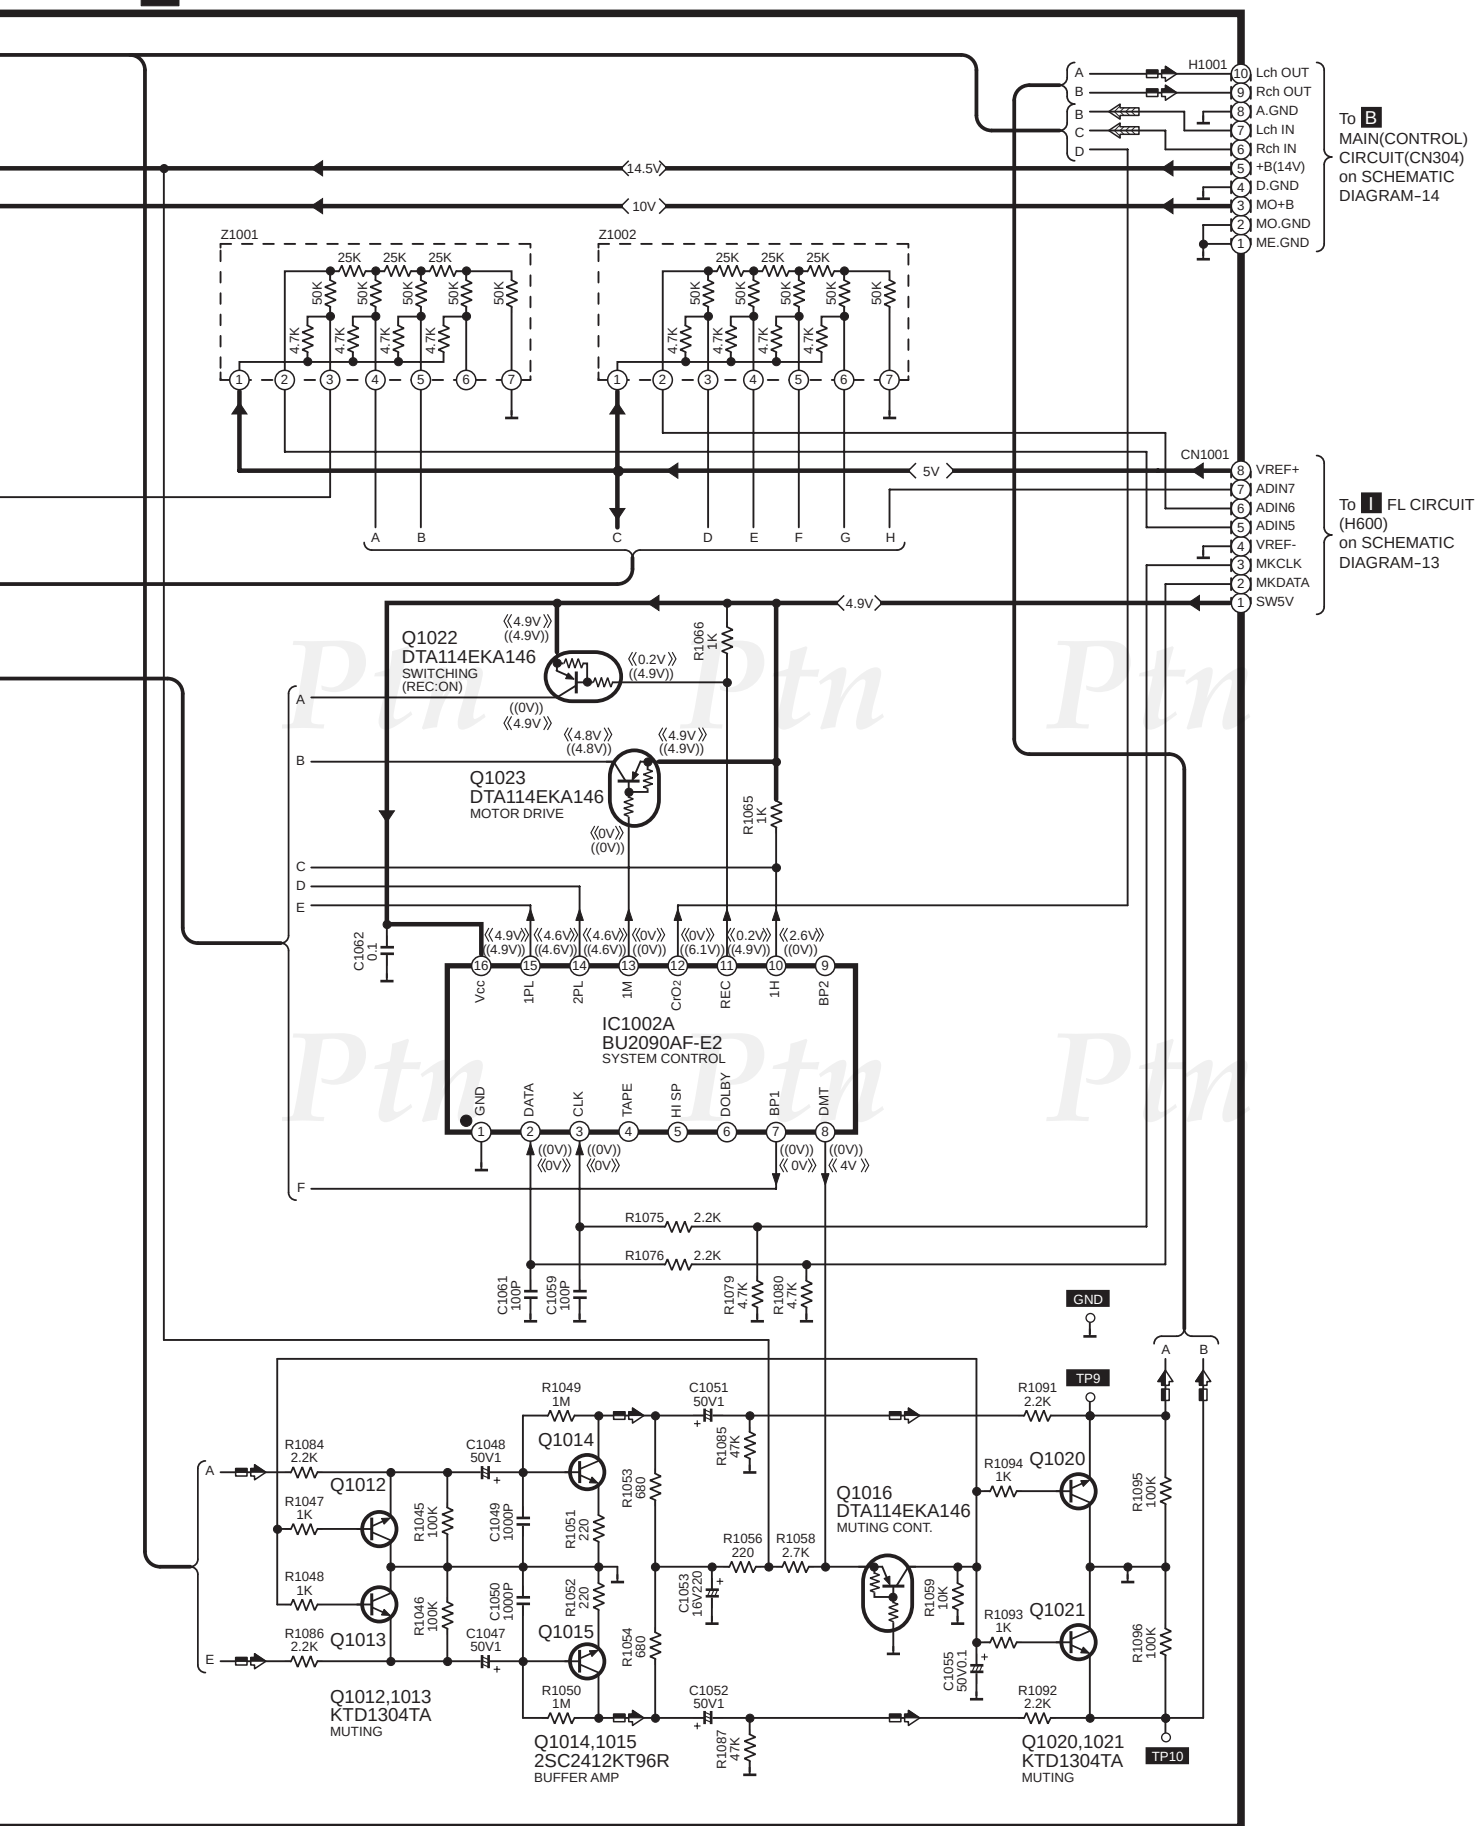

## SCHEMATIC DIAGRAM-8


## F VIDEO CIRCUIT

→ : POSITIVE VOLTAGE LINE

⇨ : CD-DA/V-CD(AUDIO) SIGNAL LINE

⇨ : CD-DA/V-CD(AUDIO &amp; VIDEO) SIGNAL LINE


→ : V-CD(VIDEO) SIGNAL LINE

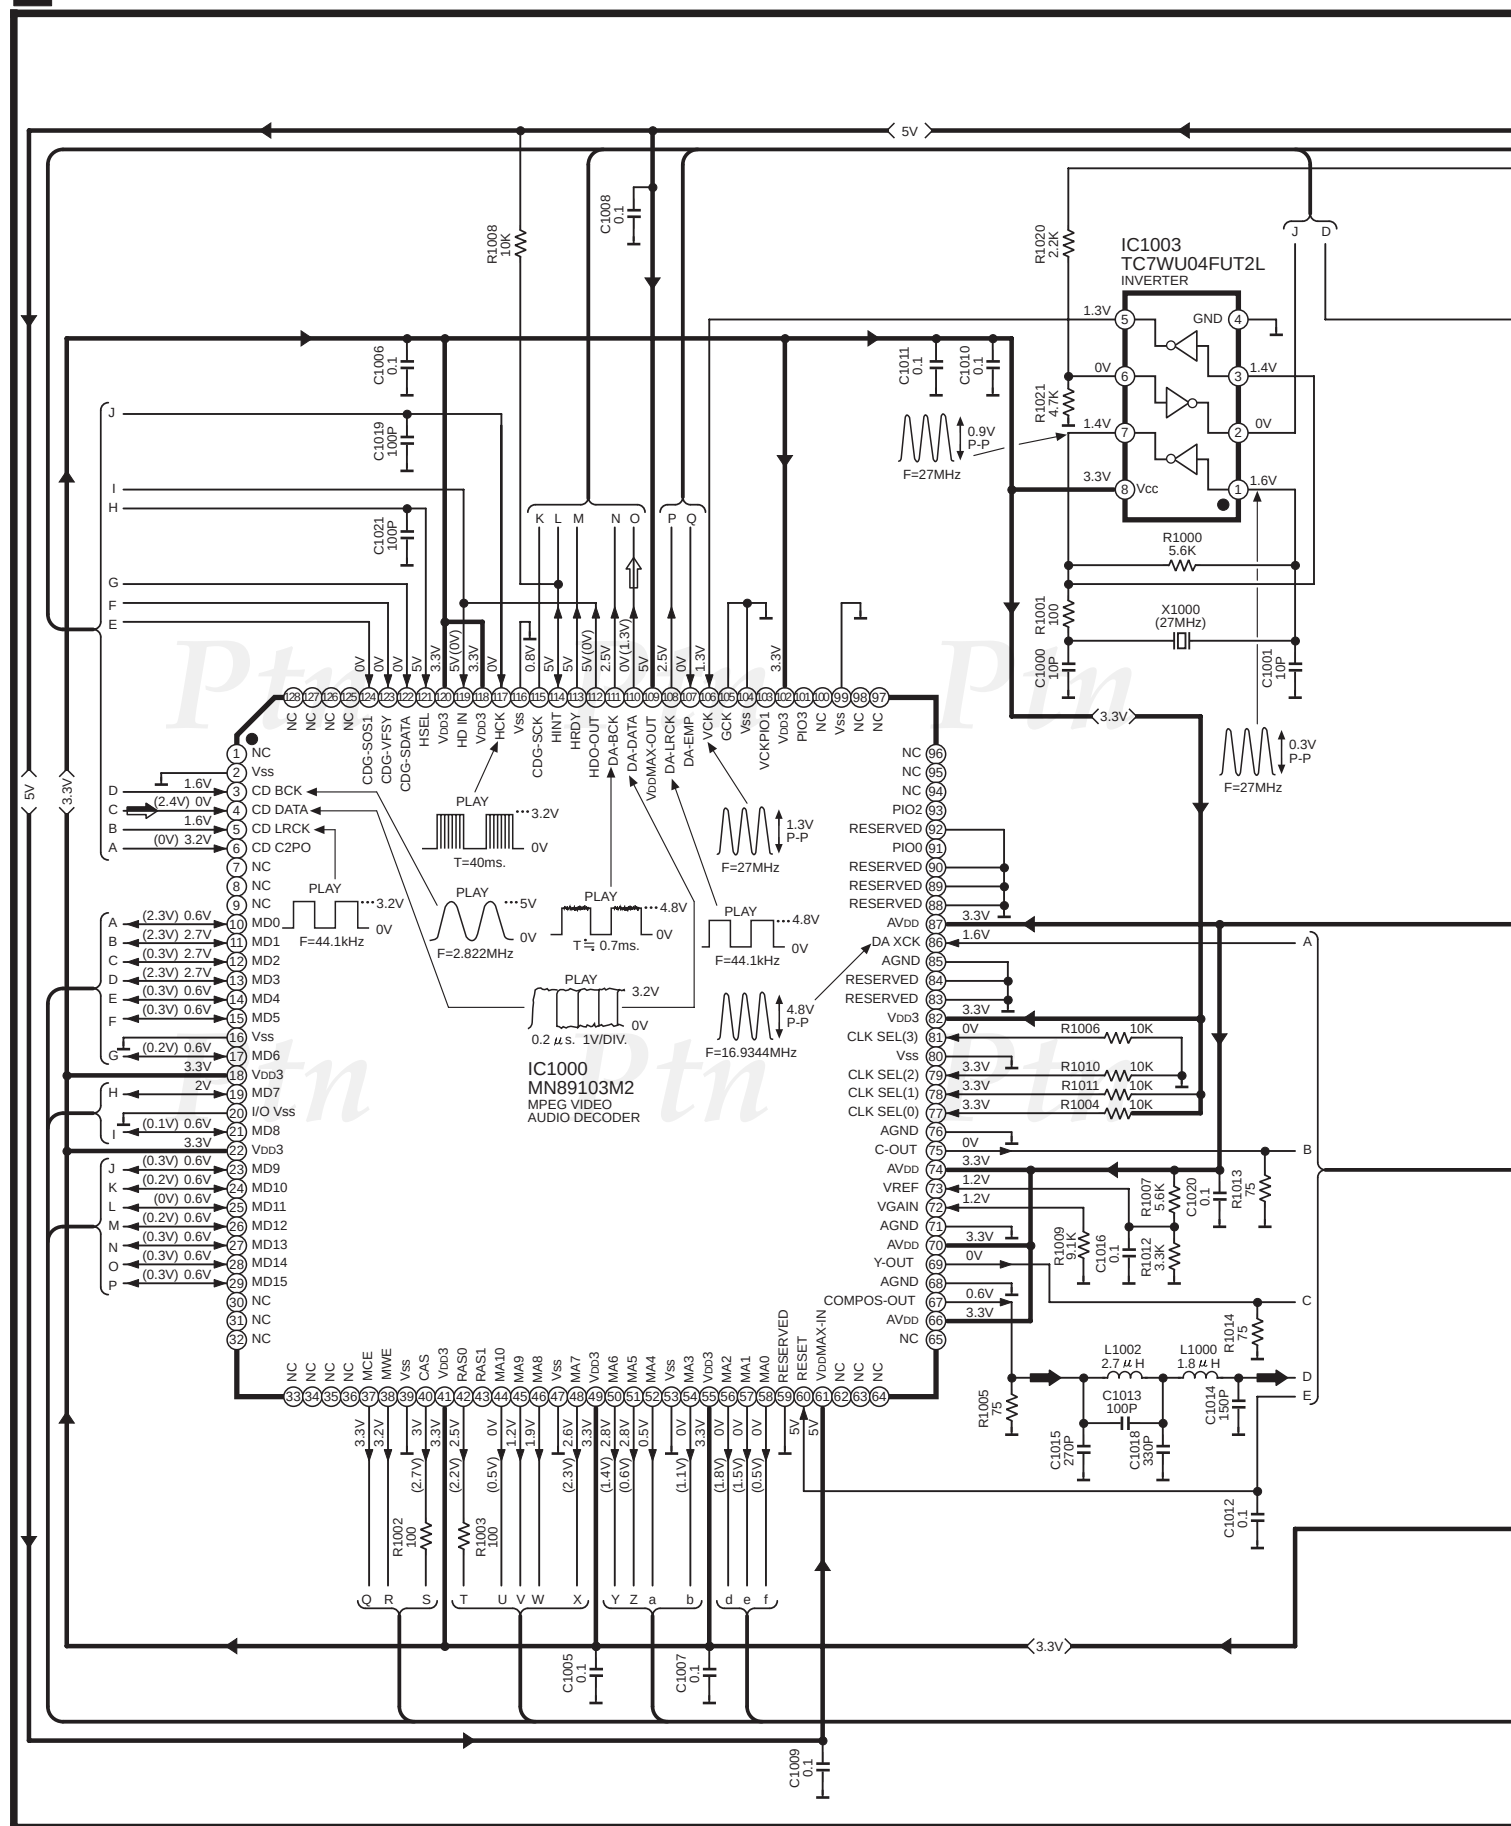



# SCHEMATIC DIAGRAM-9


→: POSITIVE VOLTAGE LINE    ⇨: CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE    ⇨: CD-DA/V-CD(AUDIO) SIGNAL LINE    ⇨: V-CD(VIDEO) SIGNAL LINE

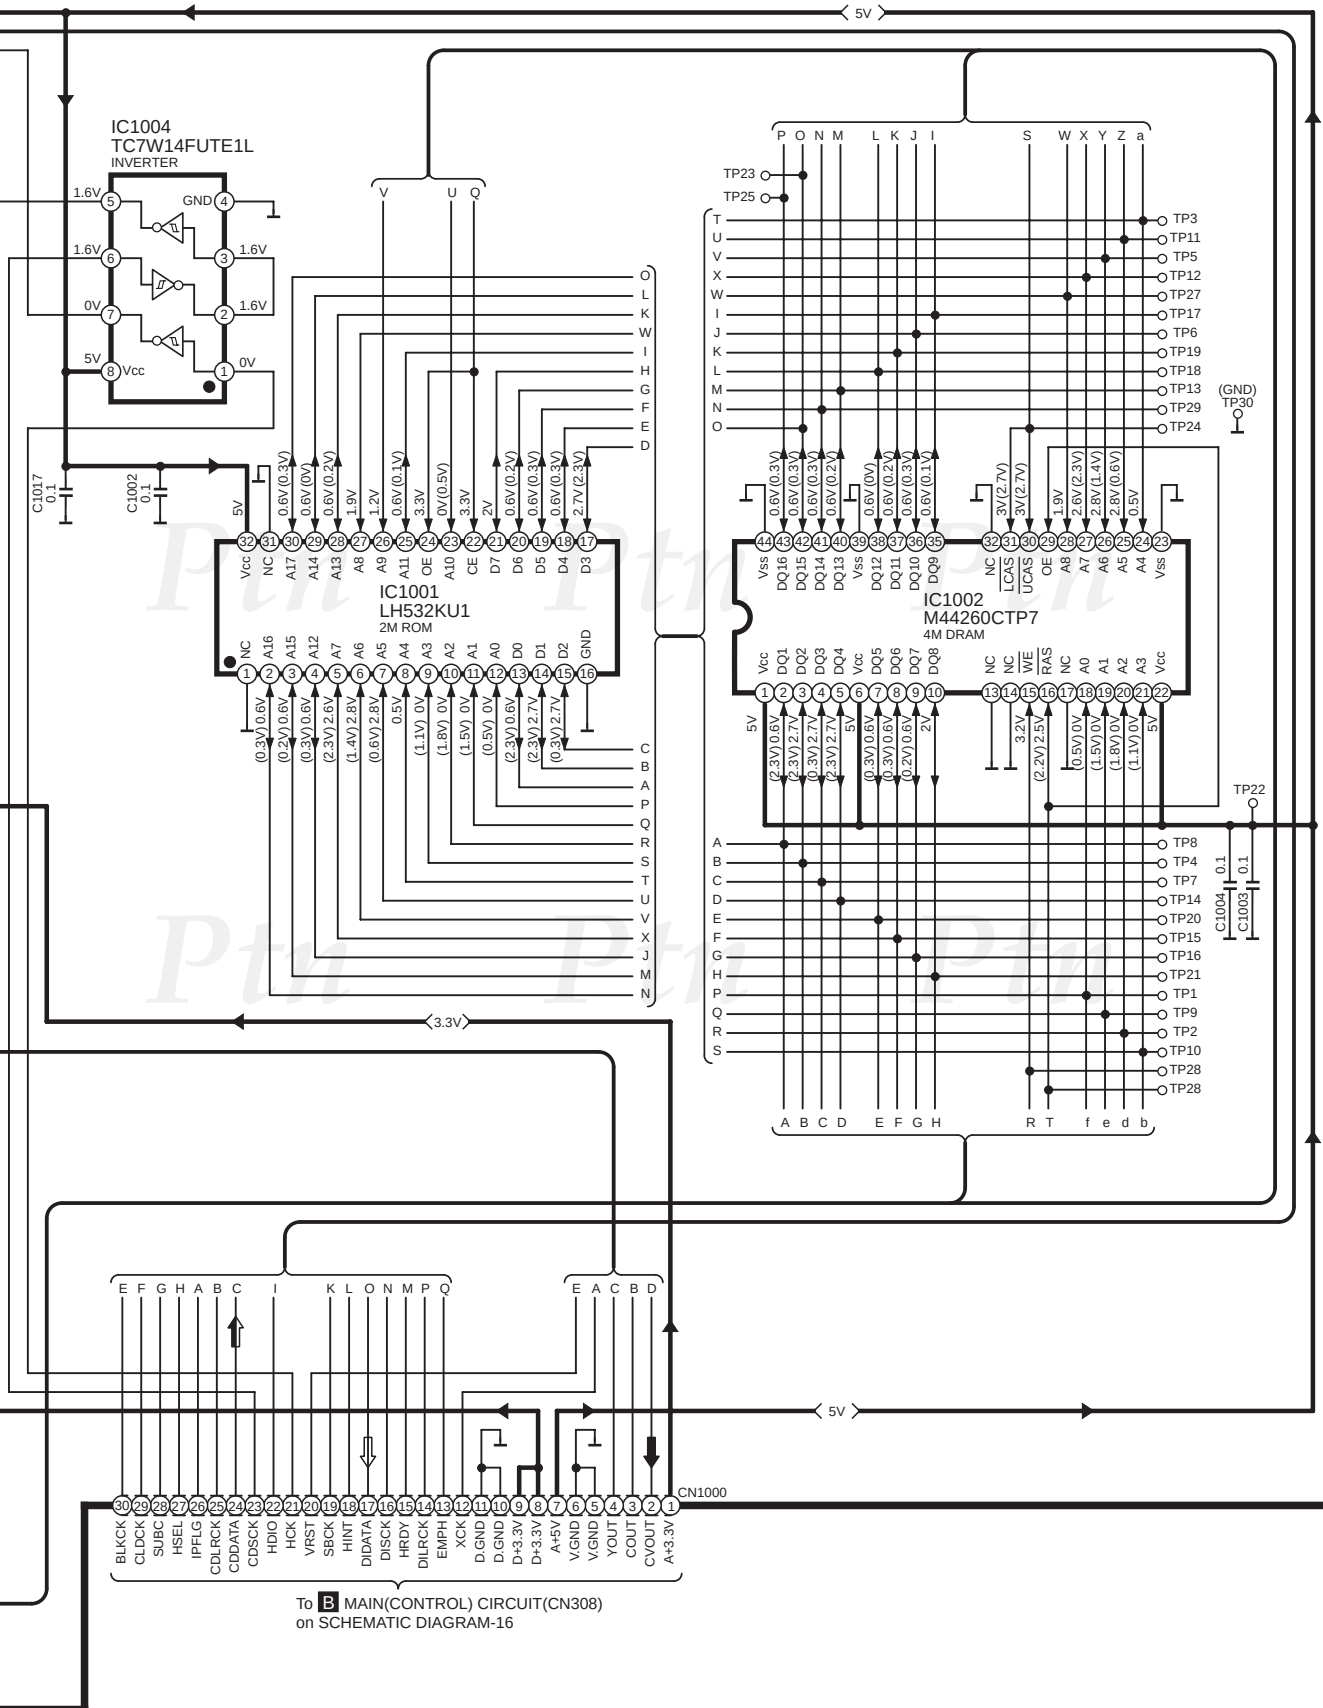


# SCHEMATIC DIAGRAM-10

## G OPERATION(1) CIRCUIT


⇒ : CD-DAV-CD(AUDIO) SIGNAL LINE    ⇨ : MIC SIGNAL LINE

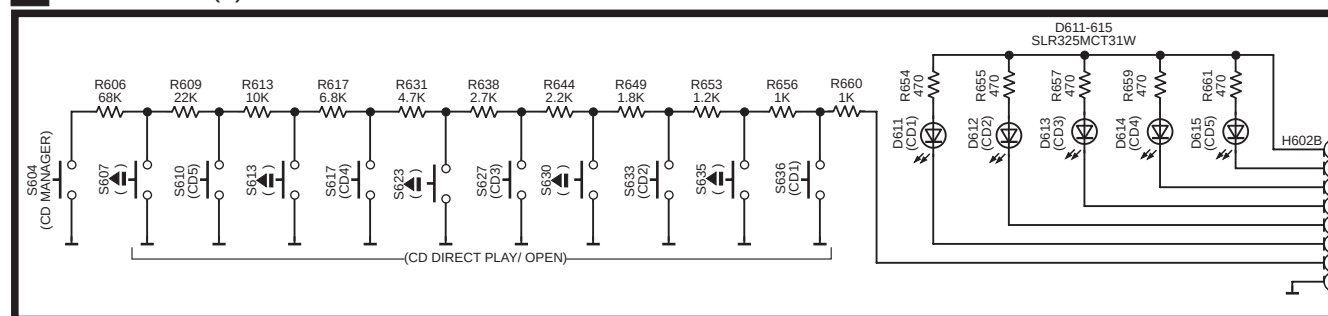


## H OPERATION(2) CIRCUIT

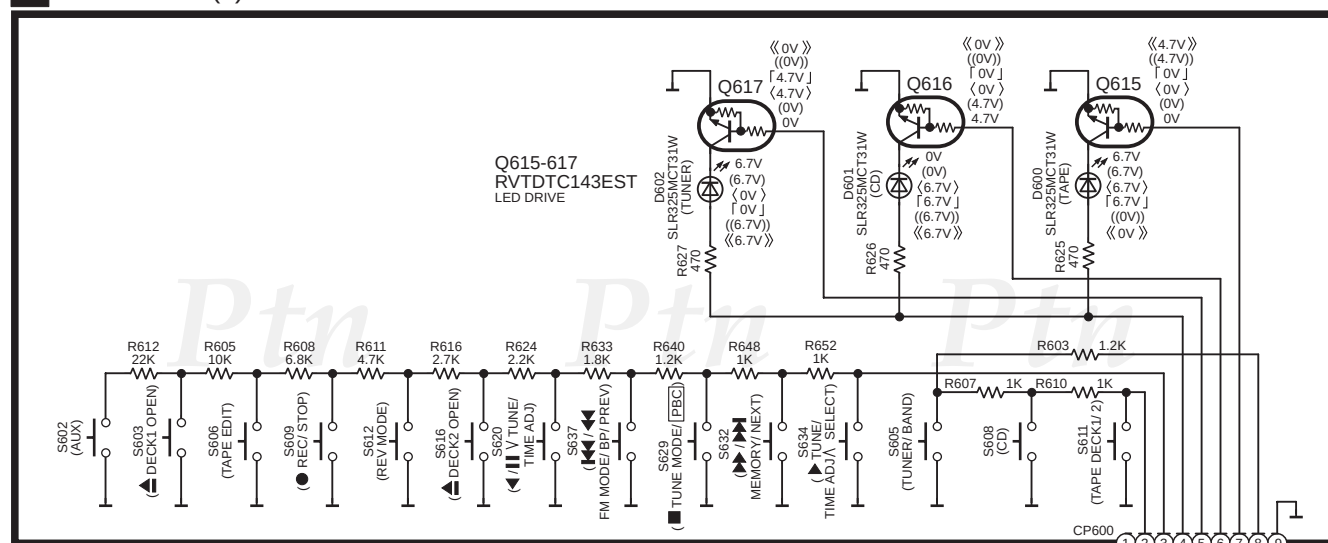

## I FL CIRCUIT

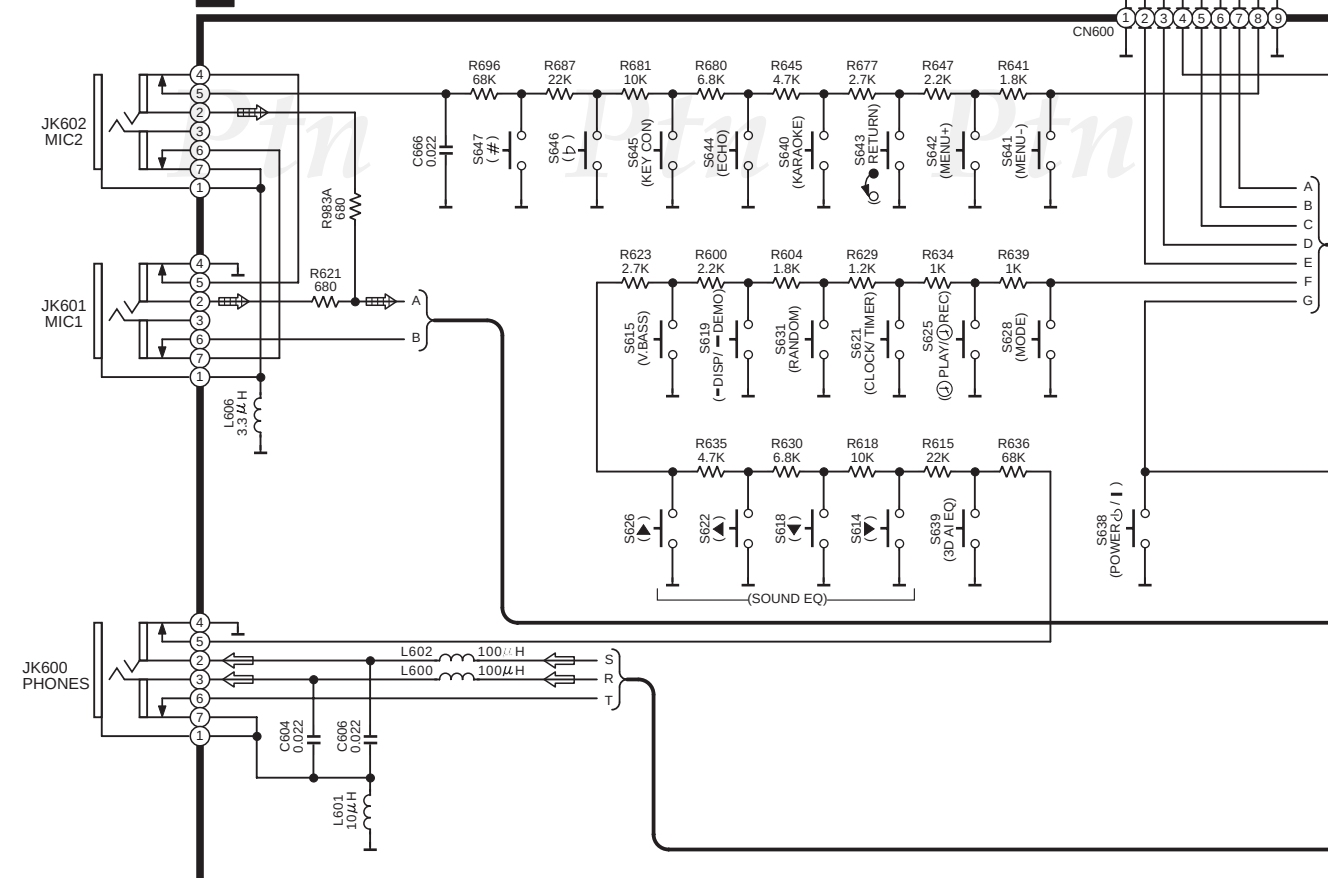


SCHEMATIC DIAGRAM-11

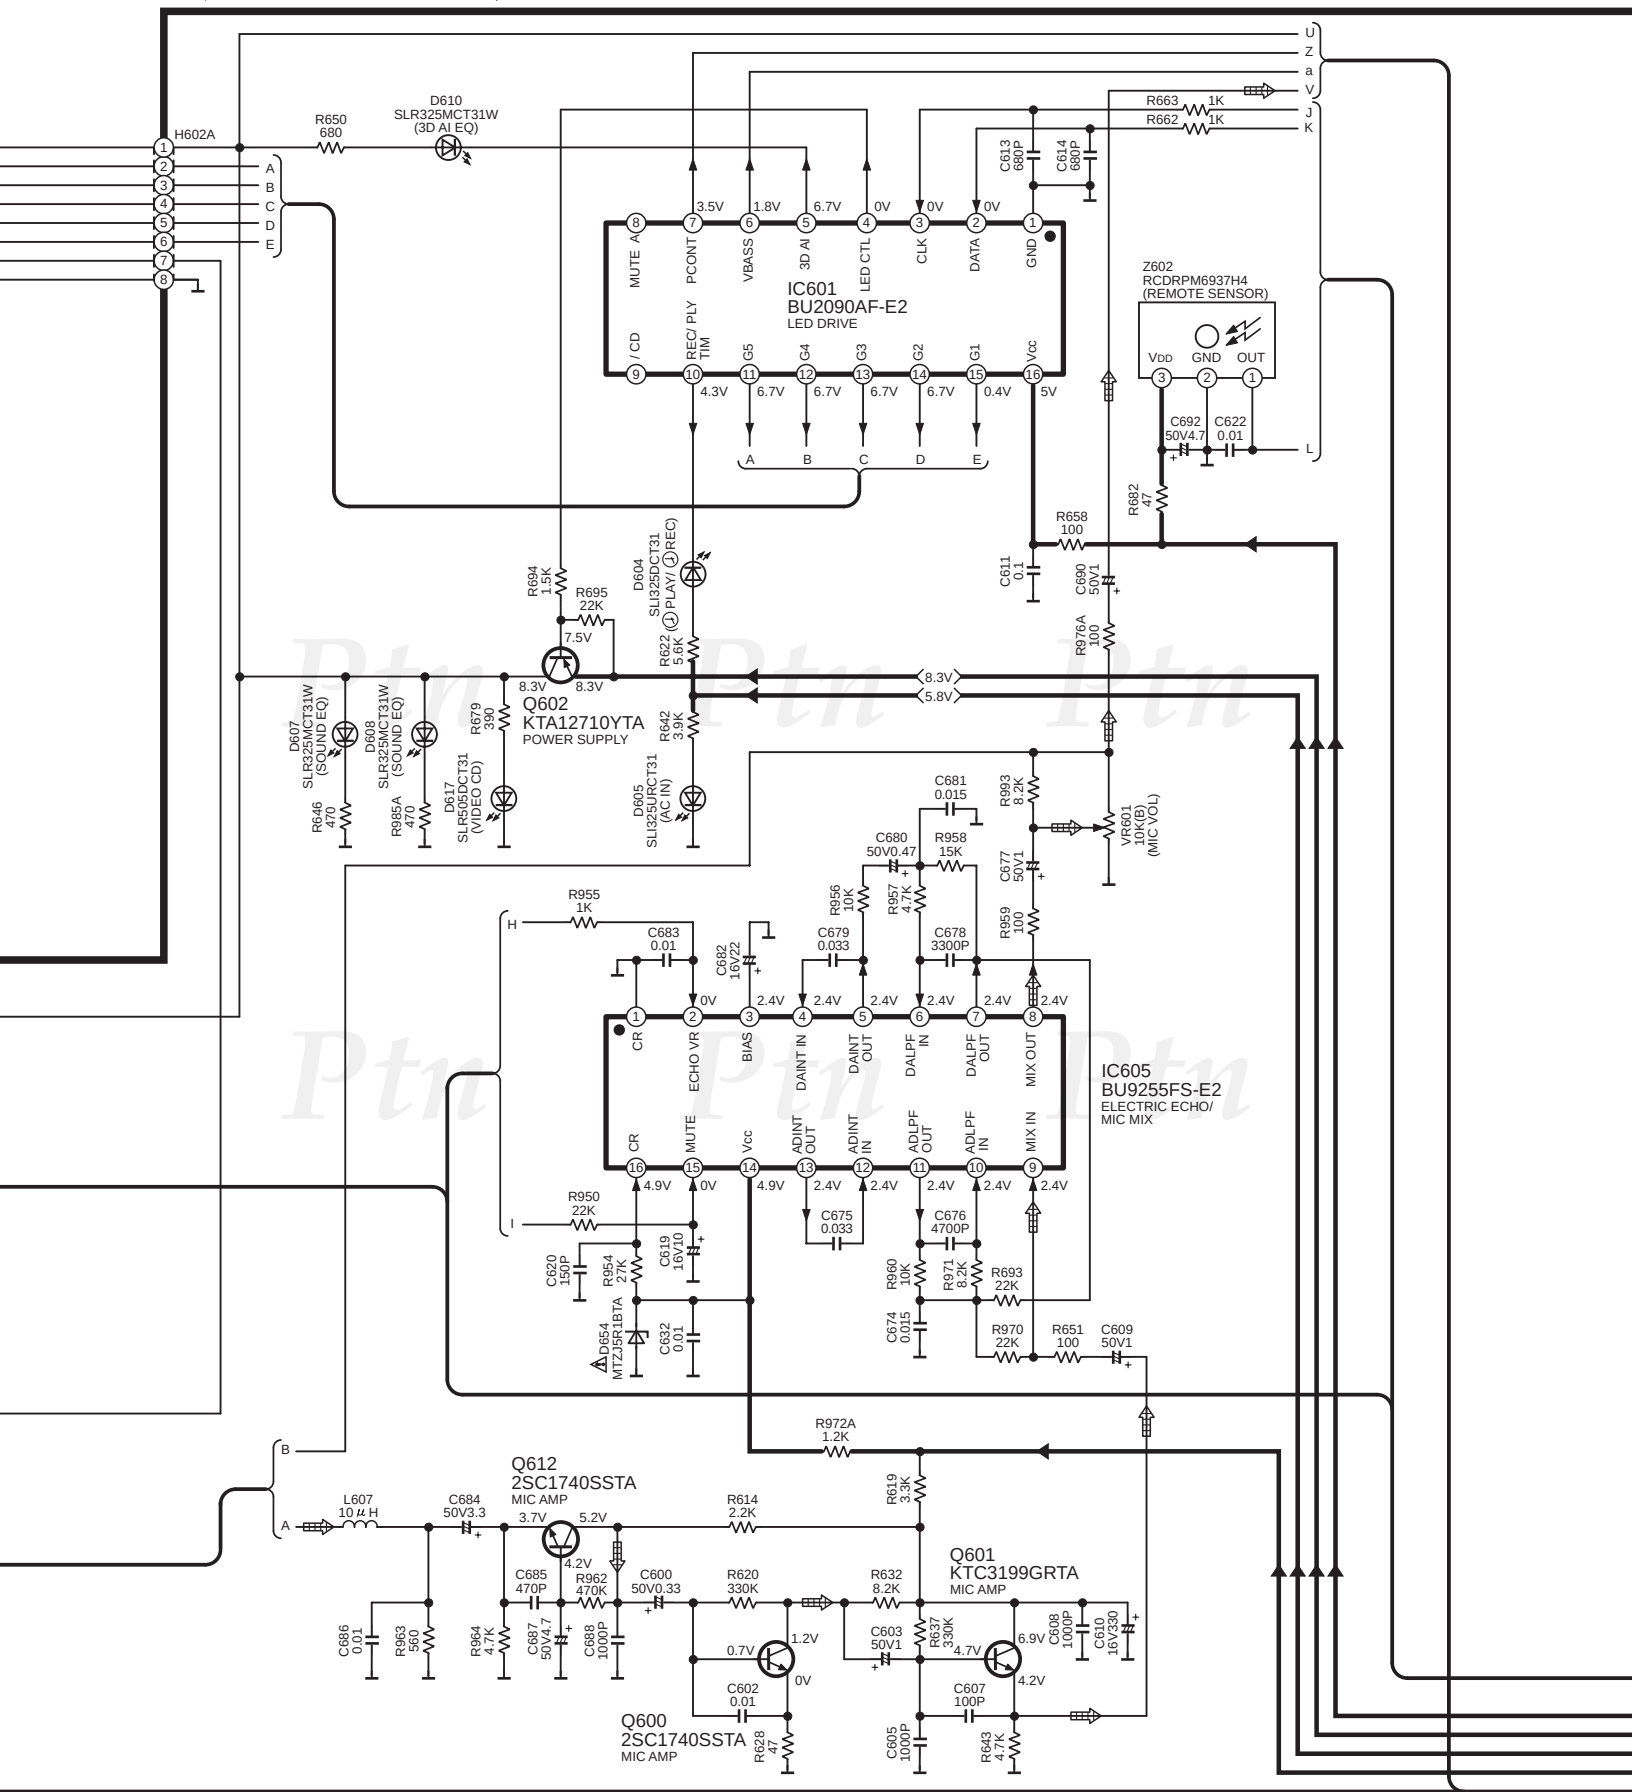


## I FL CIRCUIT

→ : POSITIVE VOLTAGE LINE    - → - : NEGATIVE VOLTAGE LINE

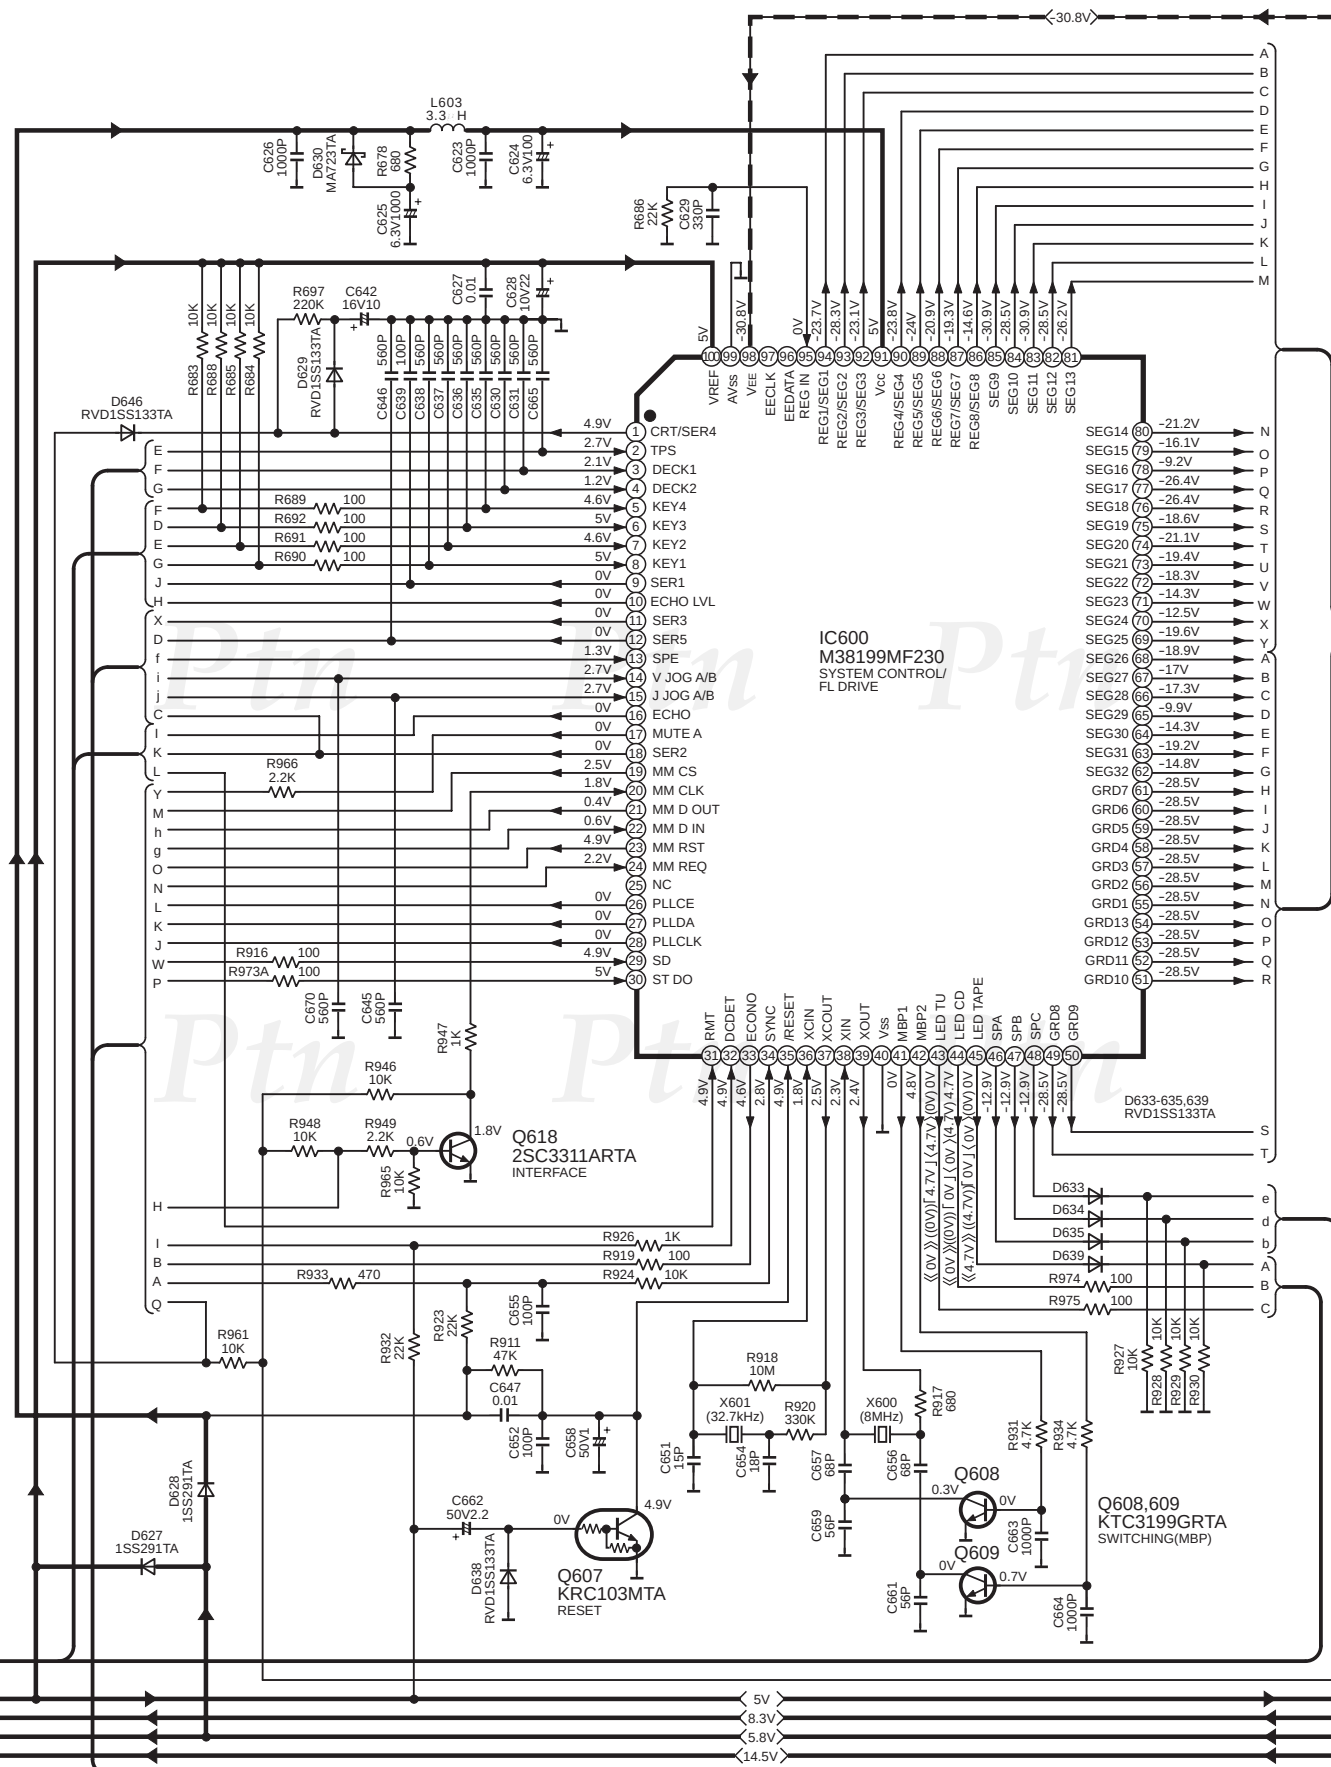

# SCHEMATIC DIAGRAM-13

—▶— : POSITIVE VOLTAGE LINE    ◀—▶ : CD-DAV-CD(AUDIO) SIGNAL LINE  
 - - -▶ : NEGATIVE VOLTAGE LINE    ◀—▶ : MIC SIGNAL LINE

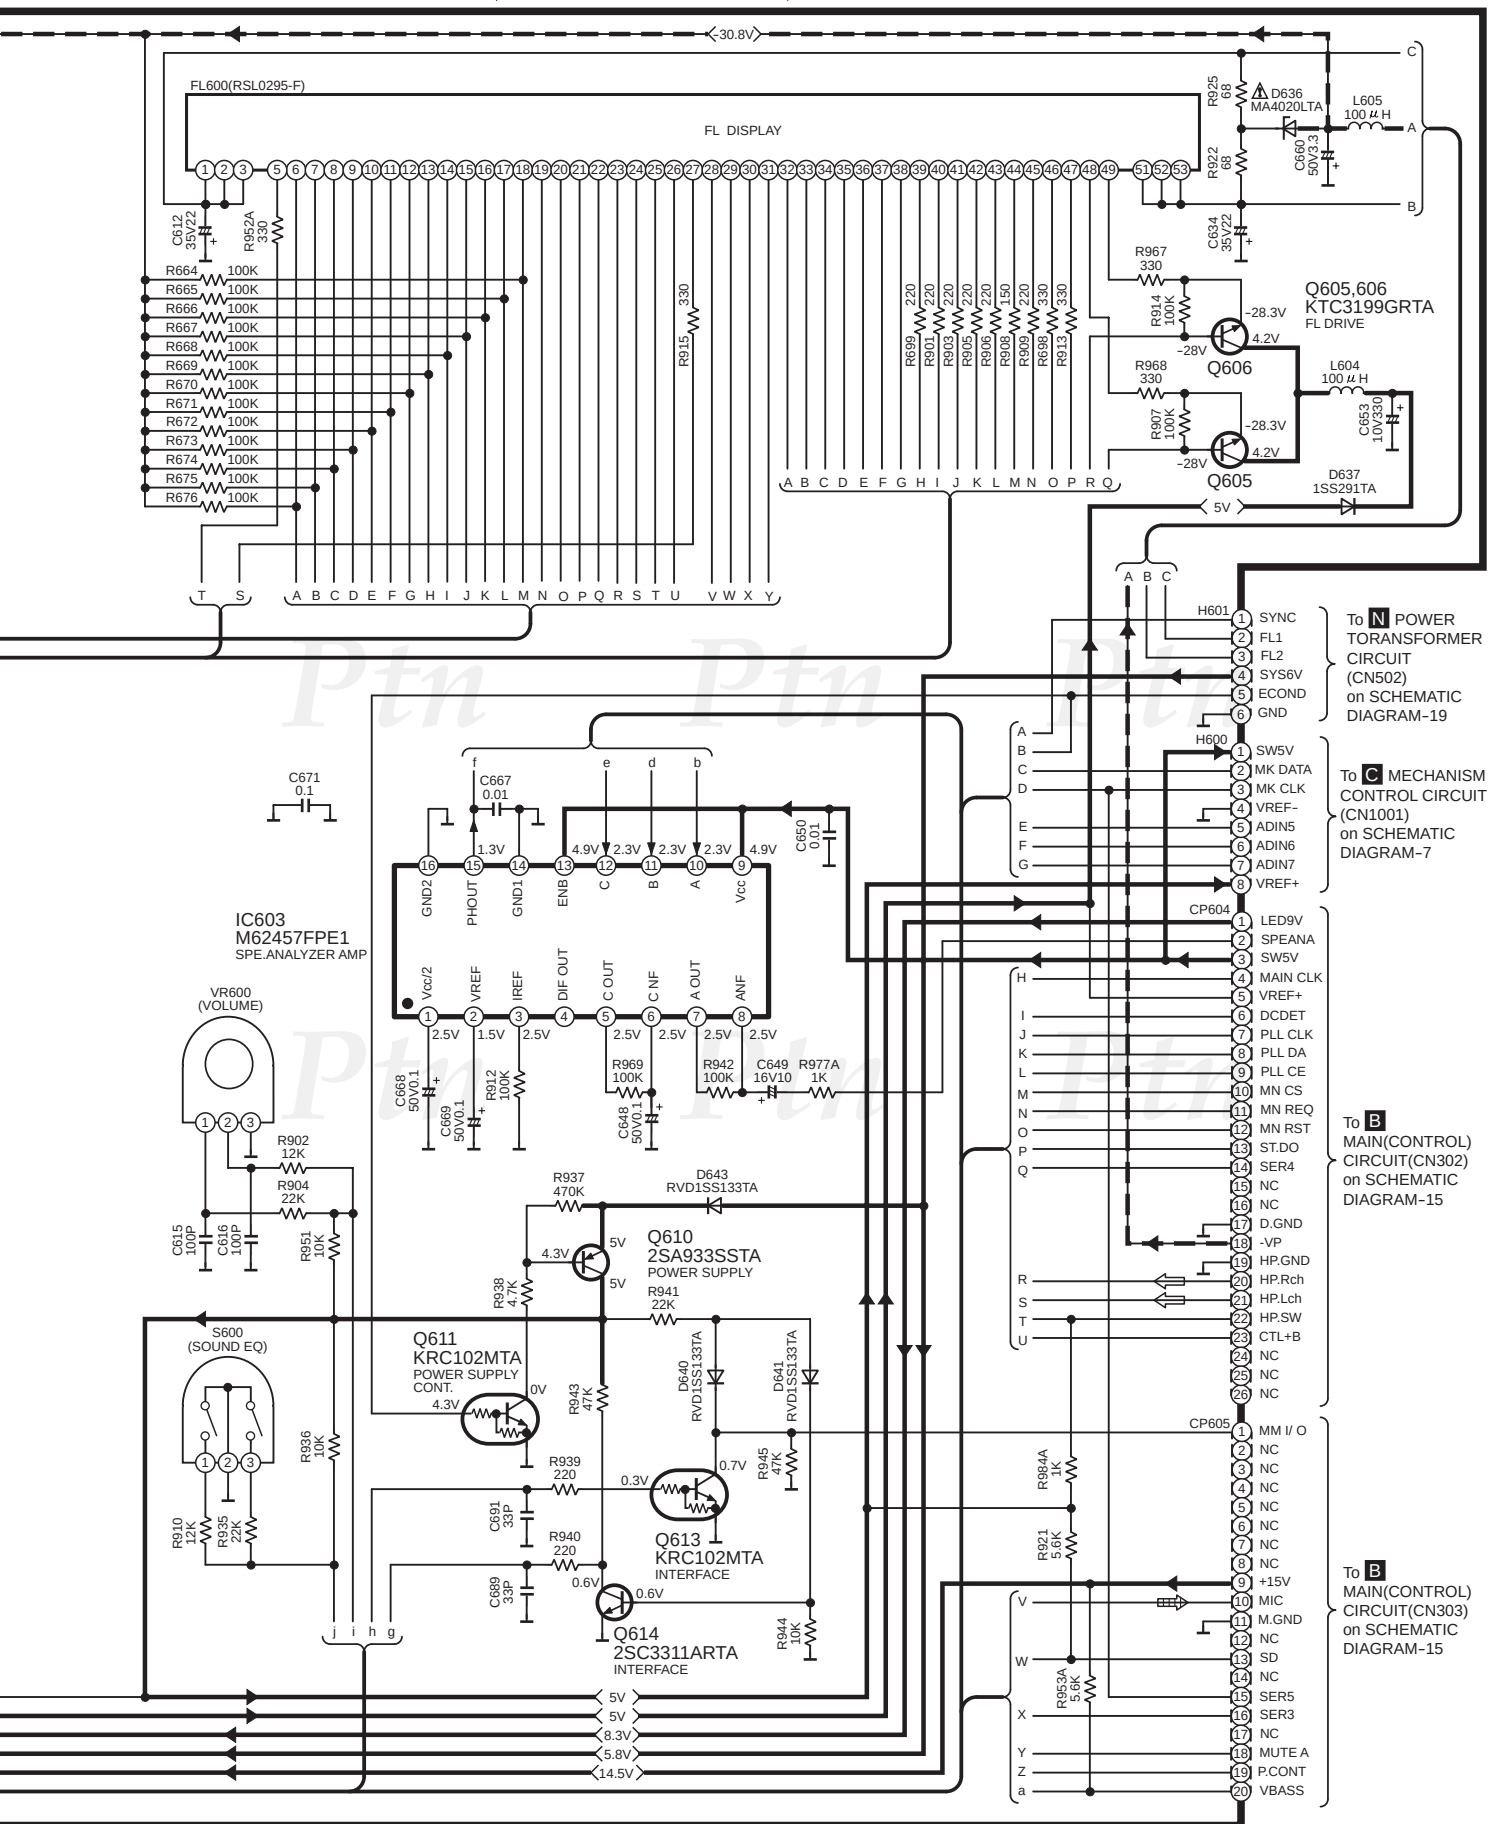


## SCHEMATIC DIAGRAM-14




**B** MAIN(CONTROL) CIRCUIT

——— : POSITIVE VOLTAGE LINE  
 - - - : NEGATIVE VOLTAGE LINE  
 □ : CD-DA/V-CD(AUDIO) SIGNAL LINE  
 □ : FM SIGNAL LINE  
 □ : TAPE PLAYBACK SIGNAL LINE  
 ■ : AM SIGNAL LINE  
 □ : TAPE RECORDING SIGNAL LINE

To **B** MAIN  
(TUNER)  
CIRCUIT (A) on  
SCHEMATIC  
DIAGRAM-4

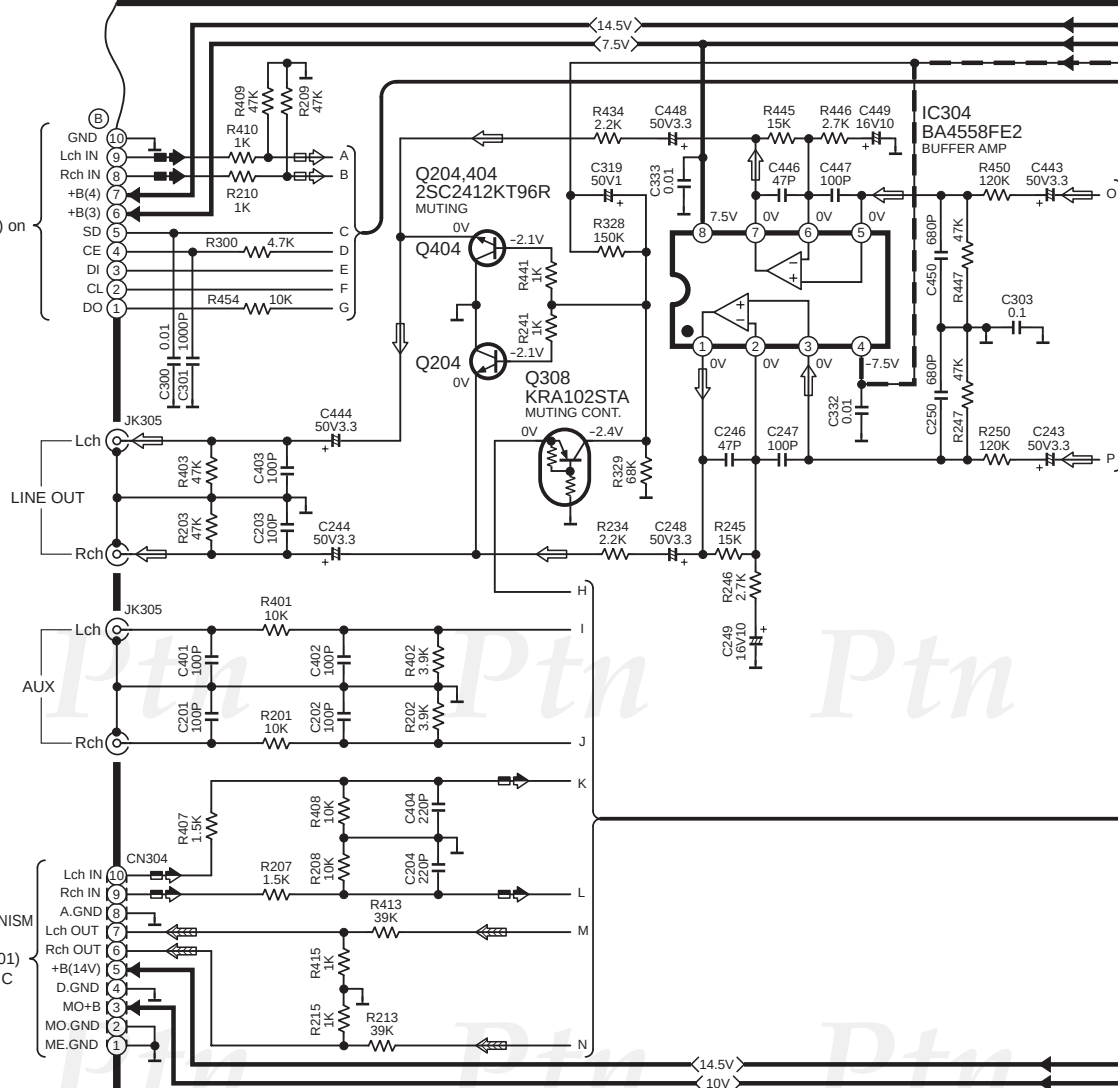

To **C** MECHANISM  
CONTROL  
CIRCUIT(H1001)  
on SCHEMATIC  
DIAGRAM-7

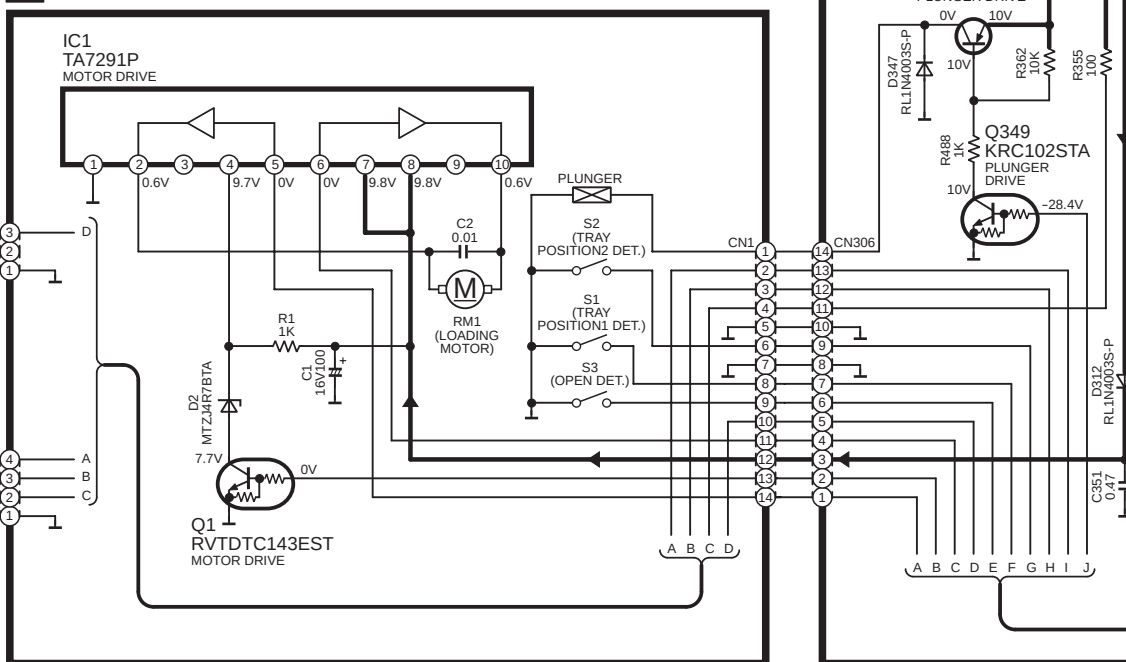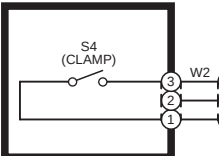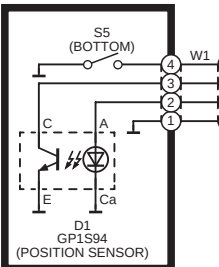**J** LOADING MOTOR CIRCUIT**K** CLAMP SW CIRCUIT**L** BOTTOM SW CIRCUIT


## SCHEMATIC DIAGRAM-15

 :CD-DAV-CD(AUDIO) SIGNAL LINE  
 :FM SIGNAL LINE  
 :AM SIGNAL LINE  
 :TAPE PLAYBACK SIGNAL LINE  
 :TAPE RECORDING SIGNAL LINE  
 :MIC SIGNAL LINE

 : POSITIVE VOLTAGE LINE    
  : NEGATIVE VOLTAGE LINE

To **I** FL CIRCUIT(CP604) on SCHEMATIC DIAGRAM-13

To **I** FL CIRCUIT(CP605) on SCHEMATIC DIAGRAM-13

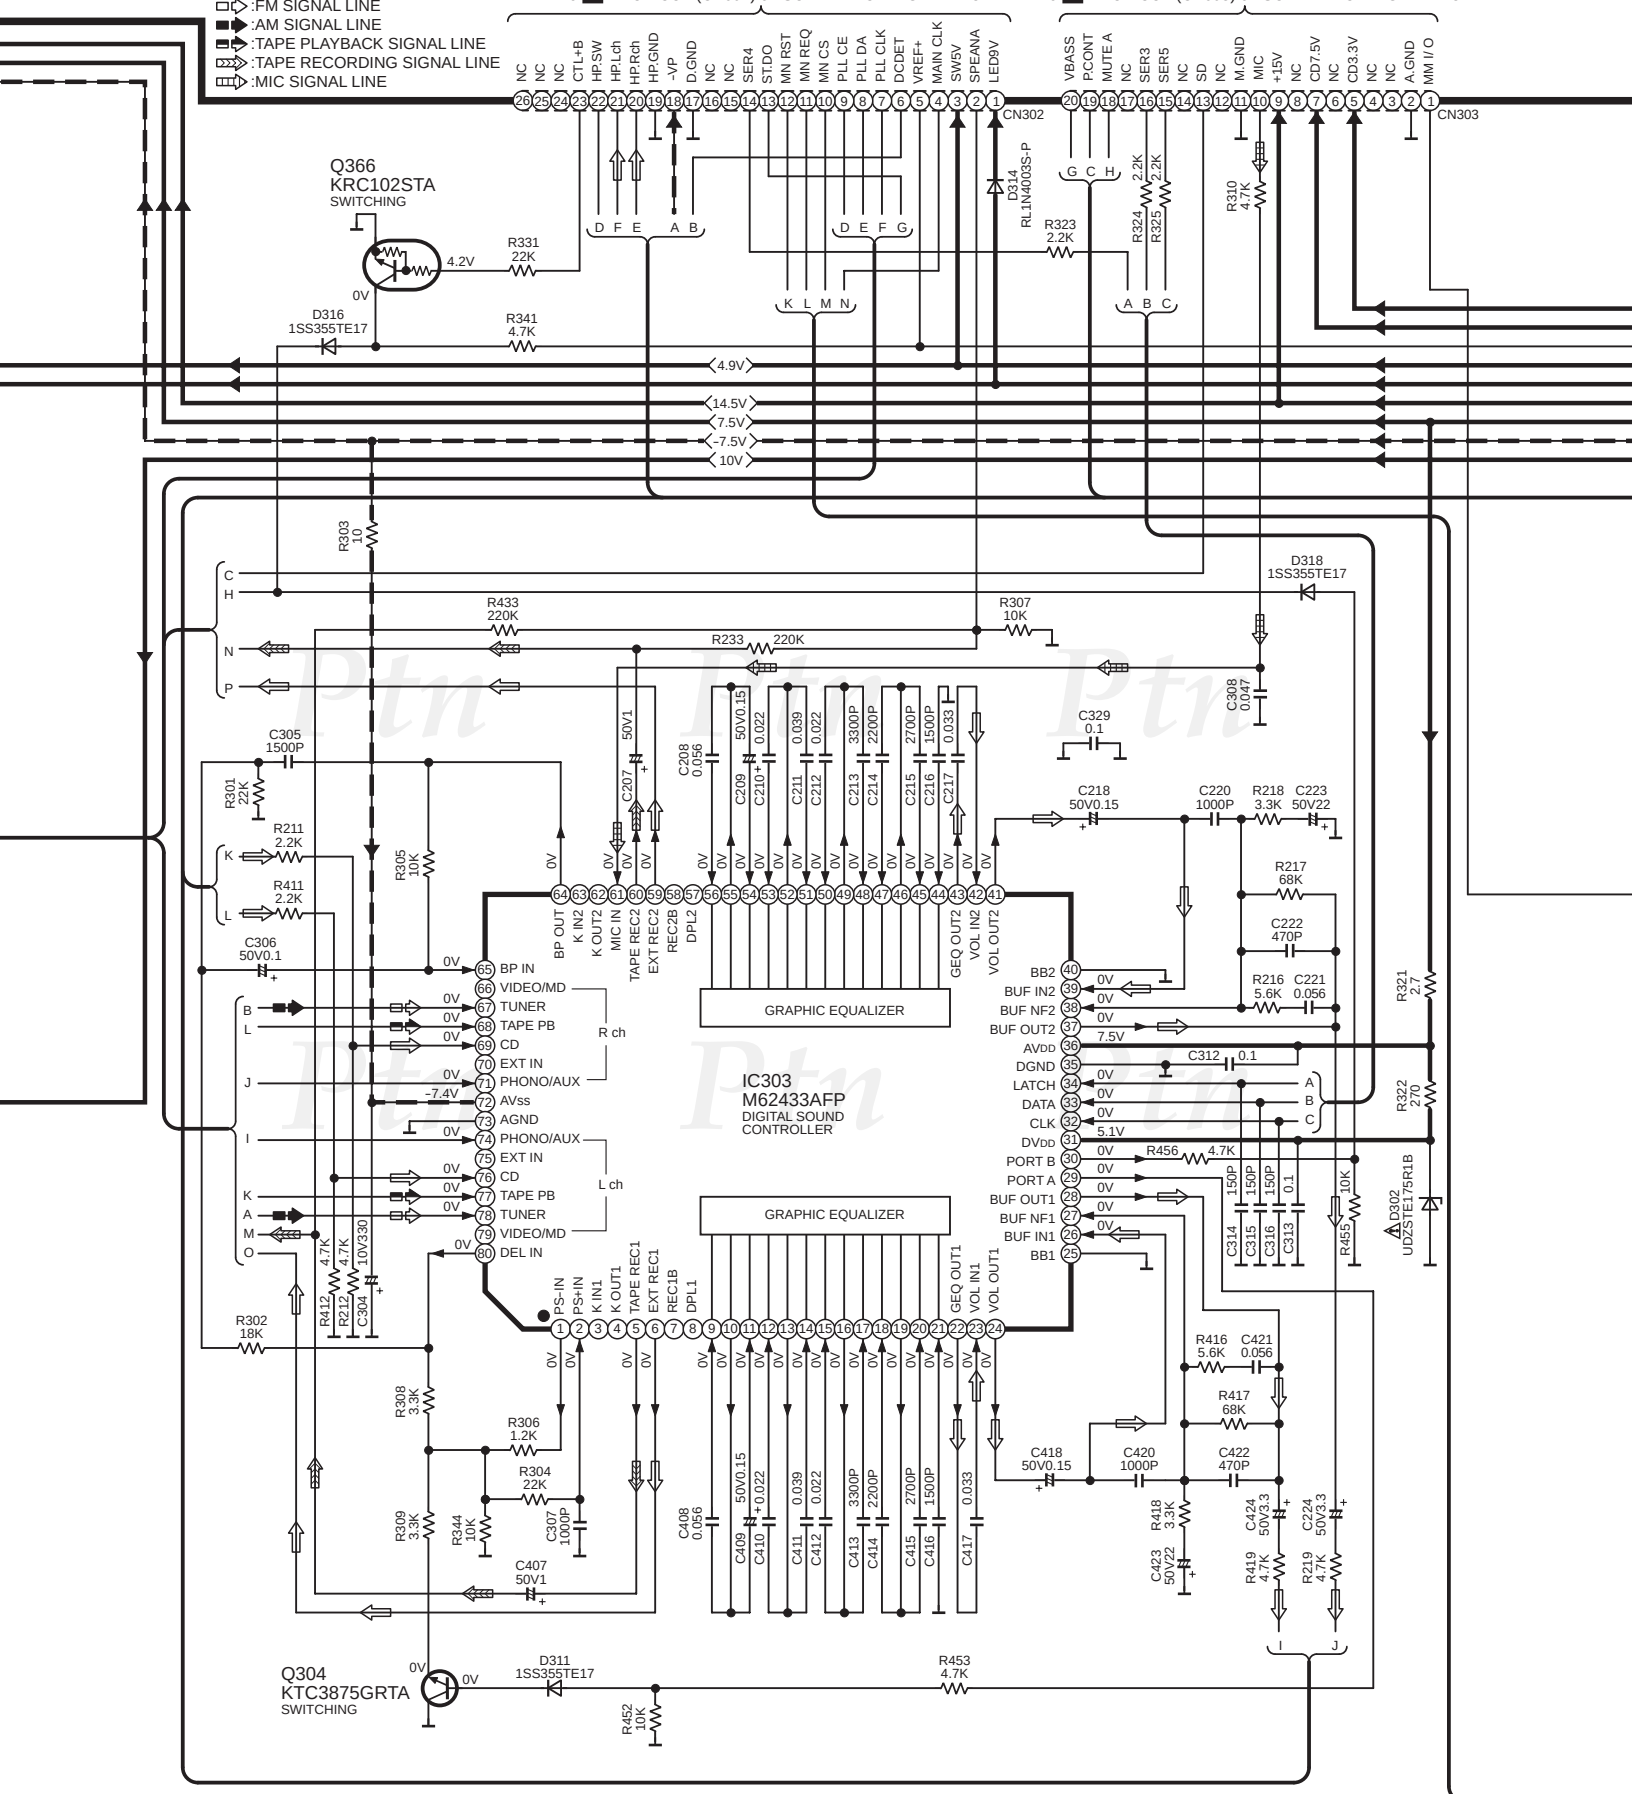



SCHEMATIC DIAGRAM-16


To **F** VIDEO CIRCUIT(CN1000)  
on SCHEMATIC DIAGRAM-8

- : POSITIVE VOLTAGE LINE
- : NEGATIVE VOLTAGE LINE

**B** MAIN(CONTROL

### 4. CIRCUIT


## B MAIN(CONTROL) CIRCUIT

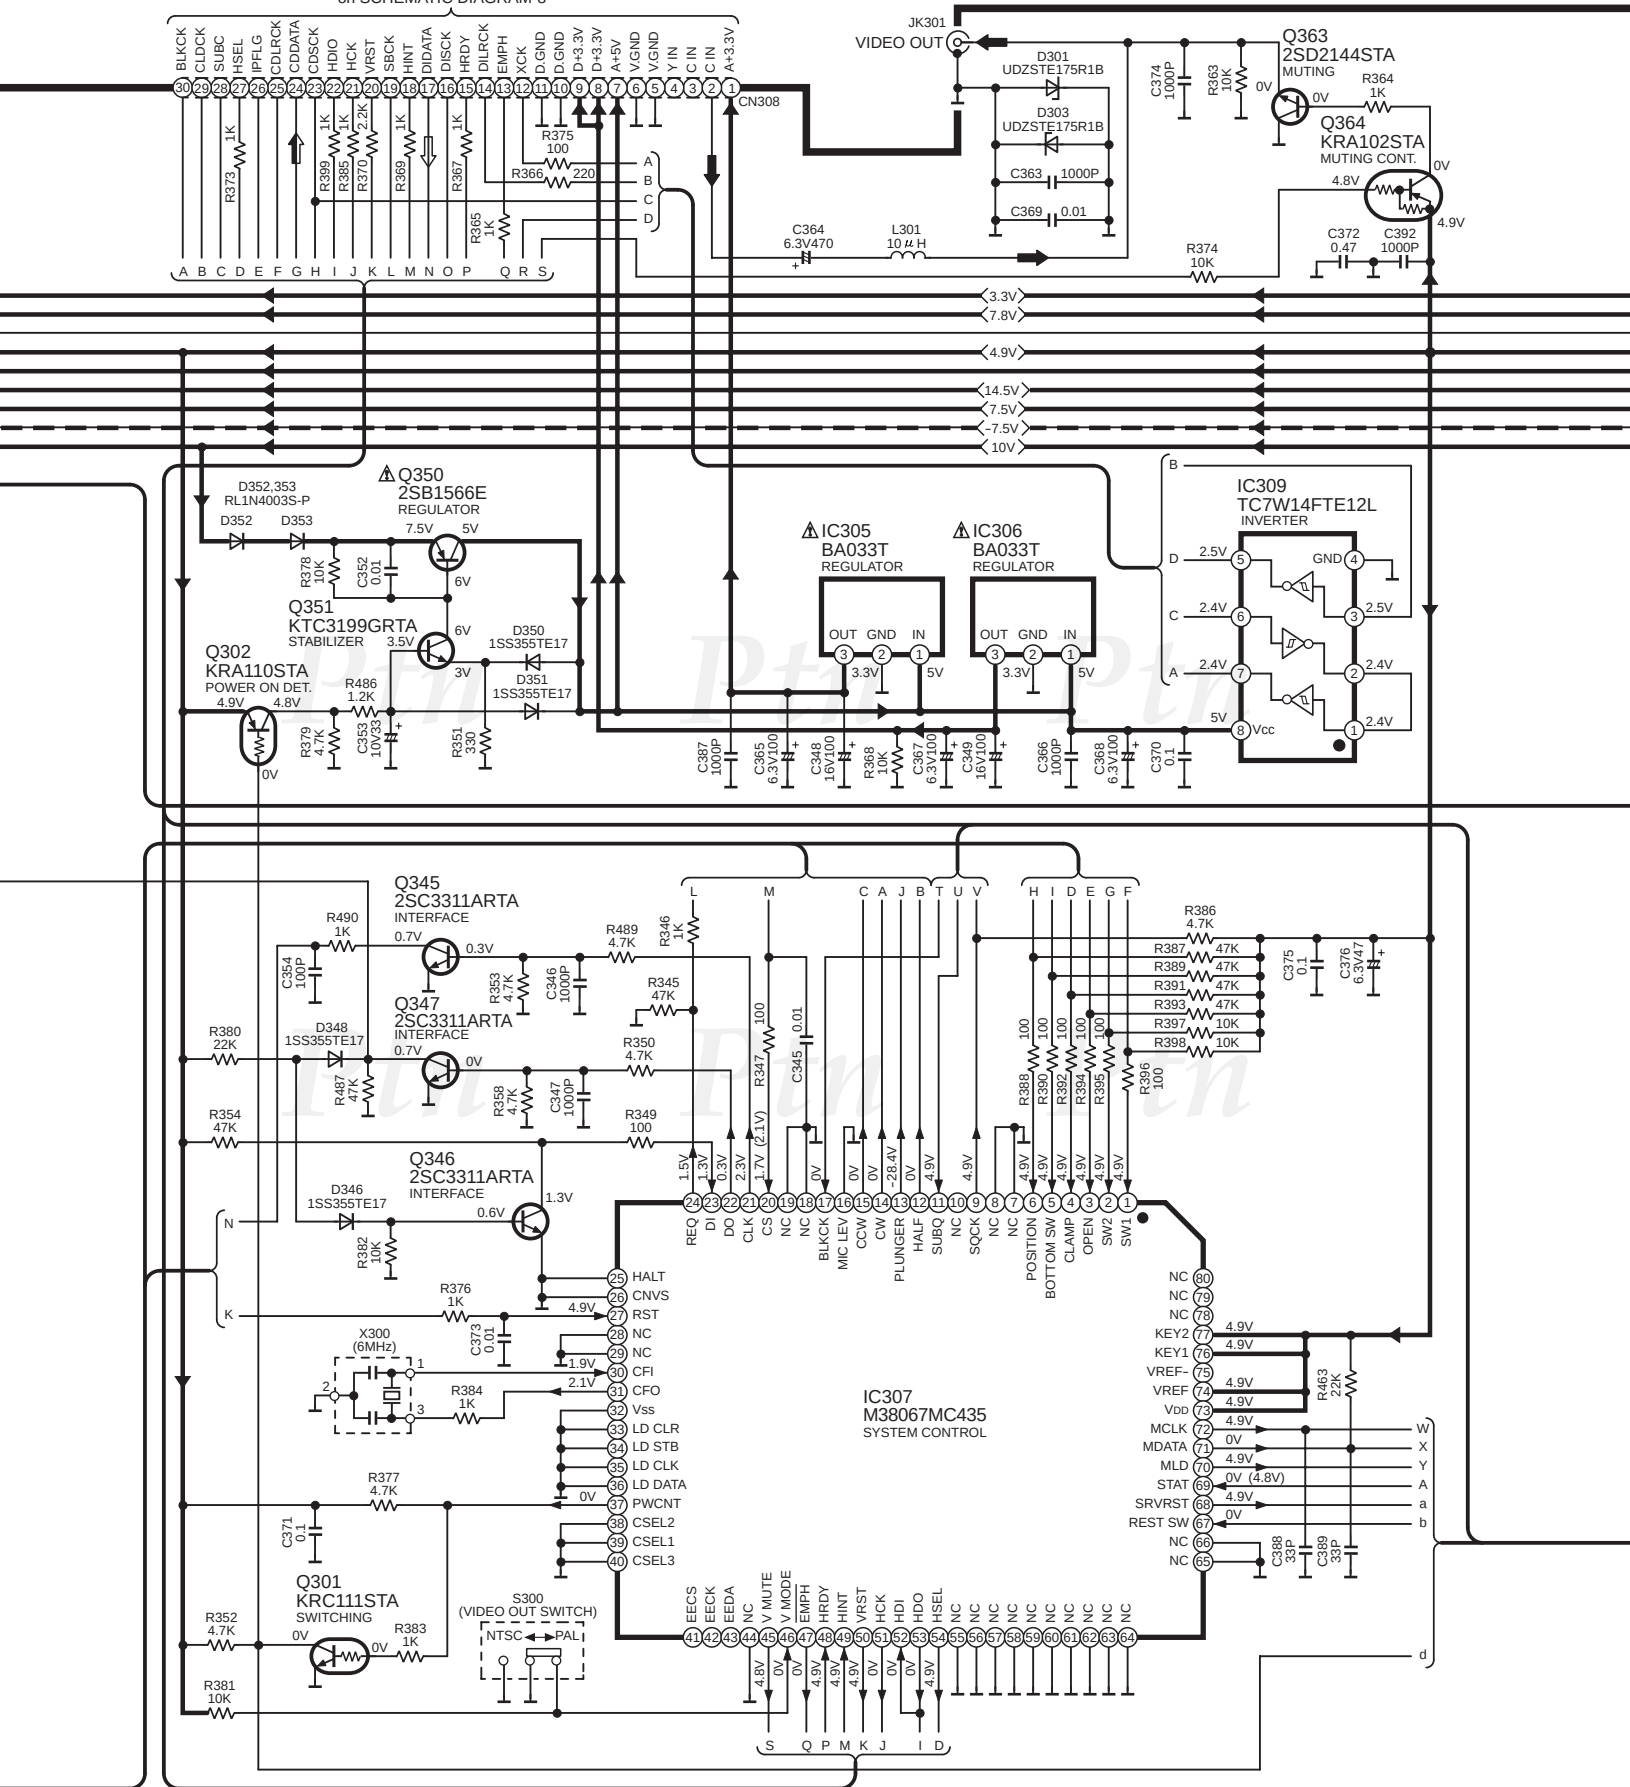



## SCHEMATIC DIAGRAM-17


 : POSITIVE VOLTAGE LINE       : CD-DA/V-CD(AUDIO & VIDEO) SIGNAL LINE  
 : NEGATIVE VOLTAGE LINE       : CD-DA/V-CD(AUDIO) SIGNAL LINE

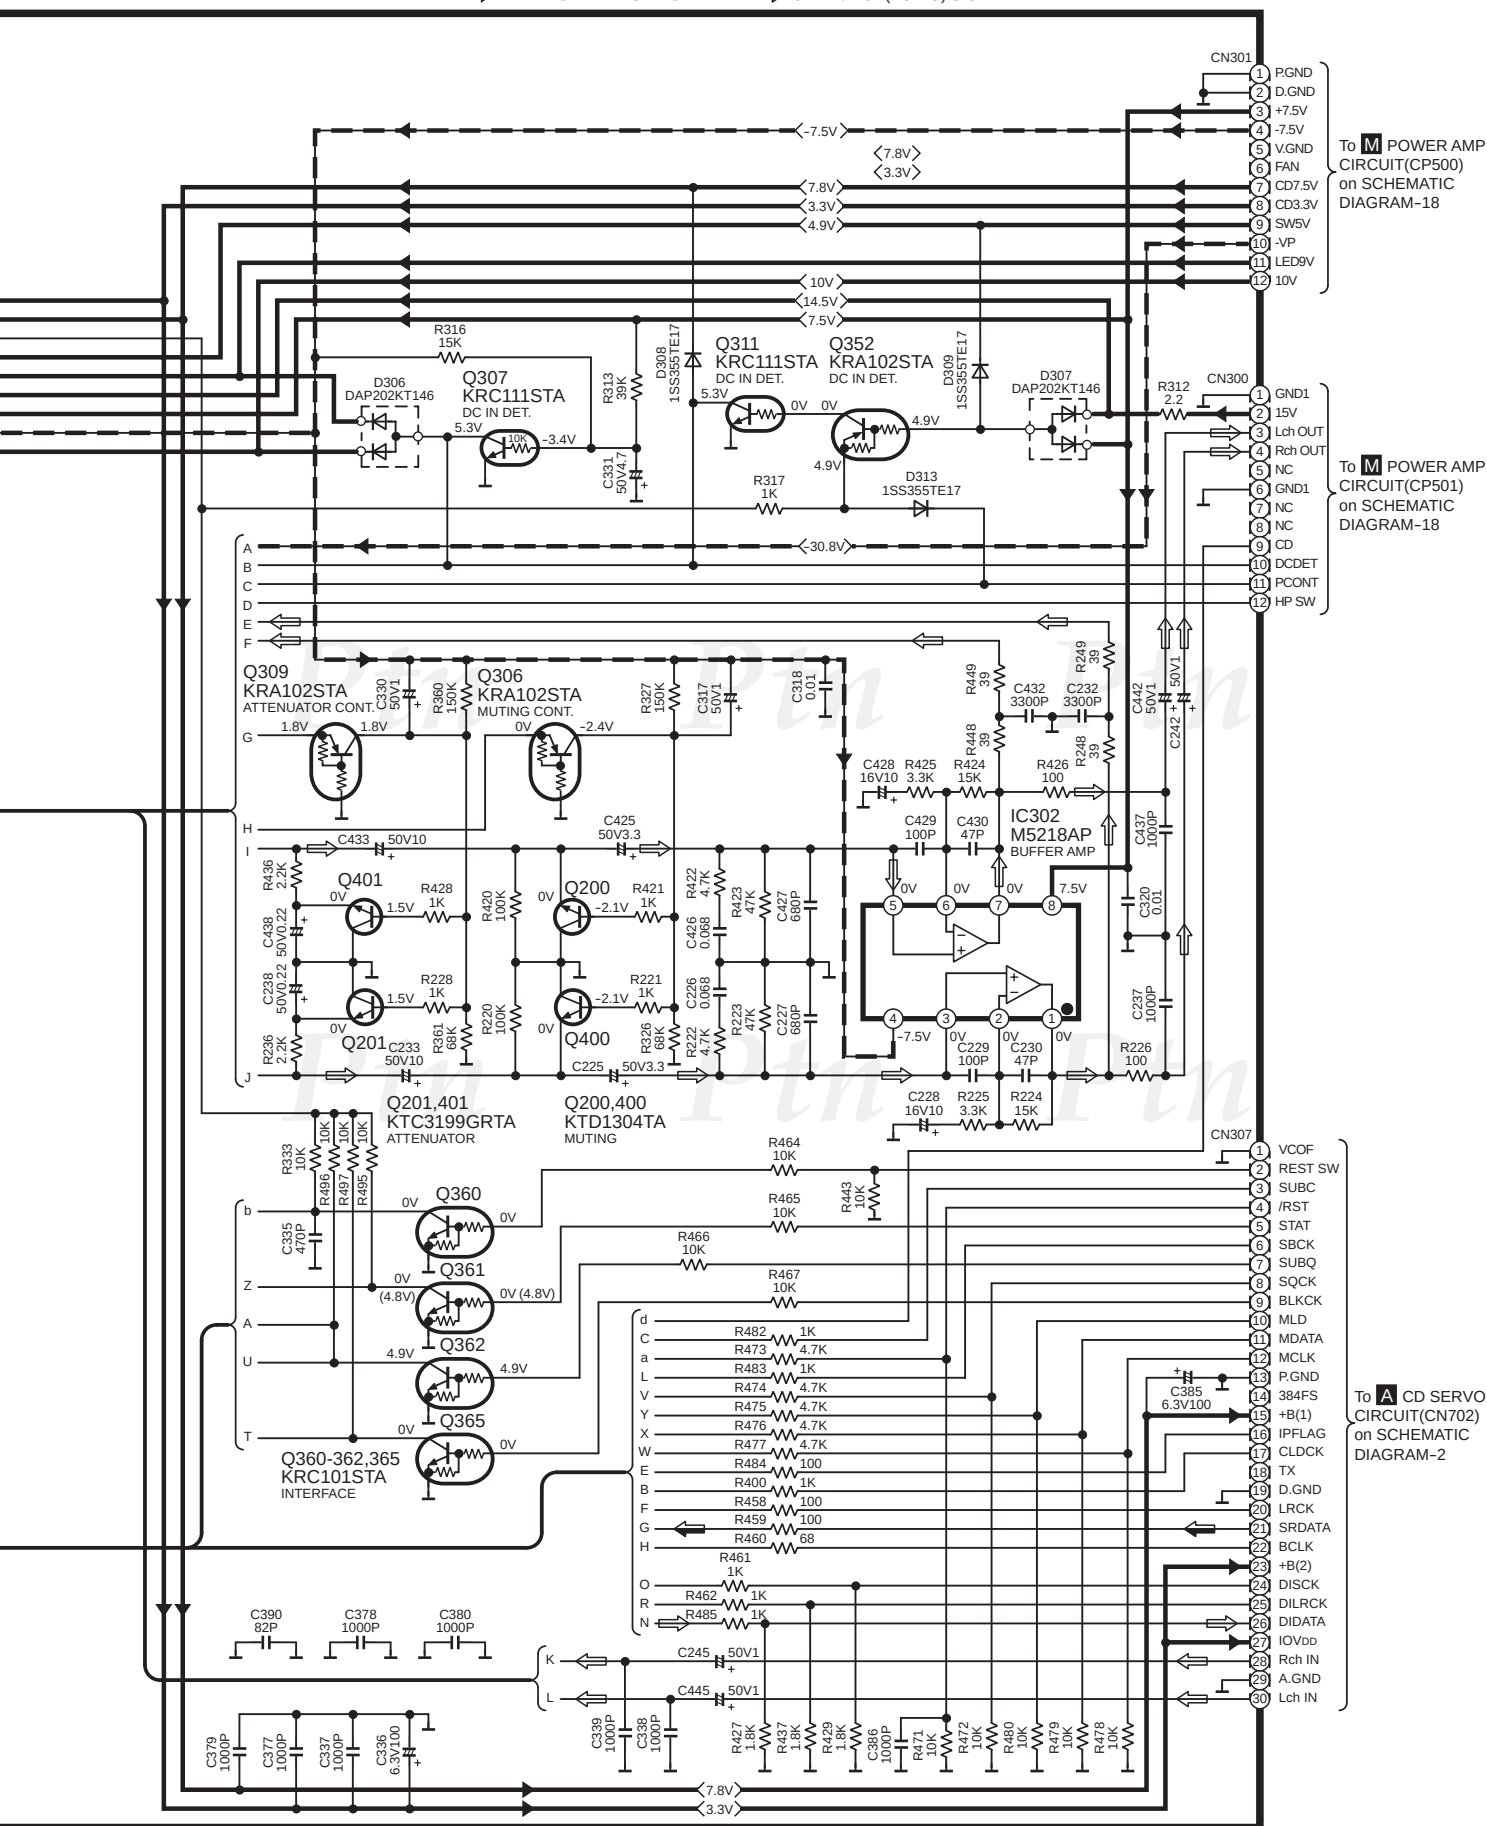


### M POWER AMP CIRCUIT


— ➔ — :NEGATIVE VOLTAGE LINE

To **B** MAIN  
(CONTROL)  
CIRCUIT(CN301)  
on SCHEMATIC  
DIAGRAM-17

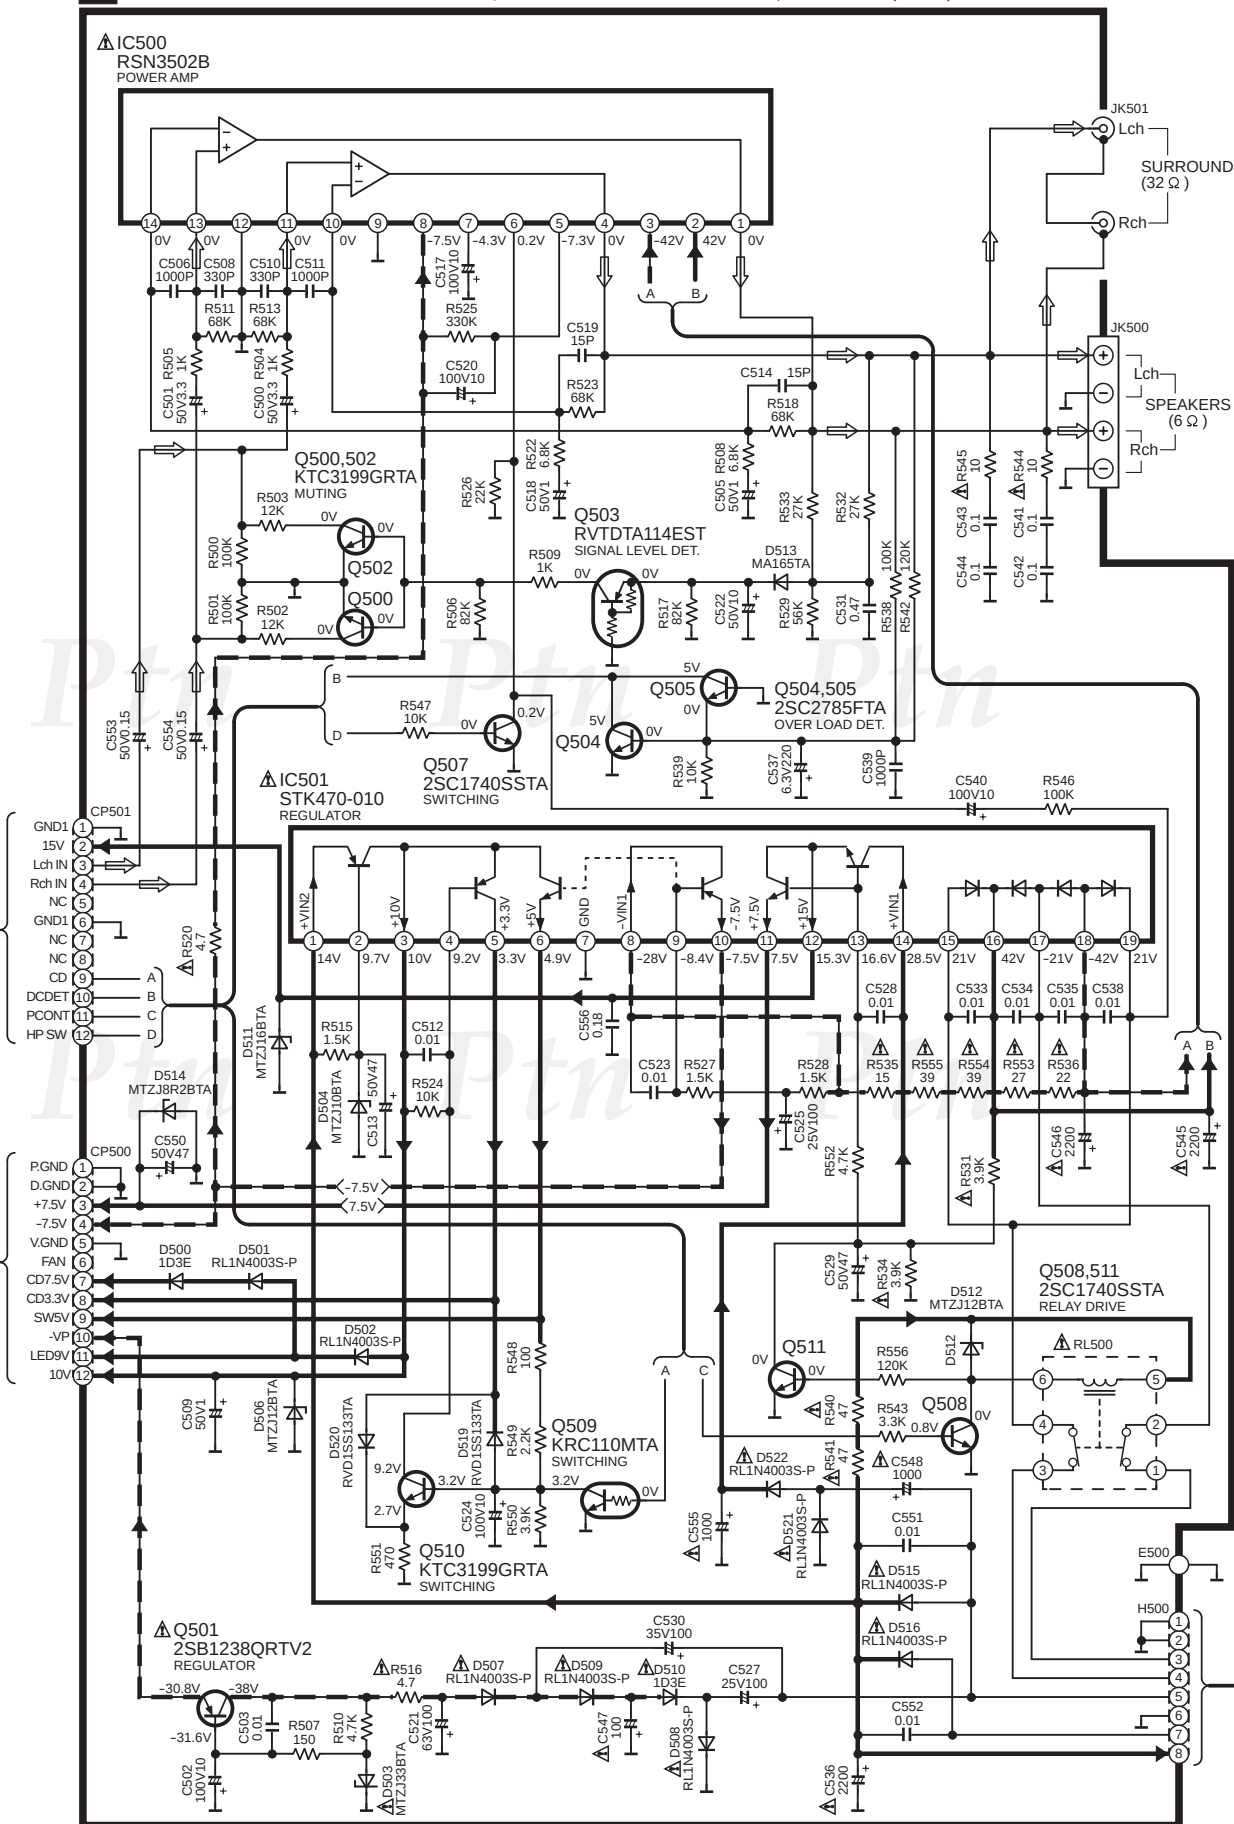


Ptn Ptn Ptn

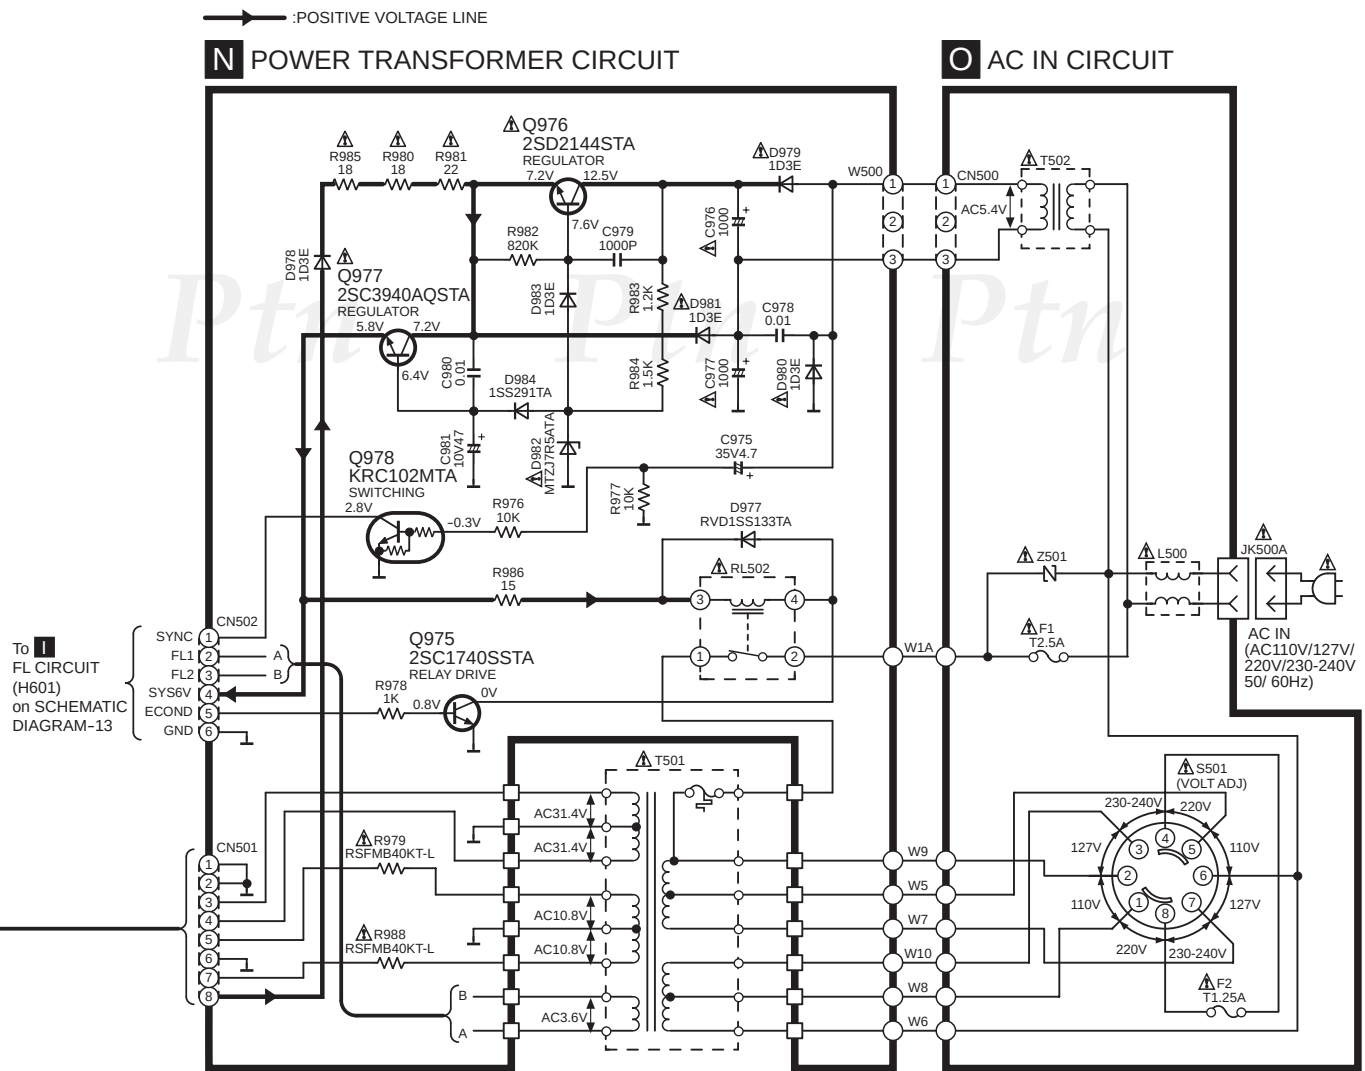

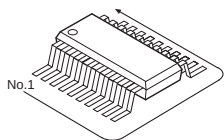


|              |       |
|--------------|-------|
| AN7348STA-E1 | 24PIN |
| AN8839NSBE2  | 28PIN |
| BU9255FS-E2  | 16PIN |
| BU2090AF-E2  | 16PIN |
| LA1833NMNTLM | 24PIN |
| LC72131MDTRM | 20PIN |
| LH532KU1     | 32PIN |
| M62457FPE1   | 16PIN |


|             |        |
|-------------|--------|
| MN662790RSC | 80PIN  |
| MN89103M2   | 128PIN |

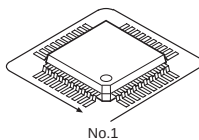


M5218AP

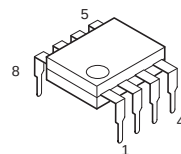


M62433AFP  
M38067MC435

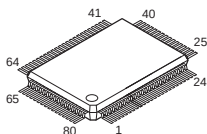


BA4558FE2

 


AN8739SBE2

 


M38199MF230

 


0N2180RLC1

 


TA7291P

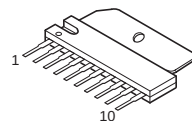


STK470-010

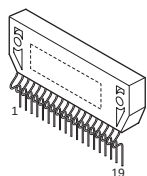


BA033T

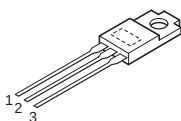


BA7755A

 


TC7WU04FUT2L  
TC7W14FUTE1L

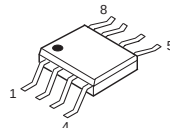



M44260CTP7

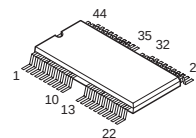

TC7W14FTE12L

 

RSN3502B

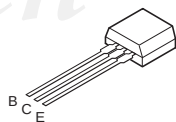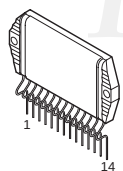



2SA933SSTA  
2SC1740SSTA  
2SC2058SPTA  
2SD2144STA  
KRA102MTA  
KRC102MTA

KRC103MTA  
KRC110MTA  
KTC3199GRTA  
RVTDTA114EST  
RVTDTA143EST



2SC2784FTA  
2SC2785FTA  
2SC2786MTA  
2SC2787FL1TA  
2SC3311ARTA

  
2SB621ARSTA  
2SD965RTA  
KTA12710YTA




2SA1037AKSTX  
2SC2412KT96R  
DTA114EKA146  
DTC144TKA146  
KRA102STA  
KRA110STA

KRC101STA  
KRC102STA  
KRC111STA  
KTC3875GRTA  
KTD1304TA


2SC3940AQSTA

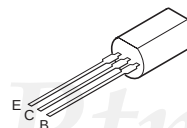


2SK544F-AC

 



2SB1238QRTV2

 

2SB1566E

 


GP1S94

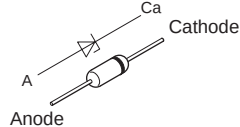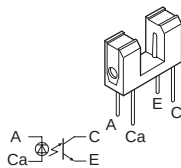


MTZJ10BTA  
MTZJ12BTA  
MTZJ16BTA  
MTZJ33BTA  
MTZJ4R7BTA  
MTZJ5R1BTA  
MTZJ7R5ATA  
MTZJ8R2BTA


MA165TA  
RVD1SS133TA

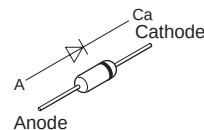



1SS291TA

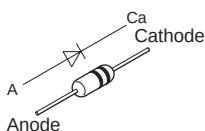

MA4020LTA

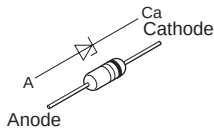


1D3E  
RL1N4003S-P

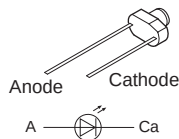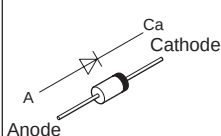


SLI325DCT31  
SLI325URCT31  
SLR325MCT31W  
SLR505DCT31


SVC211SPA-AL

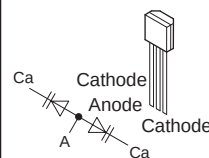


UDZSTE175R1B  
UDZTE173R6B

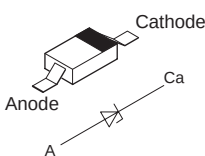

1SS355TE17

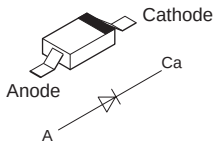

DAP202KT146

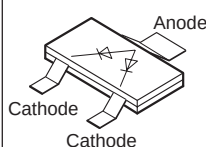

MA723TA

