


SECTION 4 ADJUSTMENTS

TUNER SECTION $0dB = 1\mu V$

AM Section

Band : AM
Volume : MAX

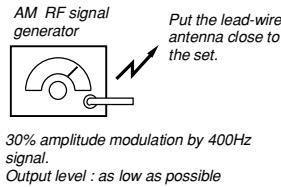

- Repeat the procedures in each adjustment several times, and the frequency coverage and tracking adjustments should be finally done by the trimmer capacitors.

< > : Tourist model

AM FREQUENCY COVERAGE ADJUSTMENT

Adjust for a maximum reading on level meter.

L3	520kHz
CT4	1,650kHz



AM TRACKING ADJUSTMENT

Adjust for a maximum reading on level meter.

L5	520kHz
CT3	1,650kHz

FM Section

Band : FM
Volume : MAX

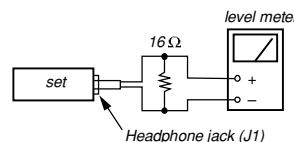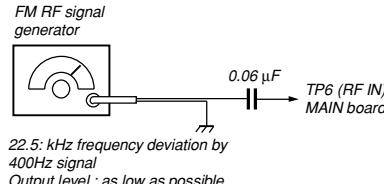


FM VCO Adjustment

Procedure :



1. Connect the frequency counter to TP9 as shown the figure.
2. Turn the set to 98MHz.
3. Adjust L4 for 38kHz reading on frequency counter.
Standard Value : $37.95 - 38.05kHz$


Connect Location : [MAIN BOARD] (SIDE B)

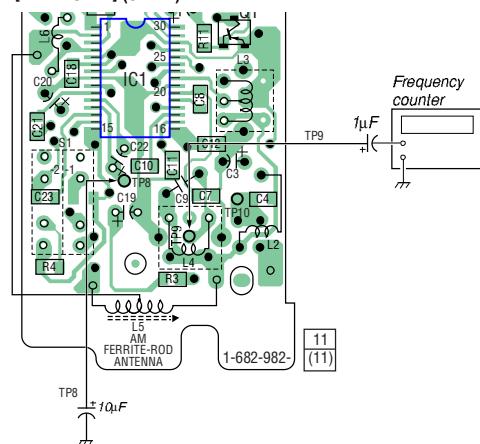

2nd OSC Adjustment

Procedure :


FM RF signal generator

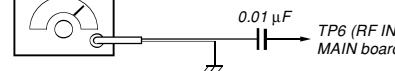

Carrier frequency : 98MHz
Modulation : no modulation
Output level : $100dB\mu V(100mV)$

1. Connect the frequency counter to TP10 as shown the figure.
2. Turn the set to 98MHz.
3. Adjust L2 for 57.1MHz reading on frequency counter.
Standard Value : $56.85 - 57.35MHz$

Connect Location : [MAIN BOARD] (SIDE B)

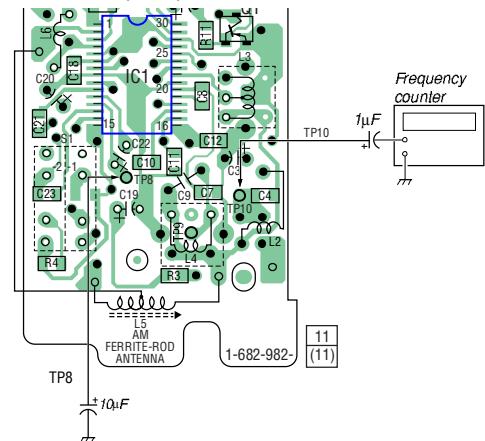

Adjustment Location :

