


ATmega8/48/88/168/328 DIP pinout

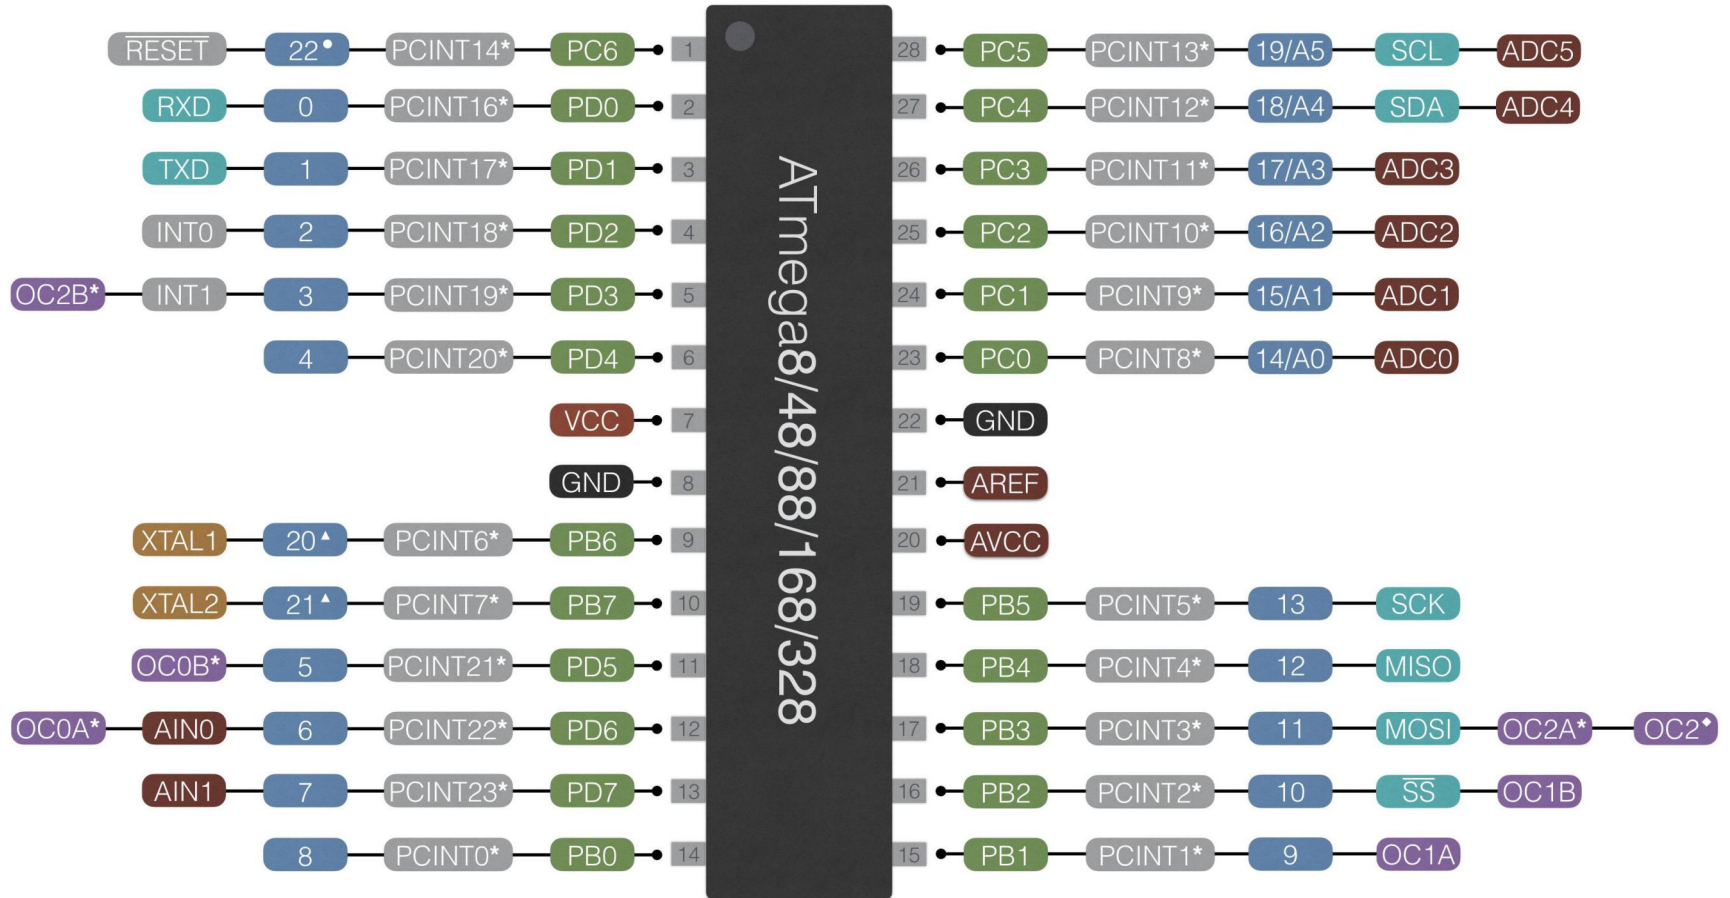

- * ATmega48/88/168/328 only
- ♦ ATmega8 only
- ▲ Internal oscillator must be enabled
- Reset pin must be disabled

<http://github.com/MCUdude/MiniCore>