


For the external control operation, prepare a setup as shown in Figure 12-3 and set the DIP switches SW1-SW6 (8) also as shown there.

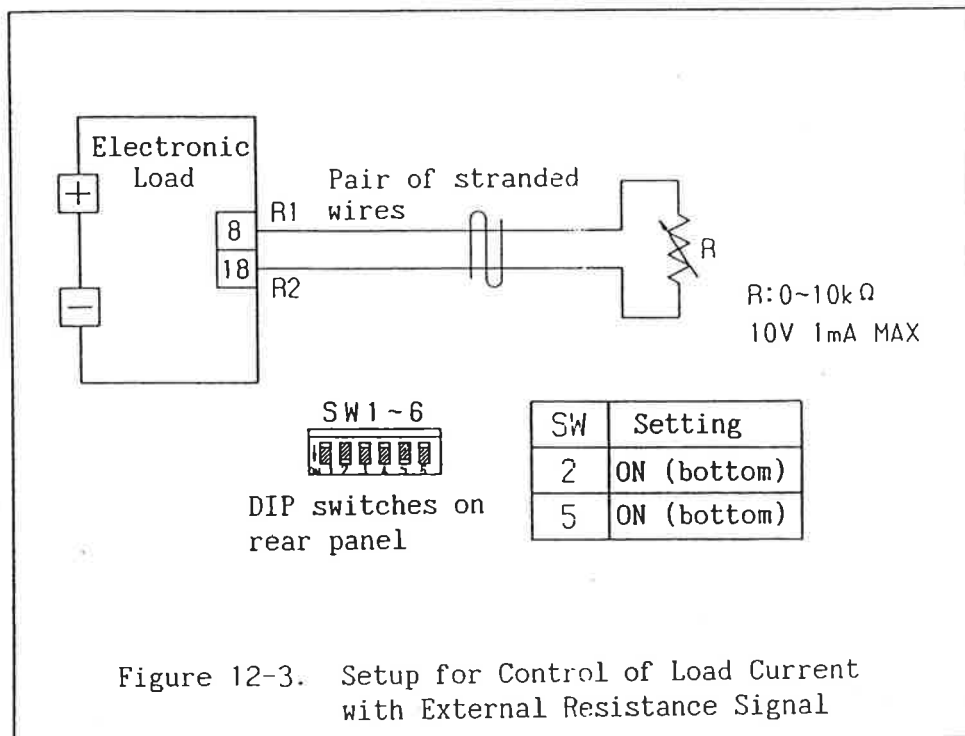

- For the external control resistor (R), use a resistor or resistors of good temperature characteristics, such as metallic film resistors.
- Set all DIP switches in the factory-default state (OFF state), except the above switches (SW2 and SW5), unless specified otherwise elsewhere in this manual.