


For the external control operation, prepare a setup as shown in Figure 12-4 and set the DIP switches SW1-SW6 (8) also as shown there.

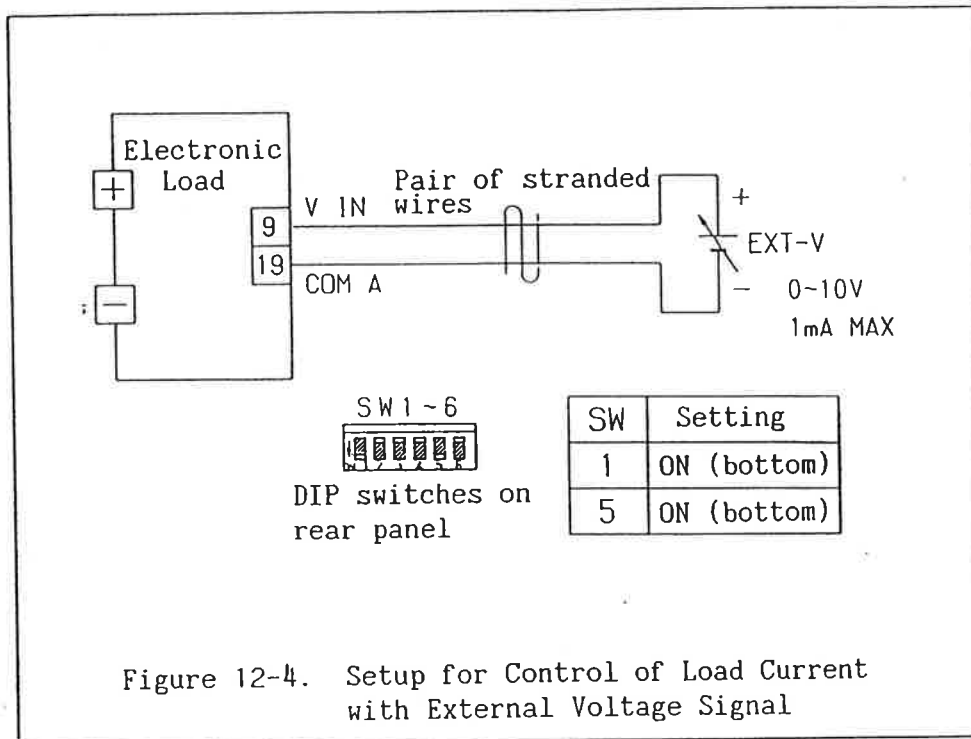

- For the external control voltage signal, use a signal which has less ripple and noise.
- Set all DIP switches in the factory-default state (OFF state), except the above switches (SW1 and SW5), unless specified otherwise elsewhere in this manual.
- The COM-A (analog common) lines of Pin Nos. 19 and 20 are connected to the negative (-) input terminal of the Load.