



Service Manual

XTREME 2 (S/N starting from PL)

Portable Bluetooth Speaker with passive bass radiators, 5200 mAh battery for 15 hours of playtime and charging of other devices through dual USB, and IPX7 waterproof.

SKU: : JBLXTREME2BLKAM, JBLXTREME2BLUAM, JBLXTREME2GRNAM, JBLXTREME2BLKEU, JBLXTREME2BLUEU, JBLXTREME2GRNEU, JBLXTREME2BLKAS, JBLXTREME2BLUAS, JBLXTREME2GRNAS, JBLXTREME2BLKCN, JBLXTREME2BLUCN, JBLXTREME2GRNCN, JBLXTREME2BLKJN, JBLXTREME2BLUJN, JBLXTREME2GRNJN, JBLXTREME2BLKBR, JBLXTREME2BLUBR, JBLXTREME2GRNBR, JBLXTREME2BLKIN, JBLXTREME2BLUIN, JBLXTREME2GRNIN, JBLXTREME2REDAM, JBLXTREME2SQUADAM, JBLXTREME2REDEU, JBLXTREME2SQUADEU, JBLXTREME2REDAS, JBLXTREME2SQUADAS, JBLXTREME2REDCN, JBLXTREME2SQUADCN, JBLXTREME2REDJN, JBLXTREME2SQUADJN, JBLXTREME2REDBR, JBLXTREME2SQUADBR, JBLXTREME2REDIN, JBLXTREME2SQUADIN



Contents

Technical Specifications	3
Safety Instruction, Warning & Notes.....	4
Software Upgrade Procedure	6
Tools and FW for upgrading preparation:	7
Upgrading Procedure:.....	7
Set Block Diagram	11
Schematic Diagram – IO Board	12
Schematic Diagram – Key Board.....	13
Schematic Diagram – LED Board	14
Schematic Diagram – Main Board	15
Schematic Diagram – USB Board	23
PCB Layout – Main Board	24
PCB Layout – Key board	25
PCB Layout – Led board	25
PCB Layout – I/O board.....	26
PCB Layout – USB board	26
Mechanical Exploded View	27
Packaging Exploded View	30
Spare Parts List	31
Disassembly Instruction	34
Service Info	46
Revision List	47

Technical Specifications

Bluetooth version:	4.2
Support:	A2DP 1.3 AVRCP 1.6 HFP 1.6
Transducers:	2.75-inch woofer x2; 1-inch Tweeter x2
Output power:	2x20W (AC mode); 2 x10W (Battery mode)
Frequency response:	23~20KHz
Signal-to-noise ratio:	82dB
Power supply:	19V/3A
Battery type:	Lithium-ion polymer (7.2V, 5200mAh)
Battery charge time:	<3.5H hours
Music playing time:	up to 15 hours (varies by volume level)
Bluetooth transmitter power:	0-8dBm
Bluetooth transmitter frequency range:	2.4 – 2.48 GHz
Bluetooth transmitter modulation:	GFSK, 8DPSK, $\pi/4$ DQPSK
Dimensions (H x W x D):	289.4 x 131.5 x 125.3mm
Weight:	2.4Kg

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, or the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.



CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

For Products That Transmit and Receive RF Energy:

FCC Regulations (USA Only)

FCC Information For Users

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radio and Television Interference

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and then on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment to a different outlet so that the equipment and receiver are on different branch circuits.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by Harman could void the user's authority to operate the equipment.

IC Statement and Warning (Canada Only)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Canadian Model

This Class B digital apparatus complies with Canadian ICES-003.

Modèle pour les Canadiens

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

For Products with Radio Receivers That Can Use an External Antenna:

CATV or Antenna Grounding

If an outside antenna or cable system is connected to this product, be certain that it is grounded so as to provide some protection against voltage surges and static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes and requirements of the grounding electrode.

Note to CATV System Installer:

This reminder is provided to call the CATV (cable TV) system installer's attention to article 820-40 of the NEC, which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as possible.

For CD/DVD/Blu-ray Disc™ Players:

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

Caution:

This product uses a laser system. To prevent direct exposure to the laser beam, do not open the cabinet enclosure or defeat any of the safety mechanisms provided for your protection. DO NOT STARE INTO THE LASER BEAM. To ensure proper use of this product, please read the owner's manual carefully and retain it for future use. Should the unit require maintenance or repair, please contact your local Harman Kardon service center. Refer servicing to qualified personnel only.

For Products That Include Batteries:



Instructions for Users on Removal and Disposal of Used Batteries.

CAUTION

Risk of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Alkaline batteries are considered nonhazardous. Rechargeable batteries (i.e., nickel cadmium, nickel metal-hydride, lithium and lithium-ion) are considered hazardous household materials and may pose an unnecessary health and safety risk.

In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

To remove the batteries from your equipment or remote control, reverse the procedure described for inserting batteries in the owner's manual.

For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers.

ELECTROSTATICALLY SENSITIVE (ES) DEVICES

Some semiconductor (solid state) devices can be damaged easily by static electricity. Such components commonly are called Electrostatically Sensitive (ES) Devices. Examples of typical ES devices are integrated circuits and some field effect transistors and semiconductor "chip" components.

The following techniques should be used to help reduce the incidence of component damage caused by static electricity.

1. Immediately before handling any semiconductor component or semiconductor-equipped assembly, drain off any electrostatic charge on your body by touching a known earth ground. Alternatively, obtain and wear a commercially available discharging wrist strap device, which should be removed for potential shock reasons prior to applying power to the unit under test.
2. After removing an electrical assembly equipped with ES devices, place the assembly on a conductive surface such as aluminum foil, to prevent electrostatic charge build-up or exposure of the assembly.
3. Use only a grounded-tip soldering iron to solder or unsolder ES devices.
4. Use only an anti-static solder removal device. Some solder removal devices not classified as "anti-static" can generate electrical charges sufficient to damage ES devices.
5. Do not use freon-propelled chemicals. These can generate electrical charge sufficient to damage ES devices.
6. Do not remove a replacement ES device from its protective package until immediately before you are ready to install it. (Most replacement ES devices are packaged with leads electrically shorted together by conductive foam, aluminum foil or comparable conductive material.)
7. Immediately before removing the protective material from the leads of a replacement ES device, touch the protective material to the chassis or circuit assembly into which the device will be installed.

CAUTION : Be sure no power is applied to the chassis or circuit, and observe all other safety precautions.

8. Minimize bodily motions when handling unpackaged replacement ES devices. (Otherwise harmless motion such as the brushing together of your clothes fabric or the lifting of your foot from a carpeted floor can generate static electricity sufficient to damage an ES devices.

PRODUCT SAFETY NOTICE

Each precaution in this manual should be followed during servicing.


Components identified with the IEC symbol  in the parts list are of special significance to safety. When replacing a component identified with , use only the replacement parts designated, or parts with the same ratings or resistance, wattage, or voltage that are designated in the parts list in this manual. Leakage-current or resistance measurements must be made to determine that exposed parts are acceptably insulated from the supply circuit before returning the product to the customer.

SAFETY PRECAUTIONS

The following check should be performed for the continued protection of the customer and service technician.

LEAKAGE CURRENT CHECK

Measure leakage current to a known earth ground (water pipe, conduit, etc.) by connecting a leakage current tester between the earth ground and all exposed metal parts of the appliance (input/output terminals, screwheads, metal overlays, control shaft, etc.). Plug the AC line cord of the appliance directly into a 120V AC 60Hz outlet and turn the AC power switch on. Any current measured must not exceed 0.5mA.

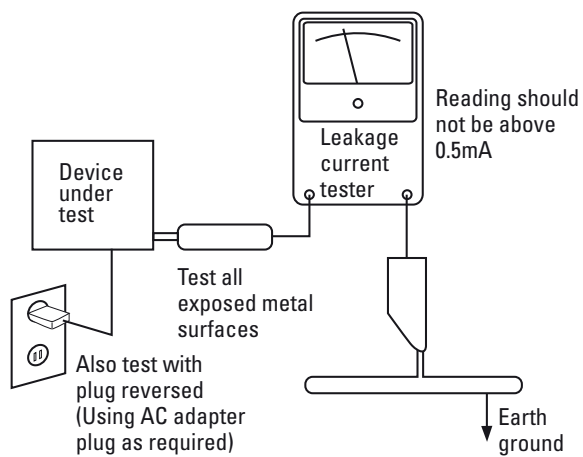

AC Leakage Test

ANY MEASUREMENTS NOT WITHIN THE LIMITS OUTLINED ABOVE ARE INDICATIVE OF A POTENTIAL SHOCK HAZARD AND MUST BE CORRECTED BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

Software Upgrade Procedure


Tools and FW for upgrading preparation:

1. PC with Win7 or Win 10
2. Micro USB cable
3. **Power Adaptor**
4. Pstool (software tool)
5. Green: "Xtreme2_**Green**.psr", Black: "Xtreme2_**Black**.psr", Blue: "Xtreme2_**Blue**.psr" flie

Upgrading Procedure:

(1) Set up Pstool on PC (pls check attached "BlueSuite_2_6_2_632.exe" or latest version)

(2) Connect USB cable to PC

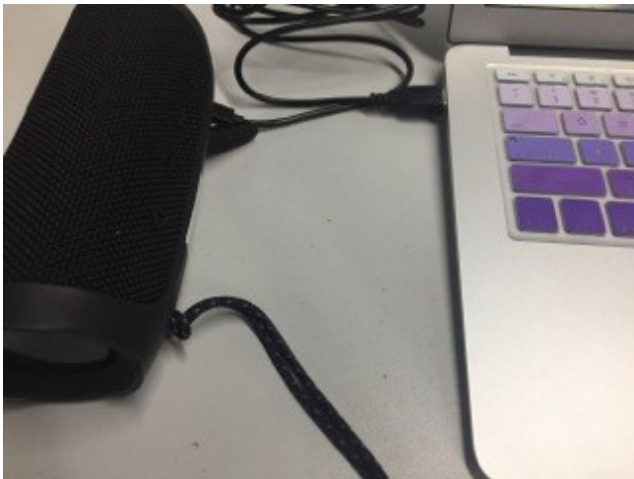


(3) Power on unit , **attach power adaptor** and then press "volume -" and "play" and hold on 10 seconds




(4)Open “Pstool” on PC




(5)Set Pstool as below photo, and then select “OK”

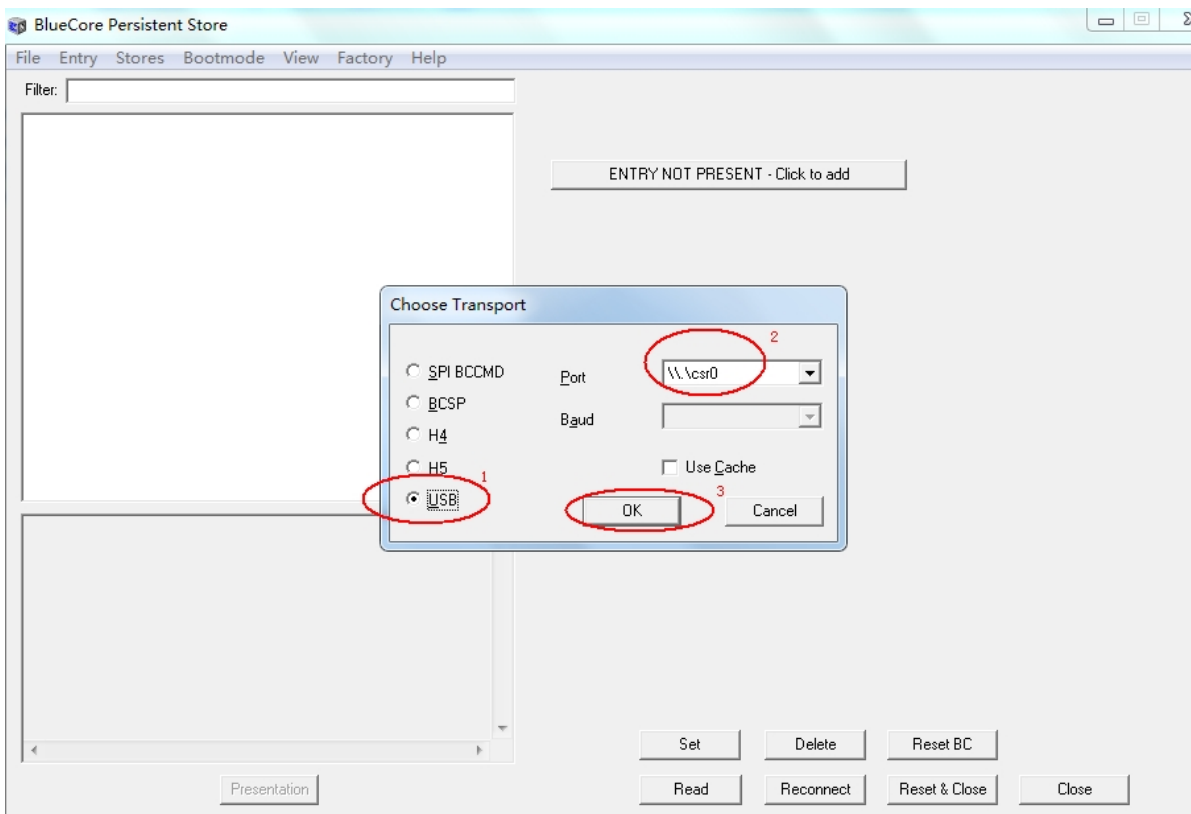


(6) Select "File" → "Merge".

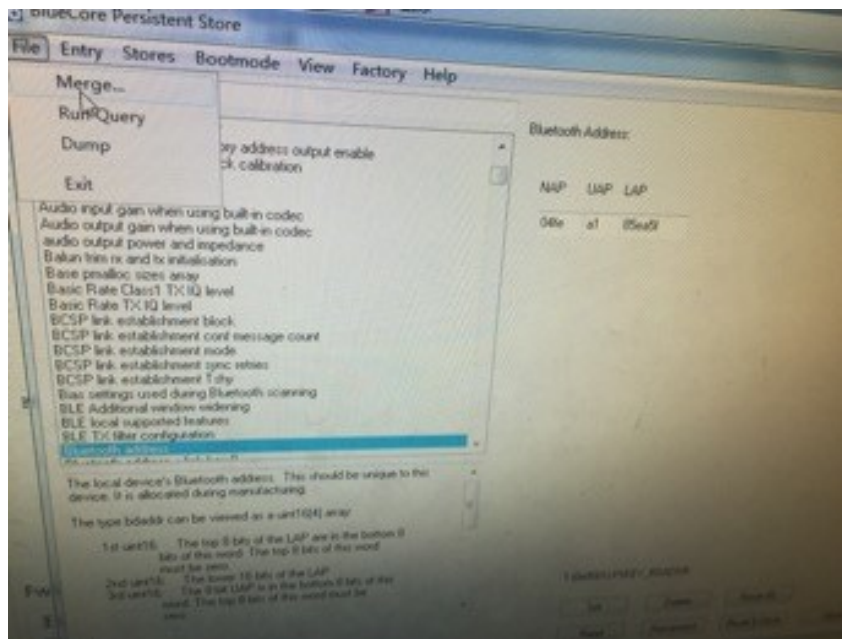

(7) Select Green: "Xtreme2_Green.psr", Black: "Xtreme2_Black.psr", Squad: "Xtreme2_Squad.psr" file which the color you need to setting.

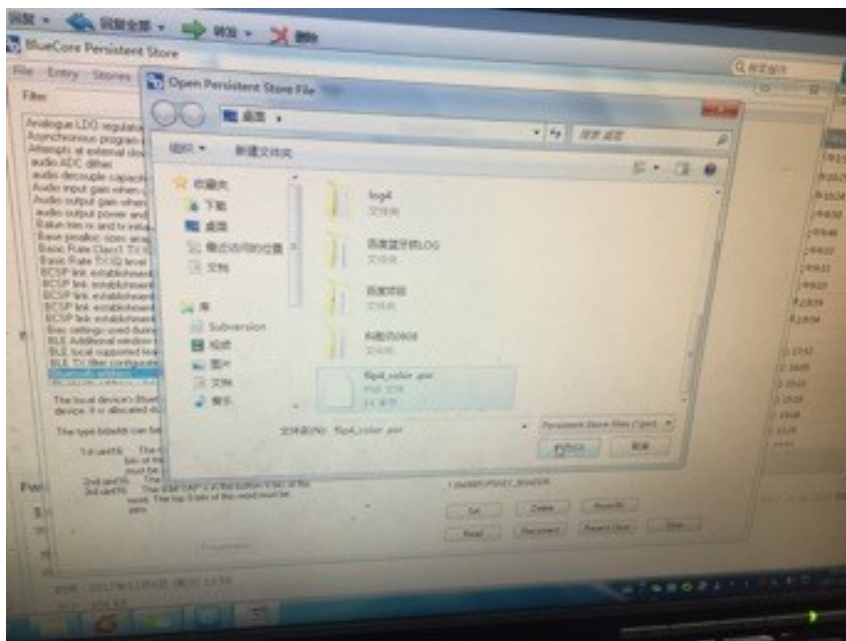


(8) Select Reset&Close

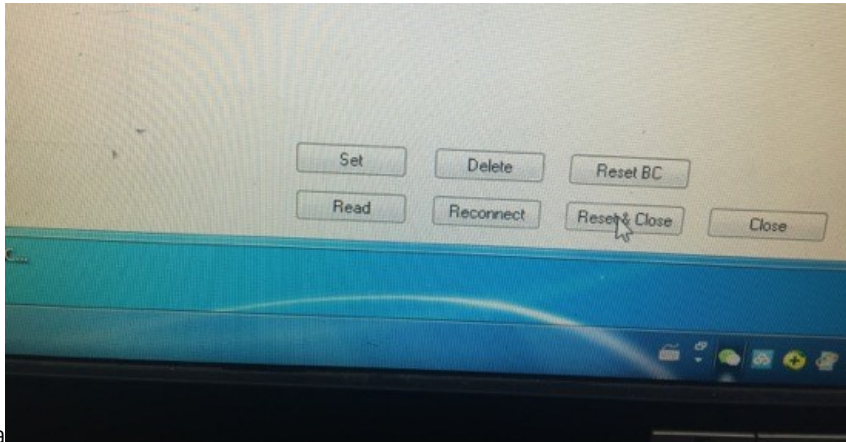


(9) Unit connect with APP to check color code has been changed or not.


SET BLOCK DIAGRAM

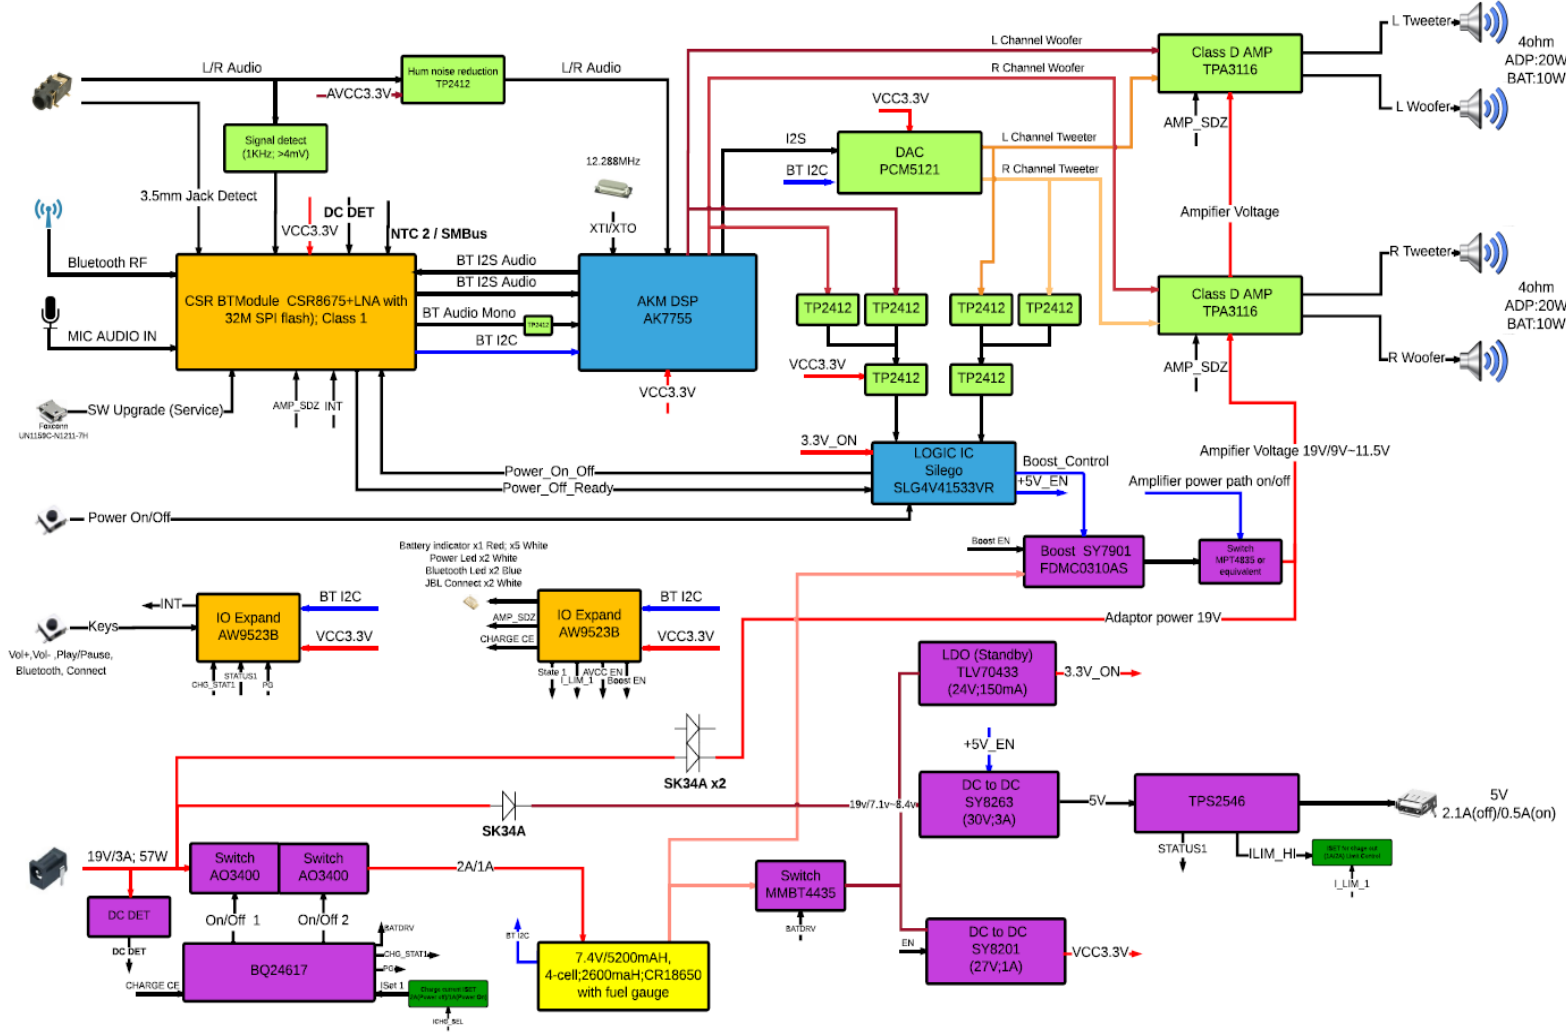


Schematic Diagram – IO Board

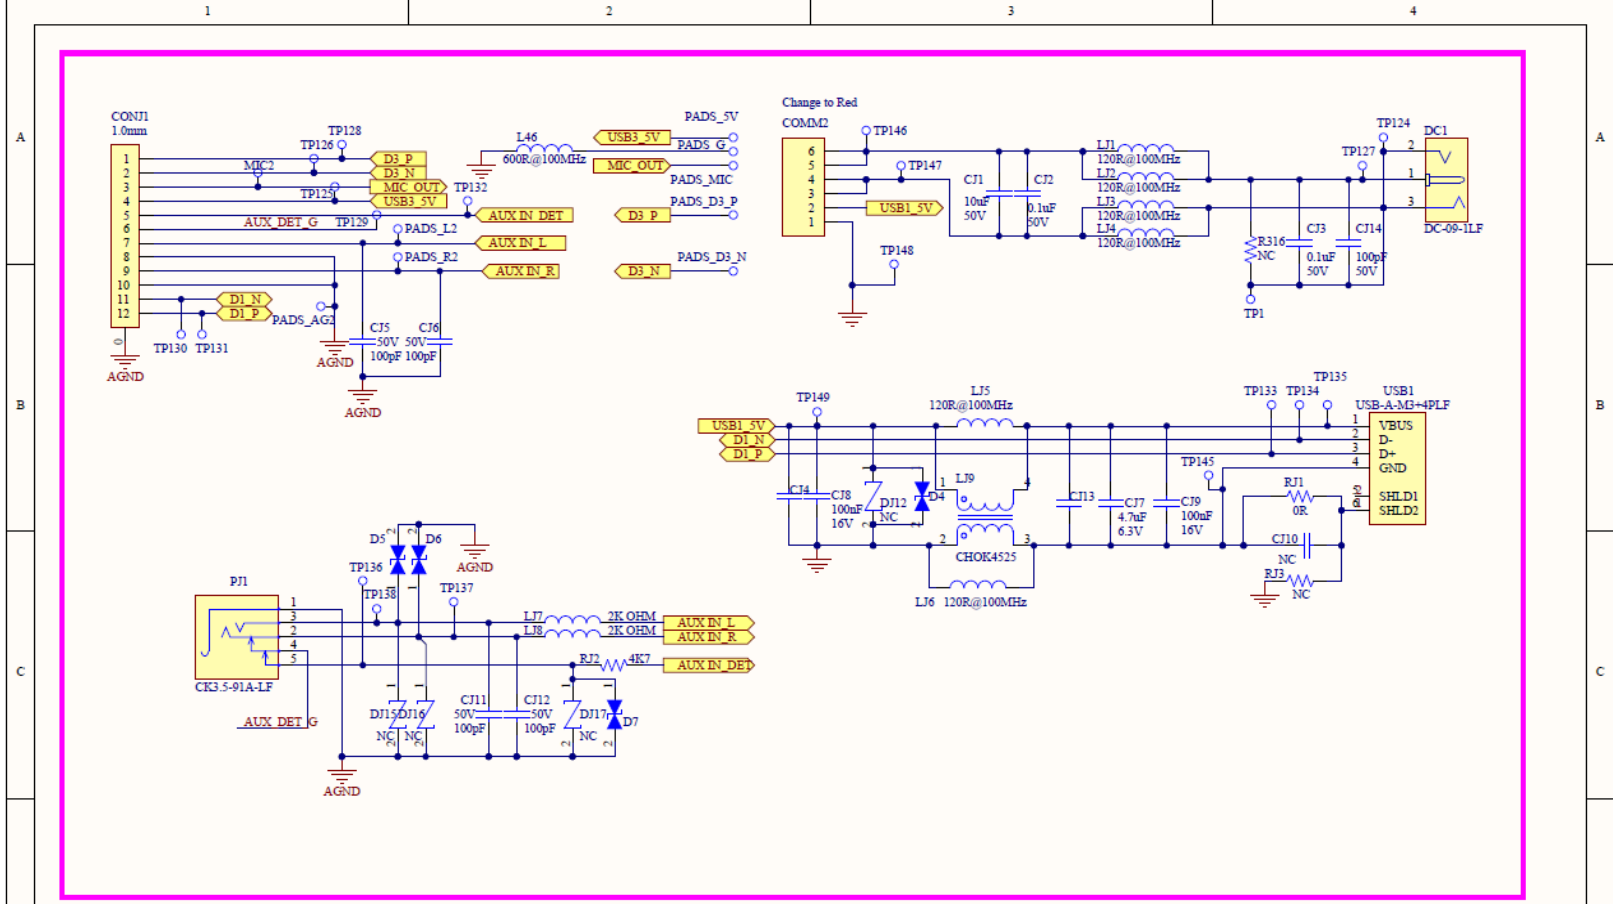


Schematic Diagram – Key Board

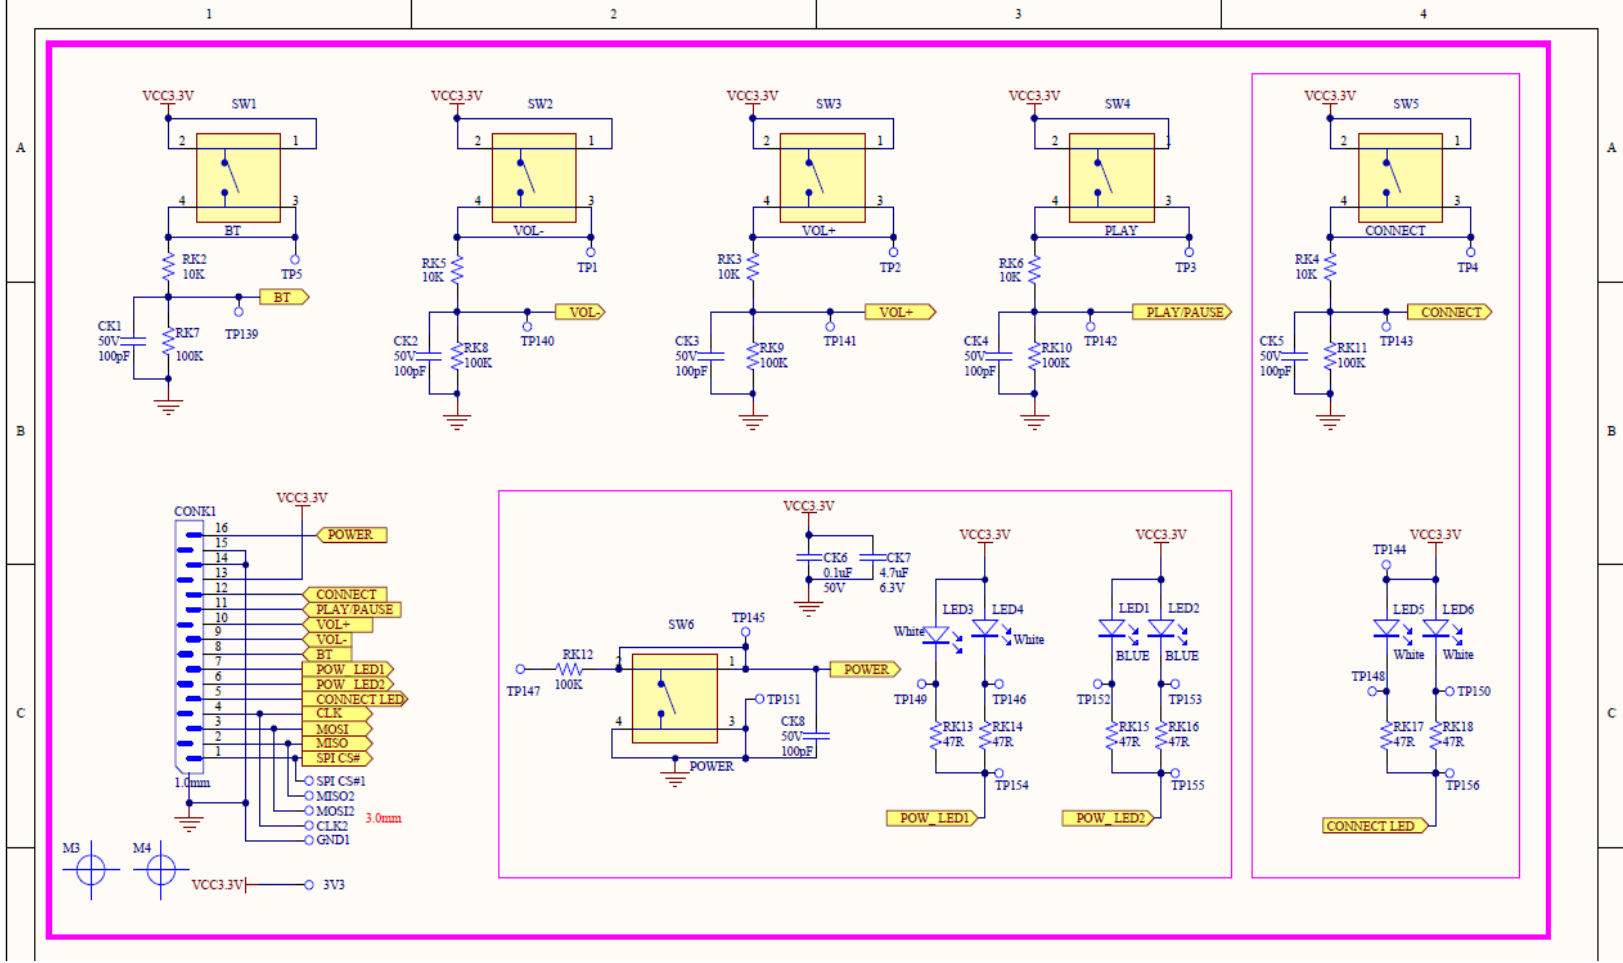



Schematic Diagram – LED Board

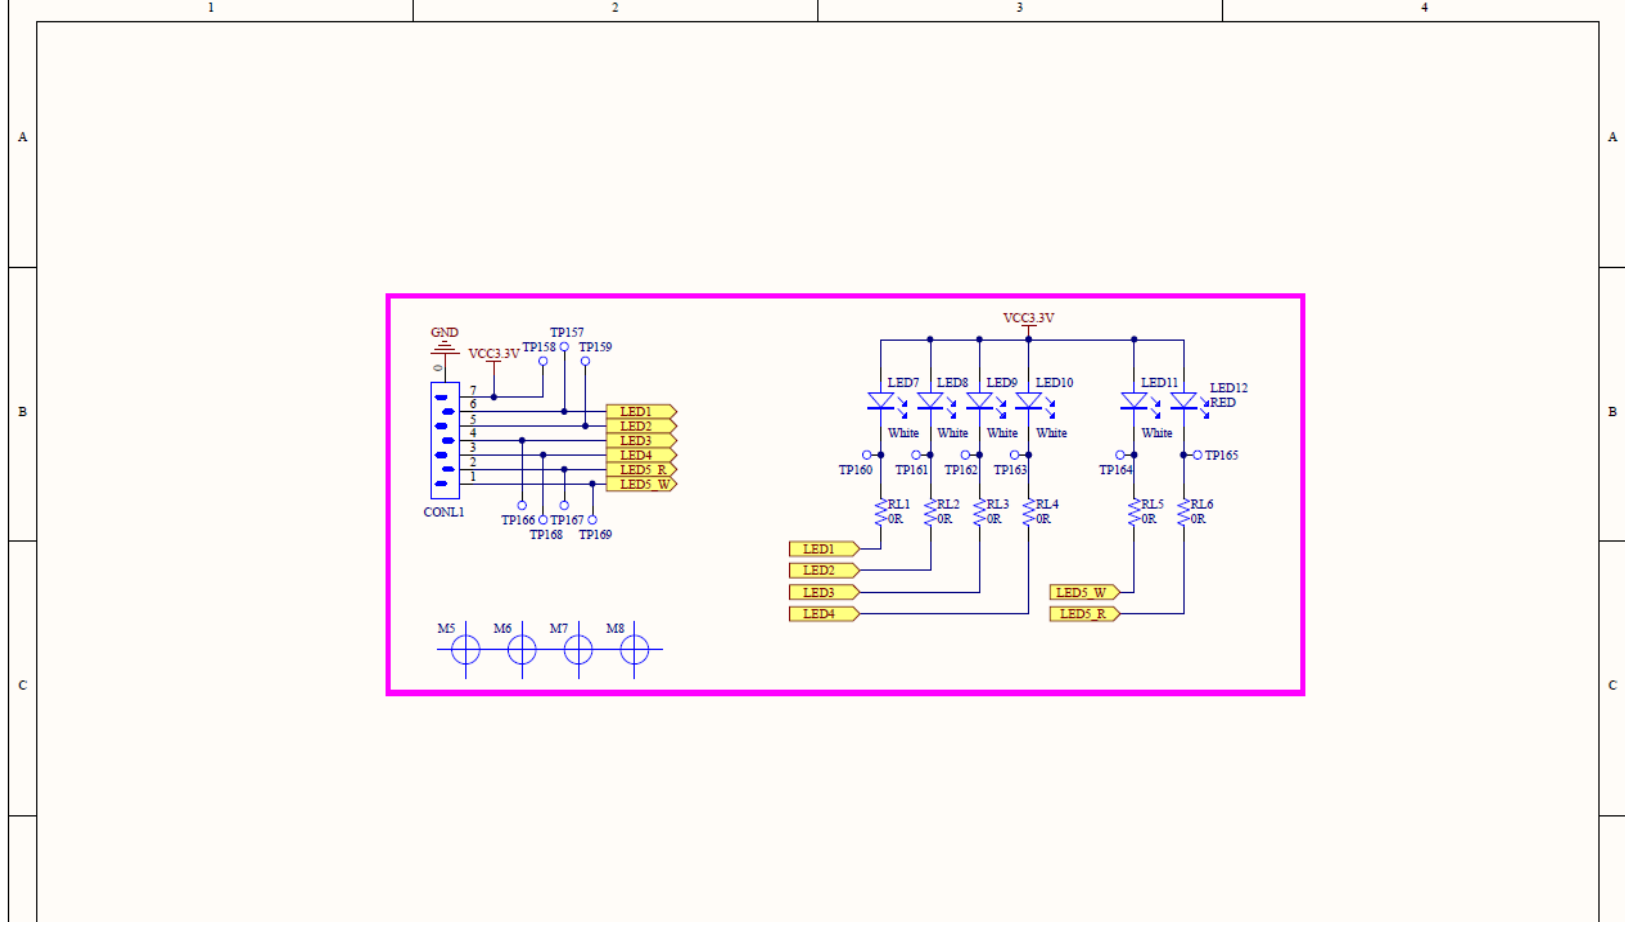



Schematic Diagram – Main Board

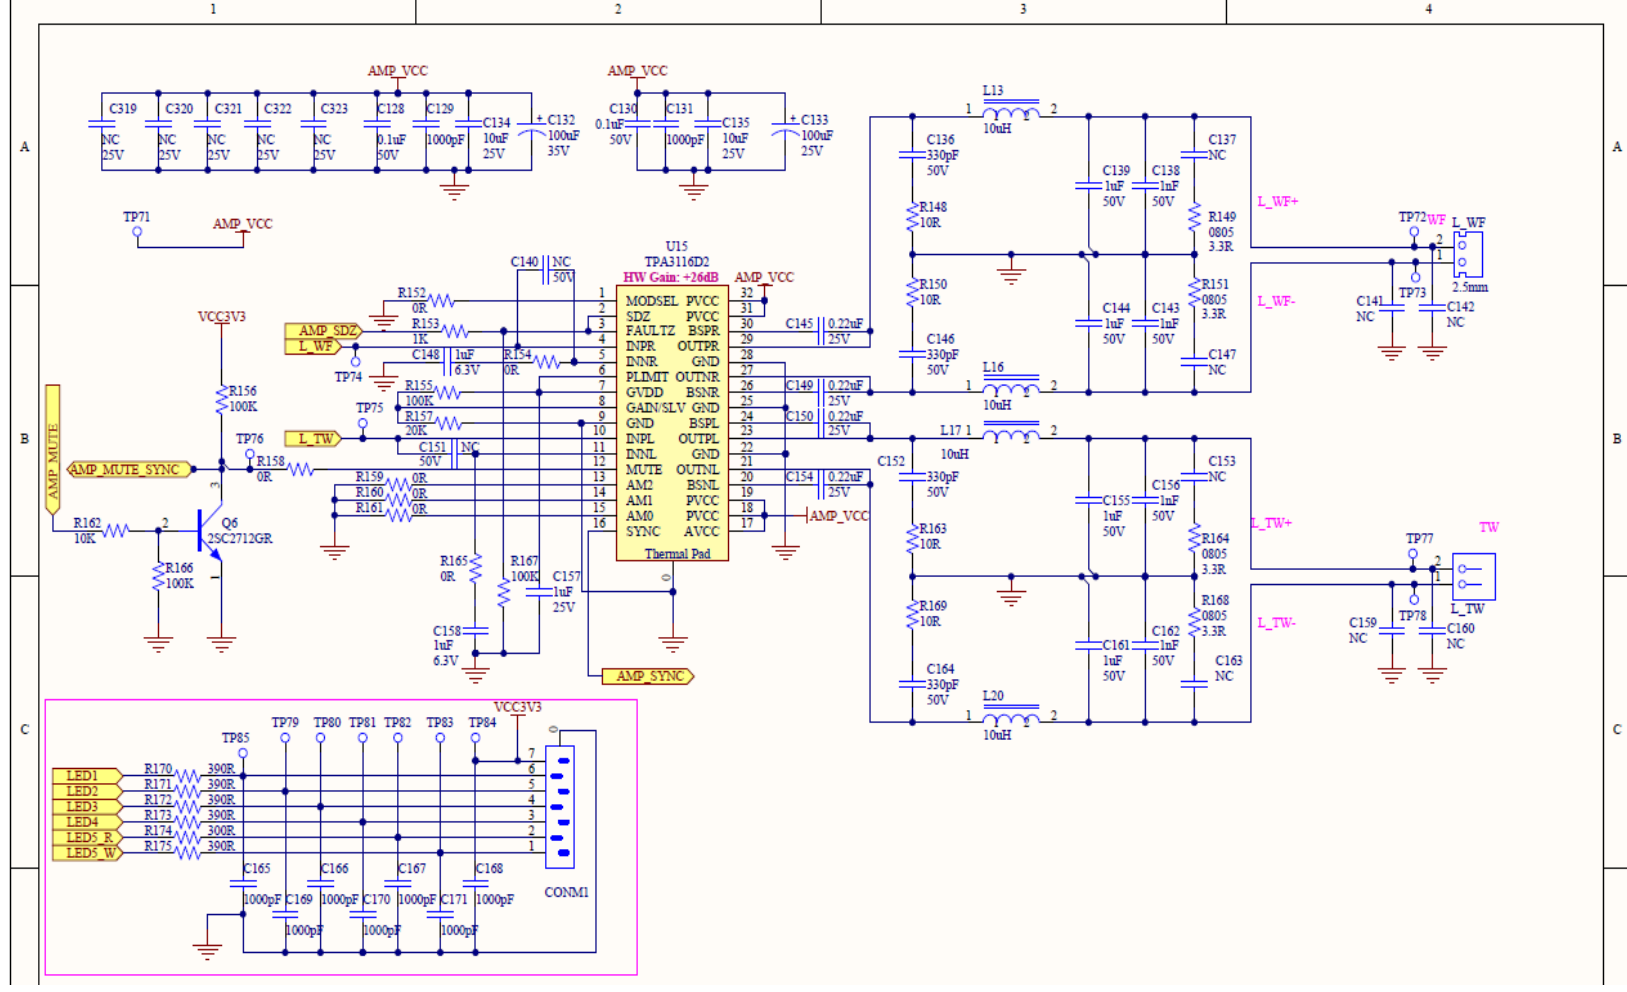

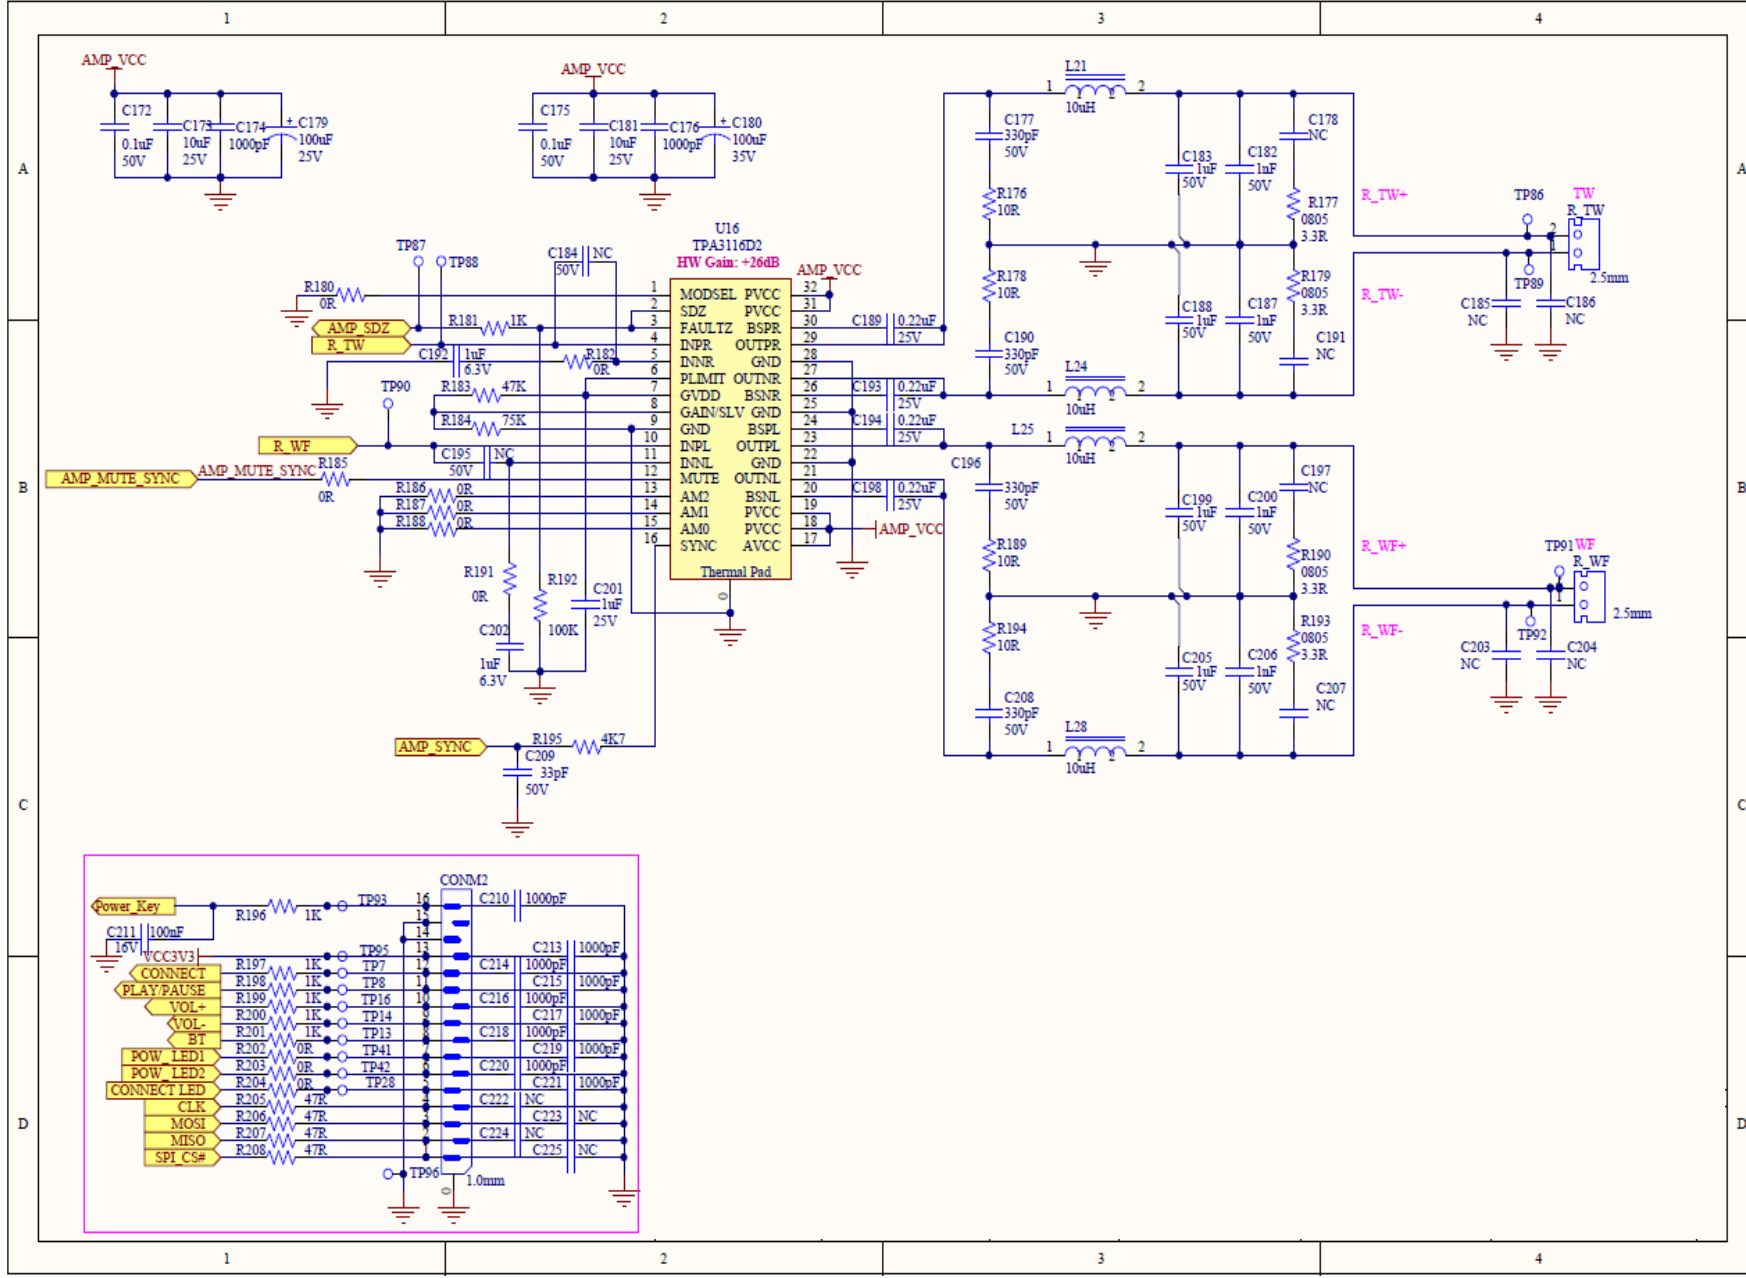


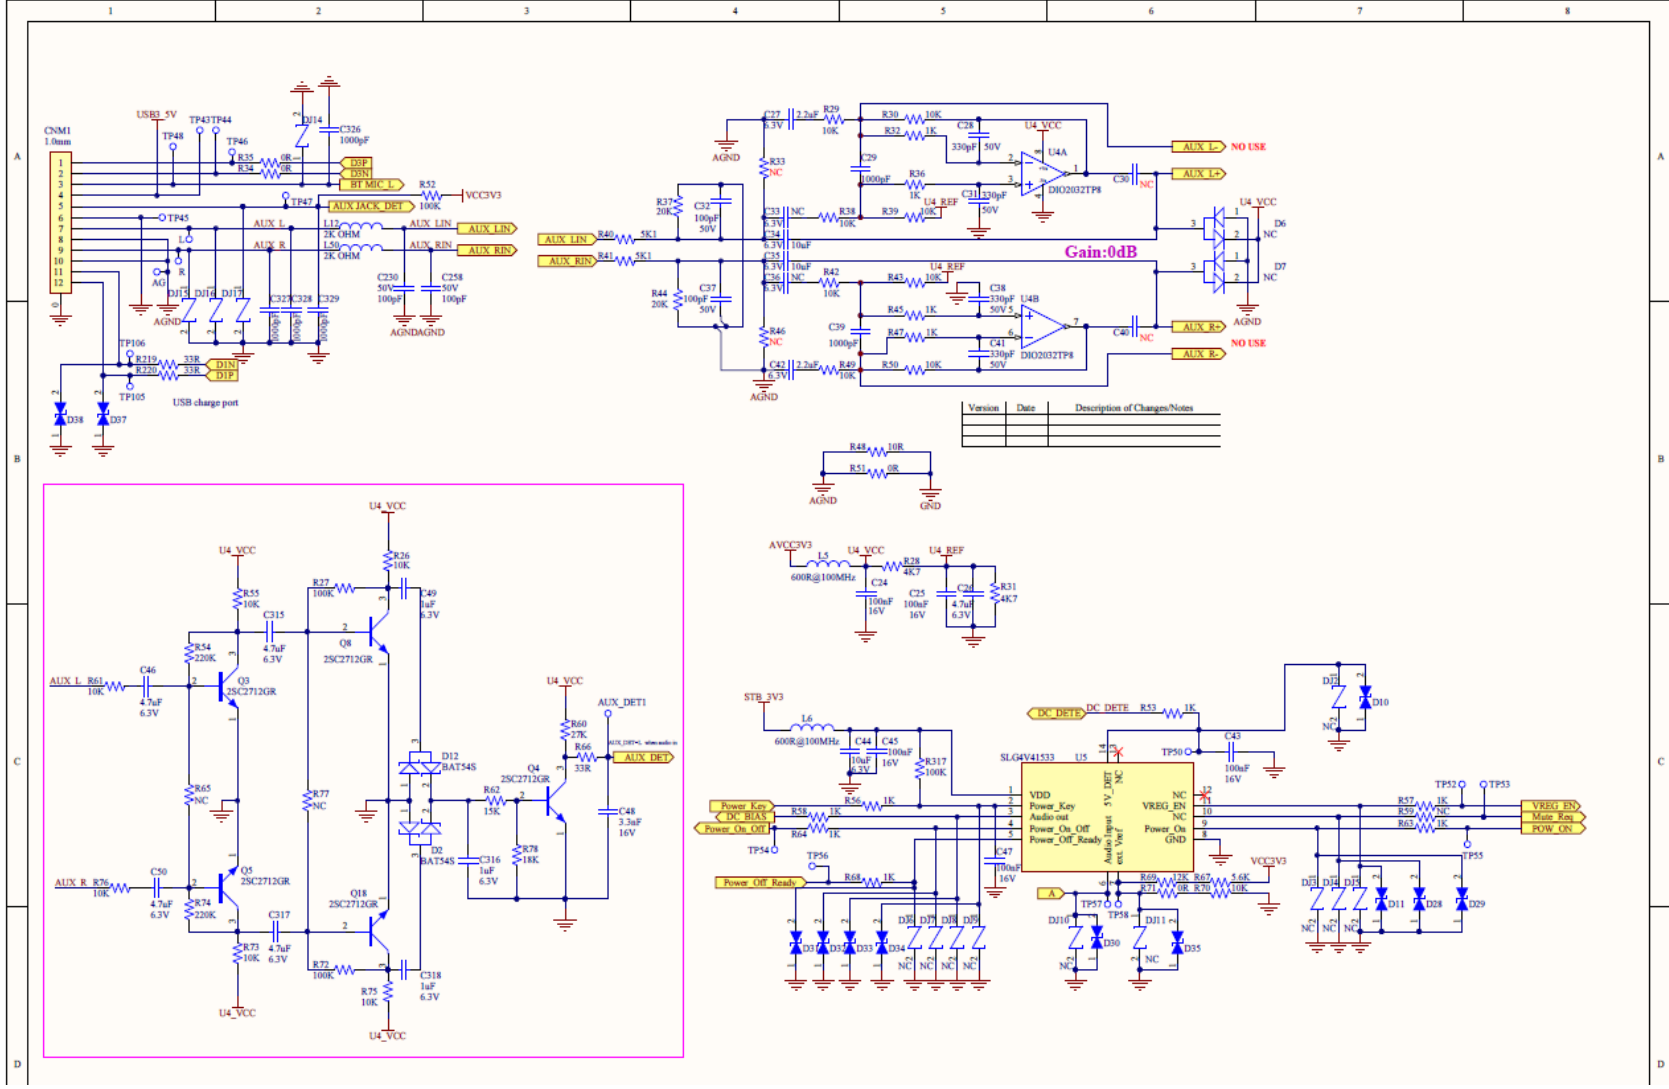

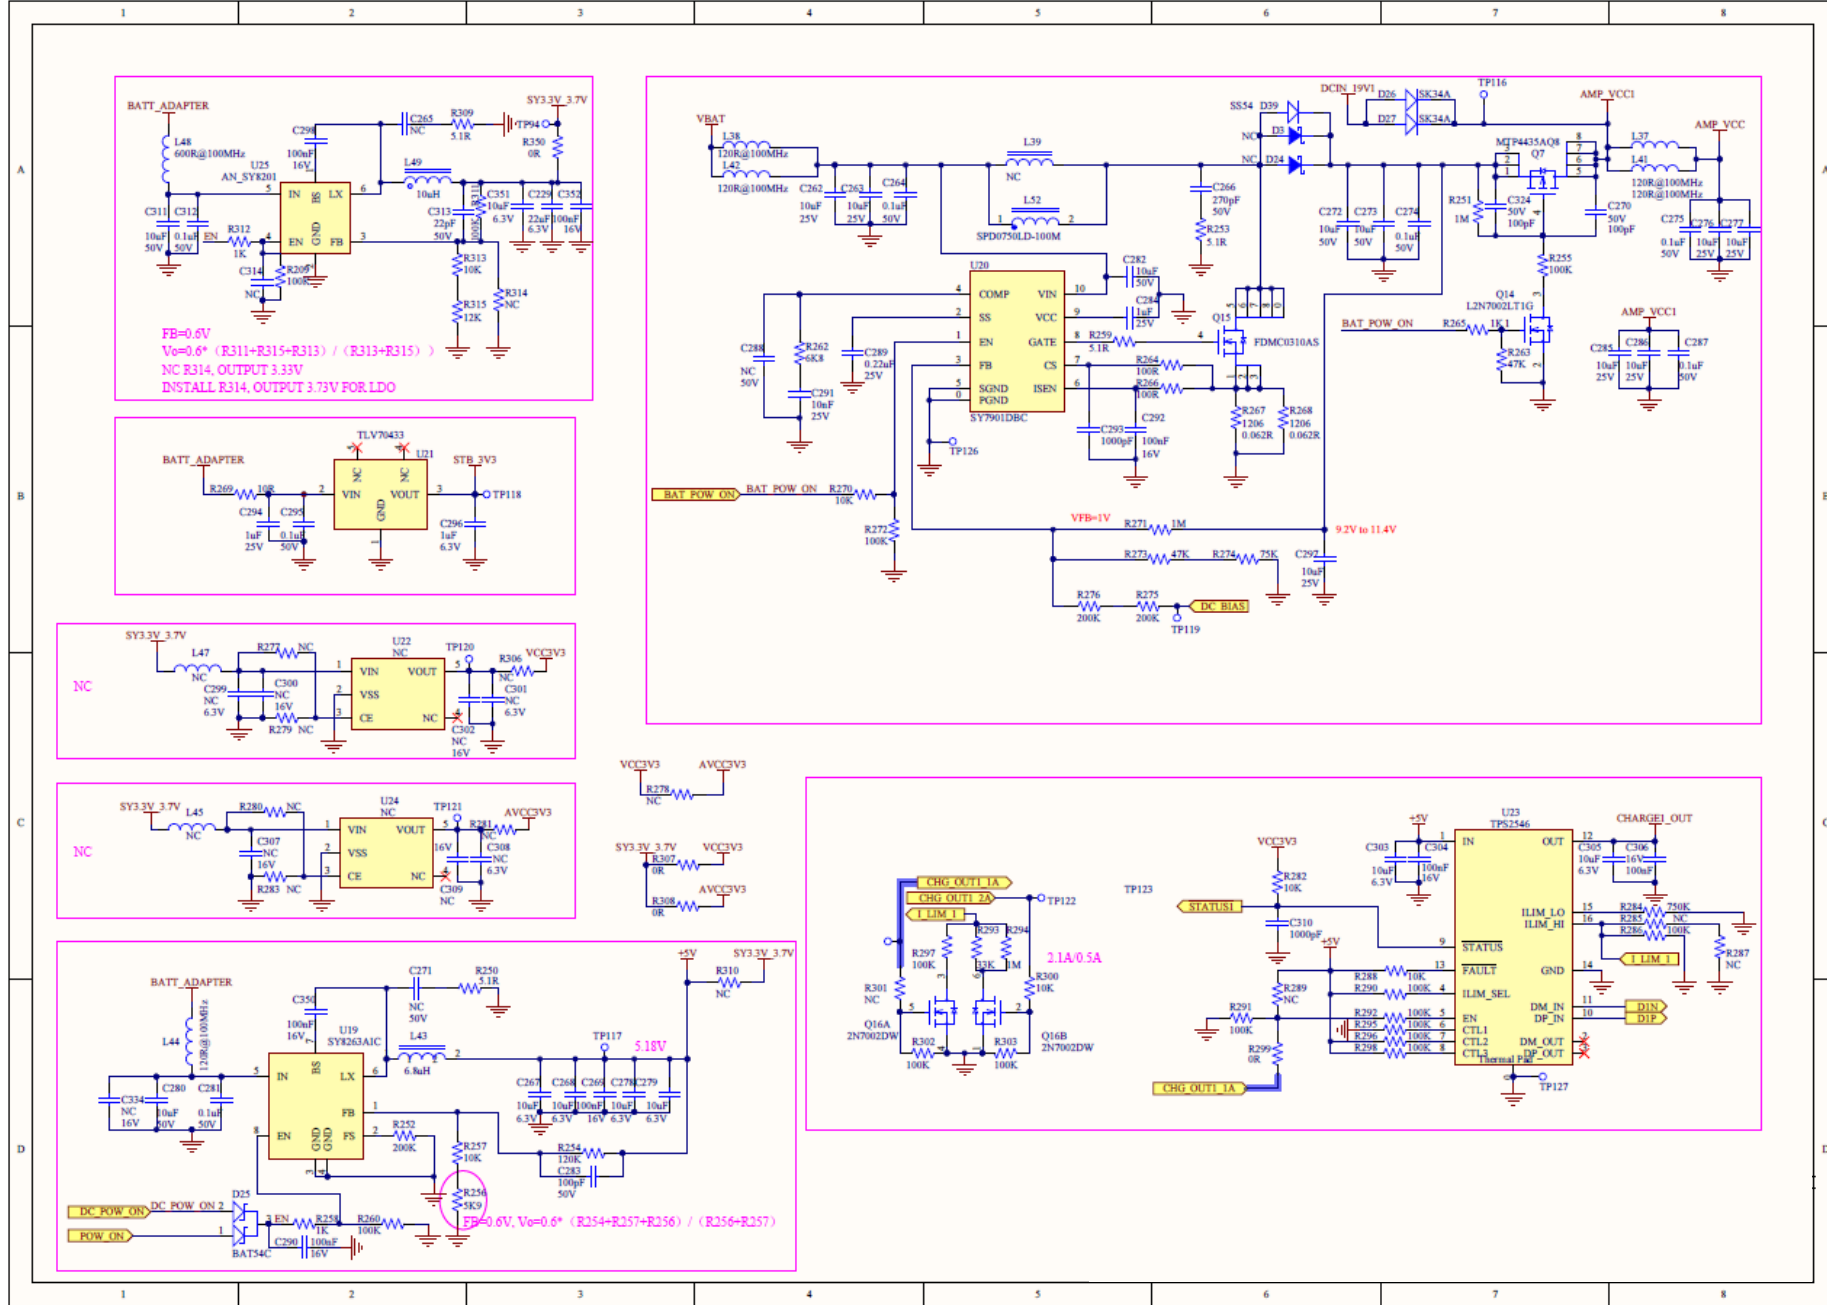


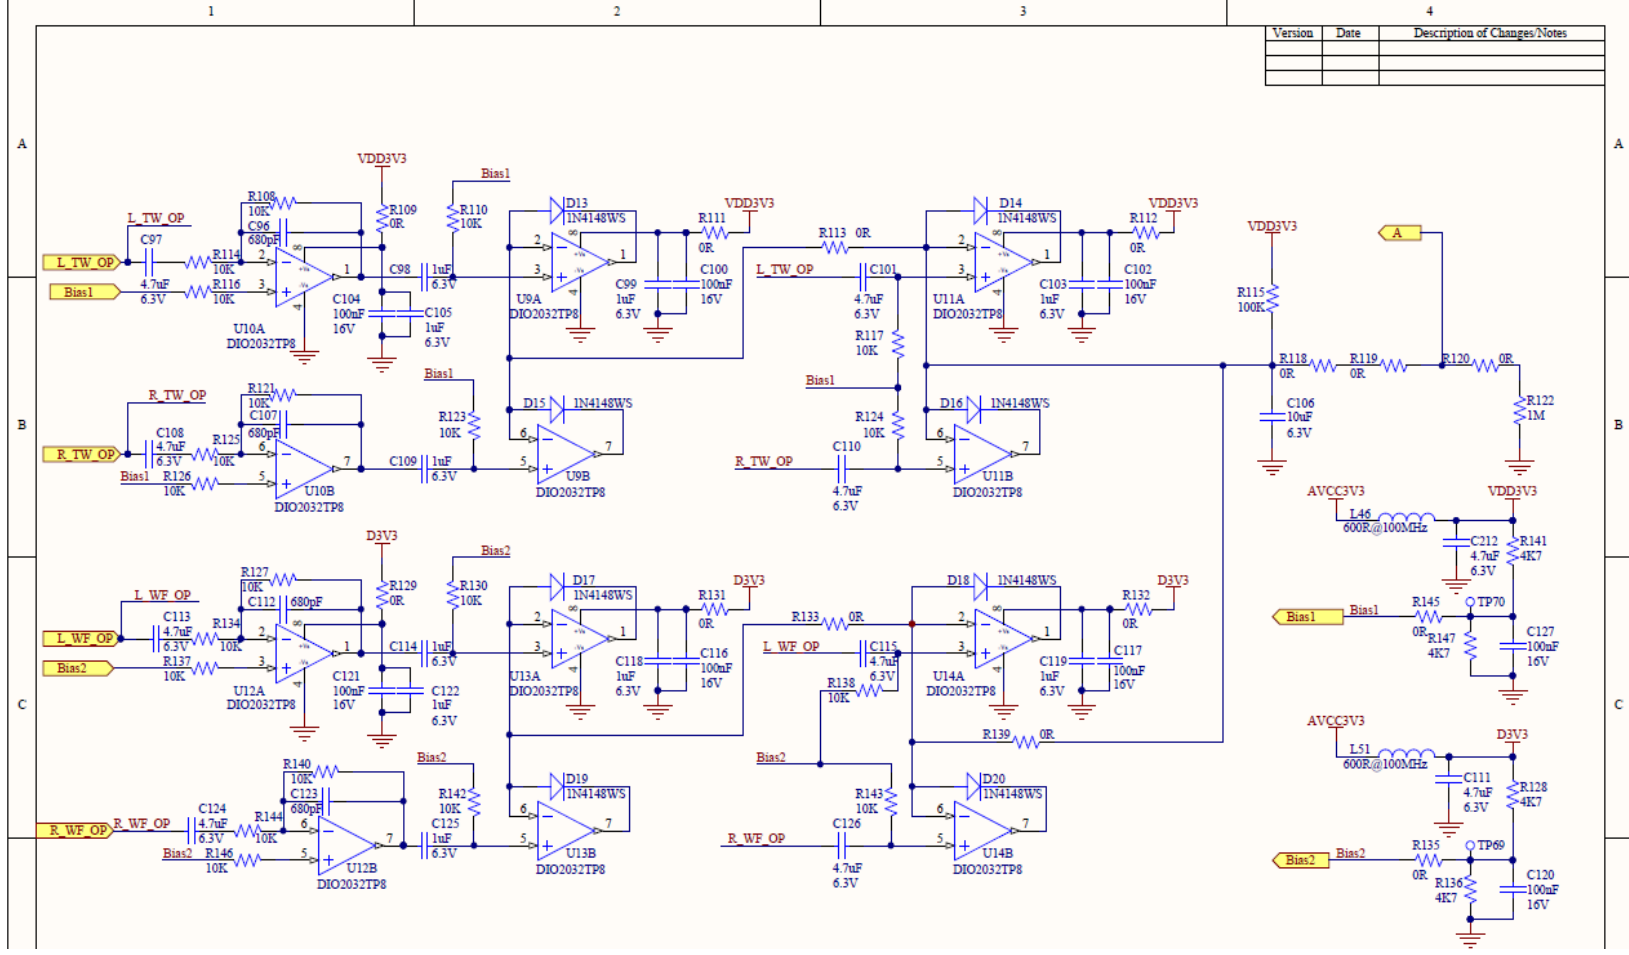



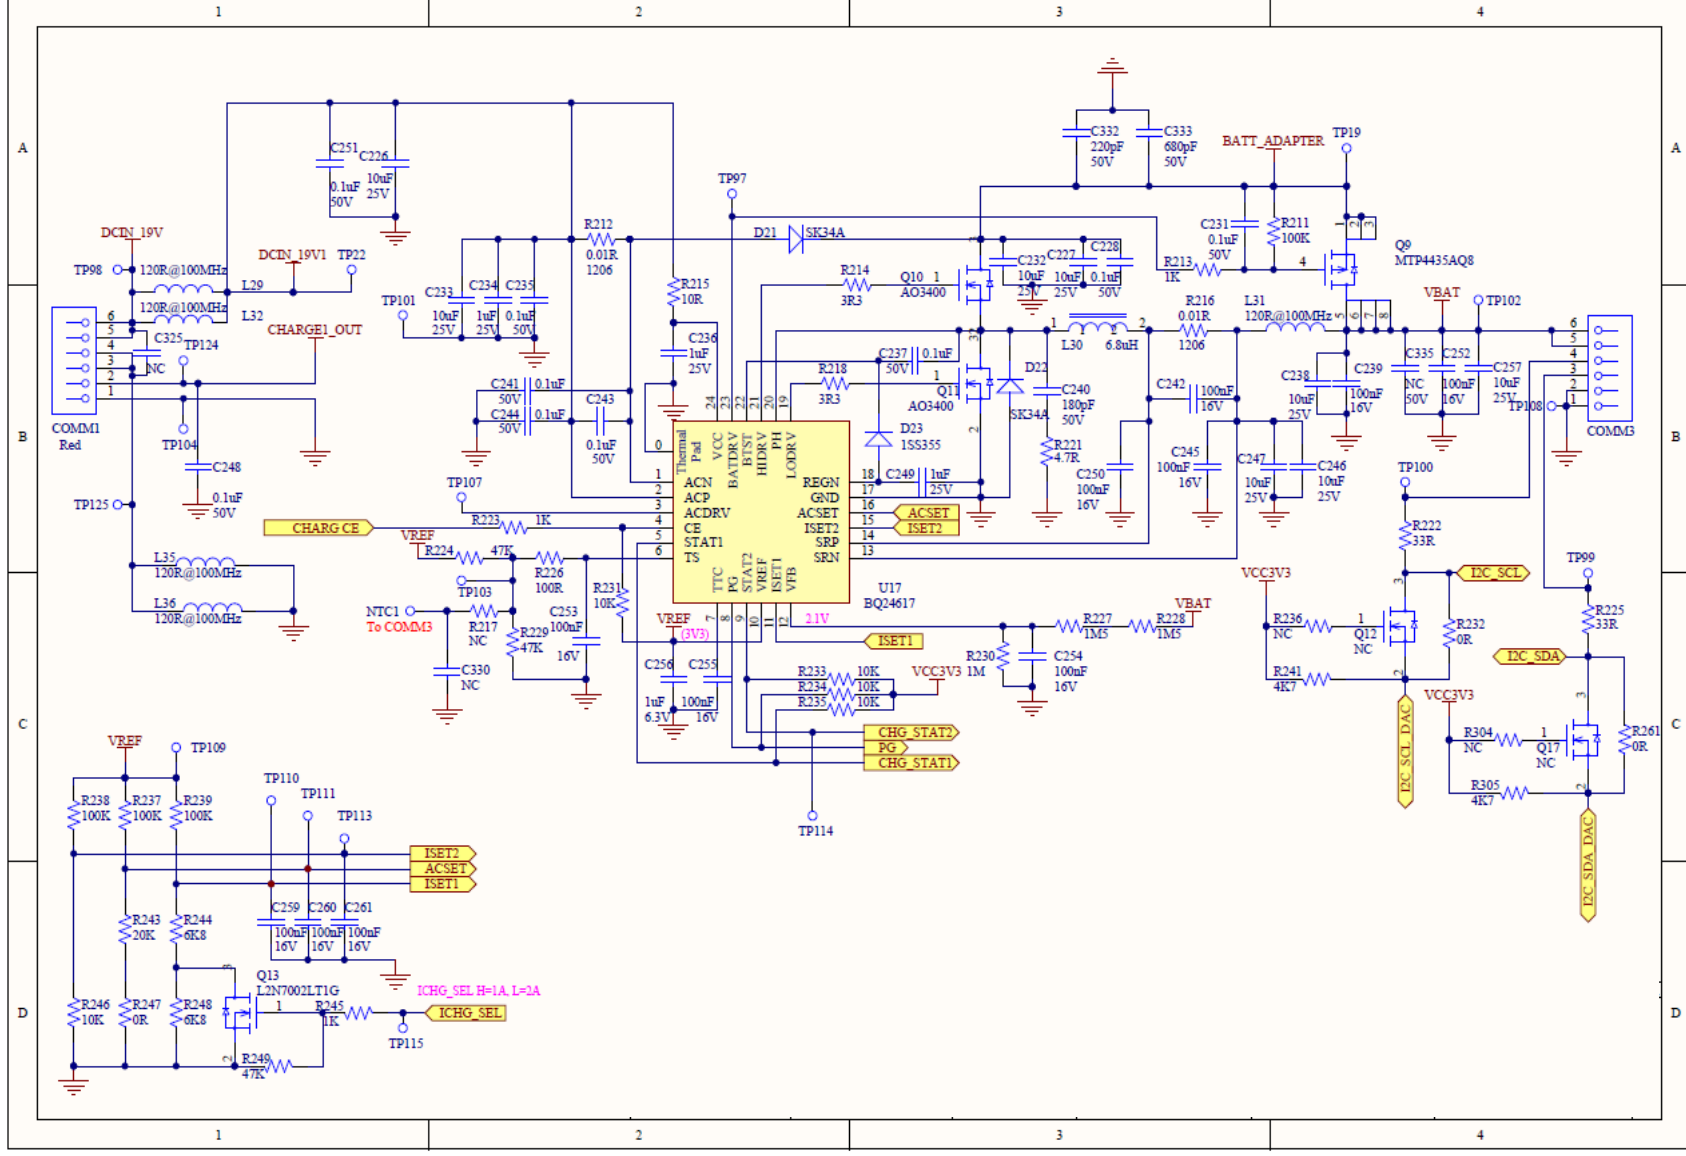

Schematic Diagram – USB Board

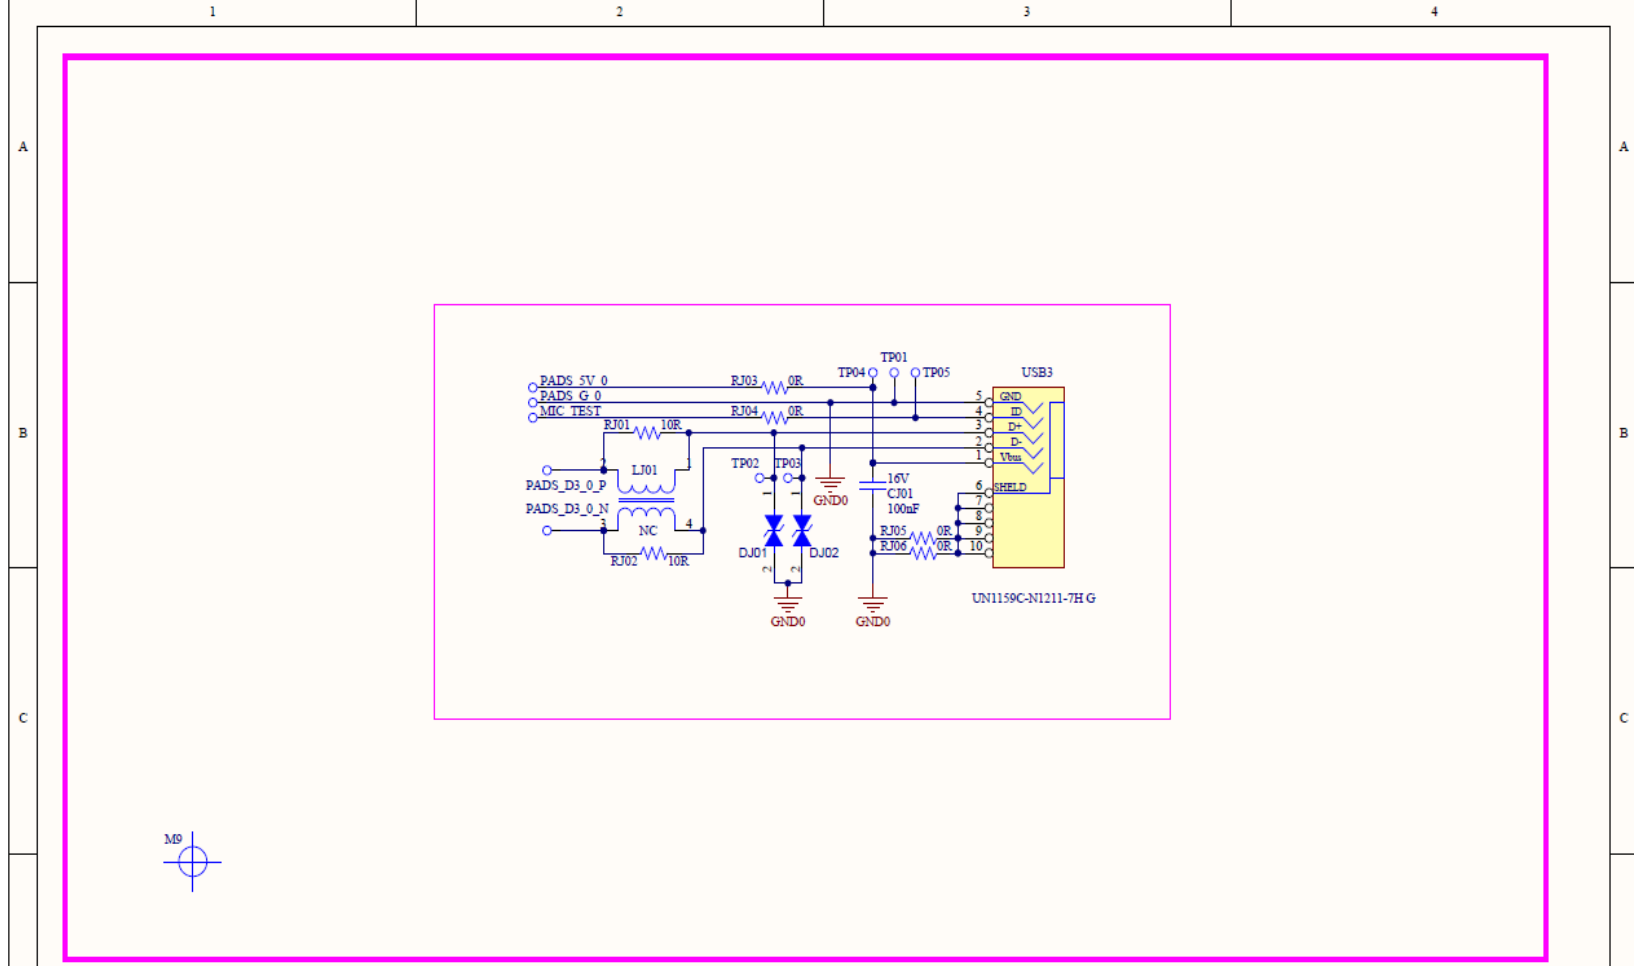

PCB Layout – Main Board

