


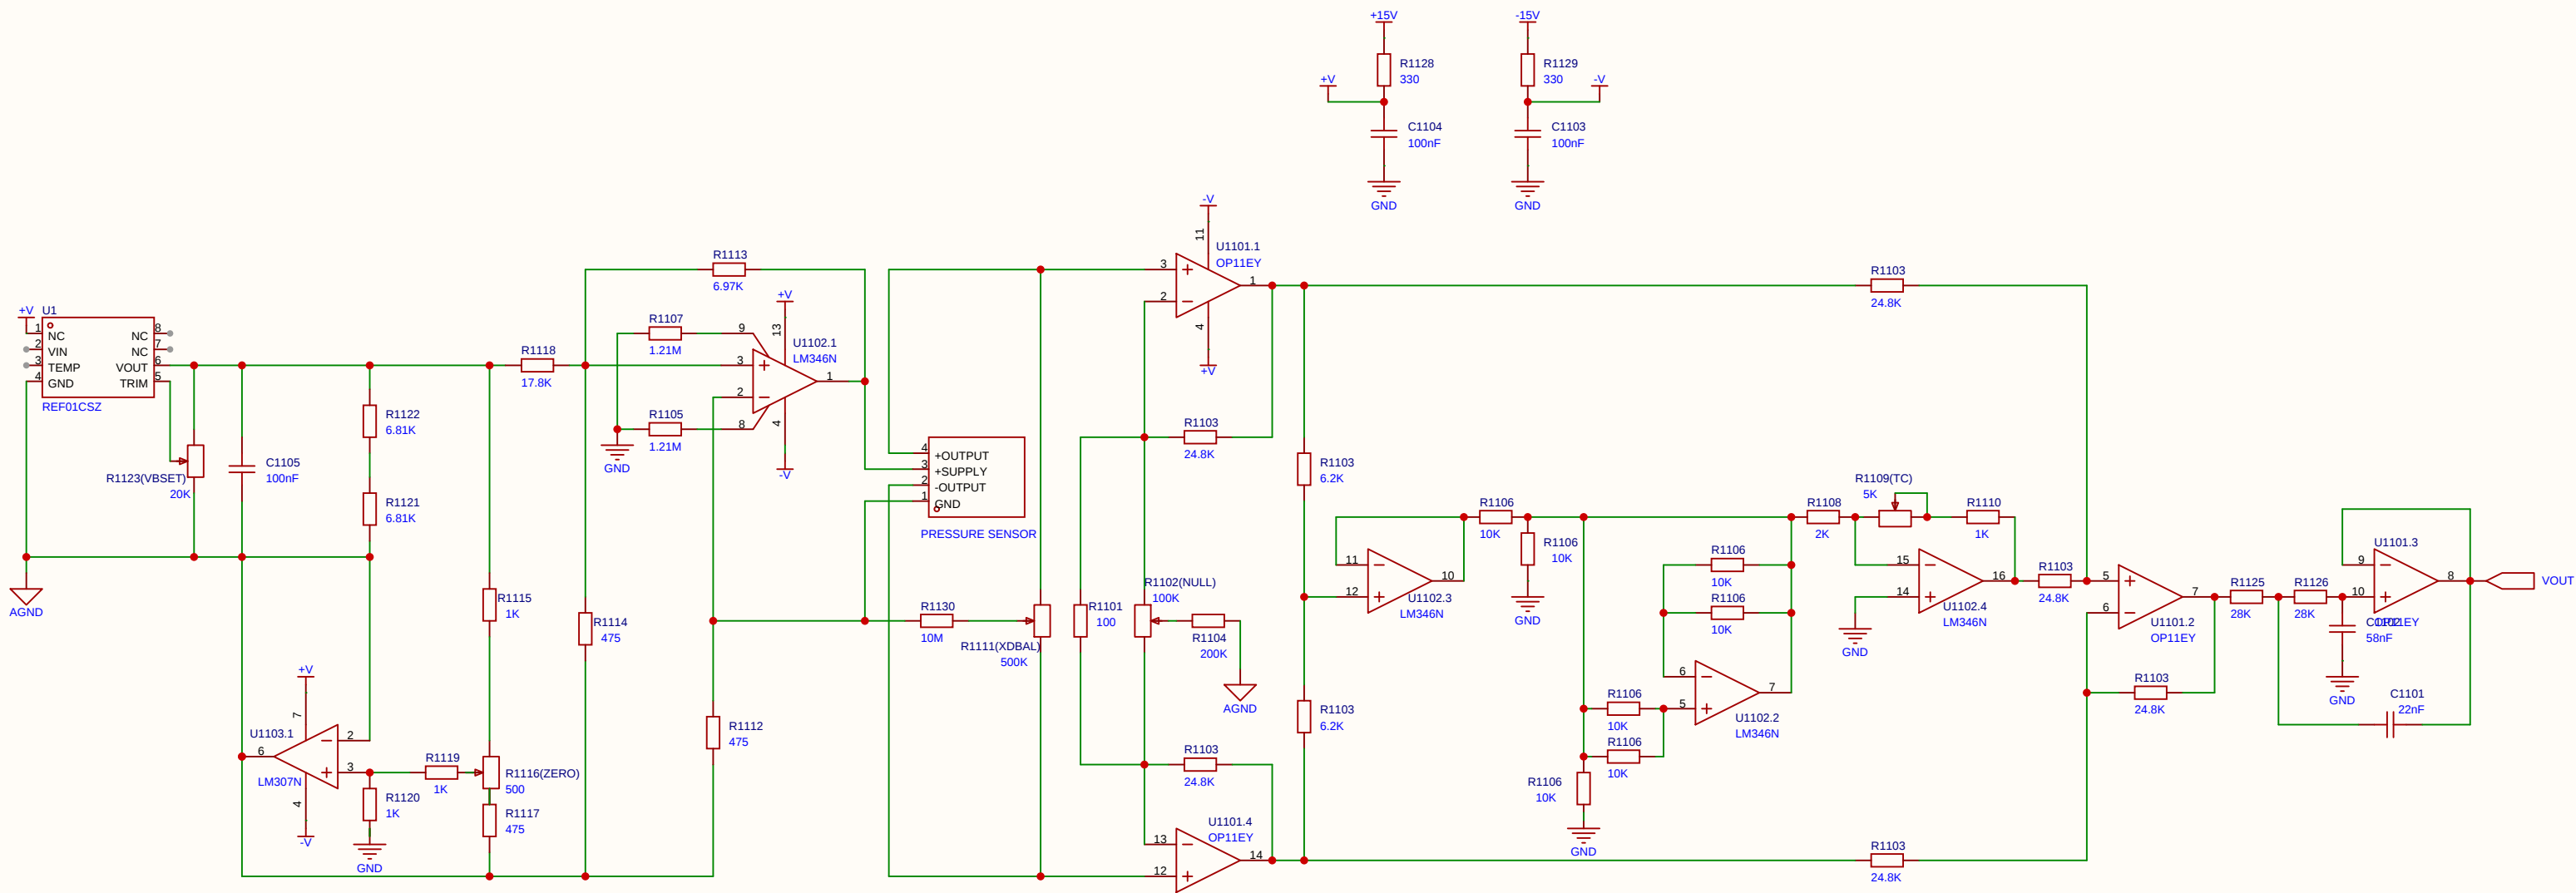

R1123(VB SET):The operating voltage between VCC and GND of the pressure sensor is currently set to 8.000V.

R1116(ZERO):The voltage between the pressure sensor's S+, S-, and GND pins is adjusted to 0.000V.

R1111(XD BAL):Used to adjust the voltage between the pressure sensor's S+ and S- pairs to 0.000mV.

R1102(NULL):Used to adjust the VOUT voltage to 0±.005VDC.

R1109(TC):The specific purpose and adjustment method of this adjustable resistor are currently unclear.*I would be very grateful if someone could tell me.*

原理图	Schematic2			创建日期	2025-06-06
				更新日期	2026-02-15
板子				图页	P1
绘制	RT-200 flow mode				
审阅					
		版本	尺寸	页 1 共 1	
嘉立创EDA		V1.0	A4	嘉立创EDA	