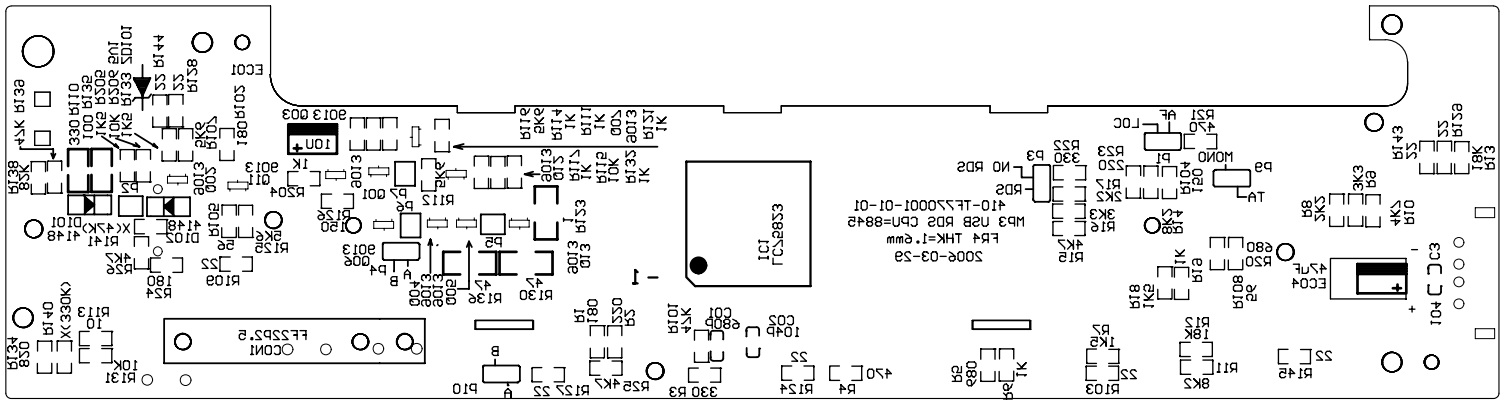

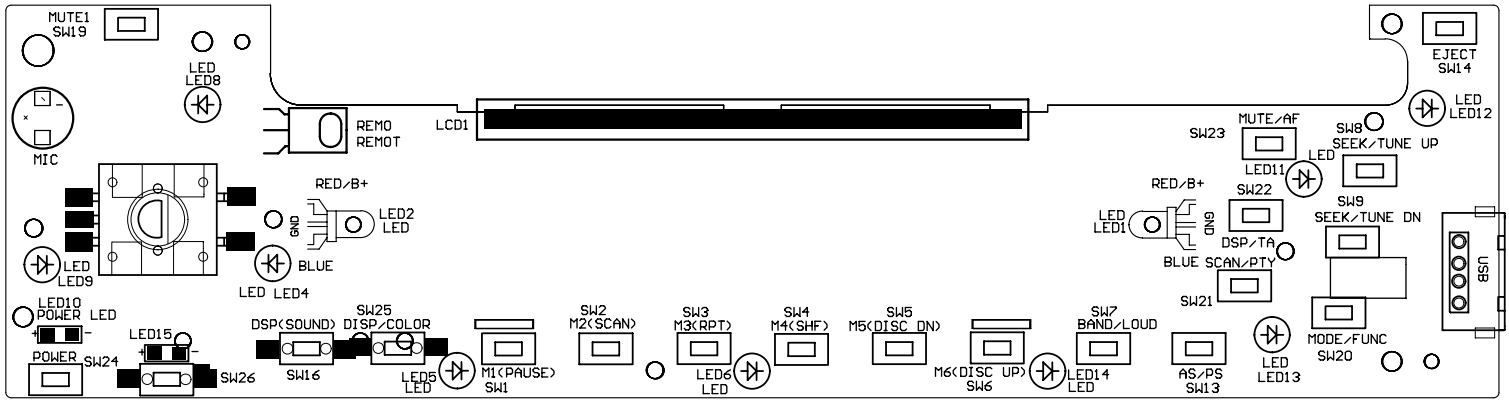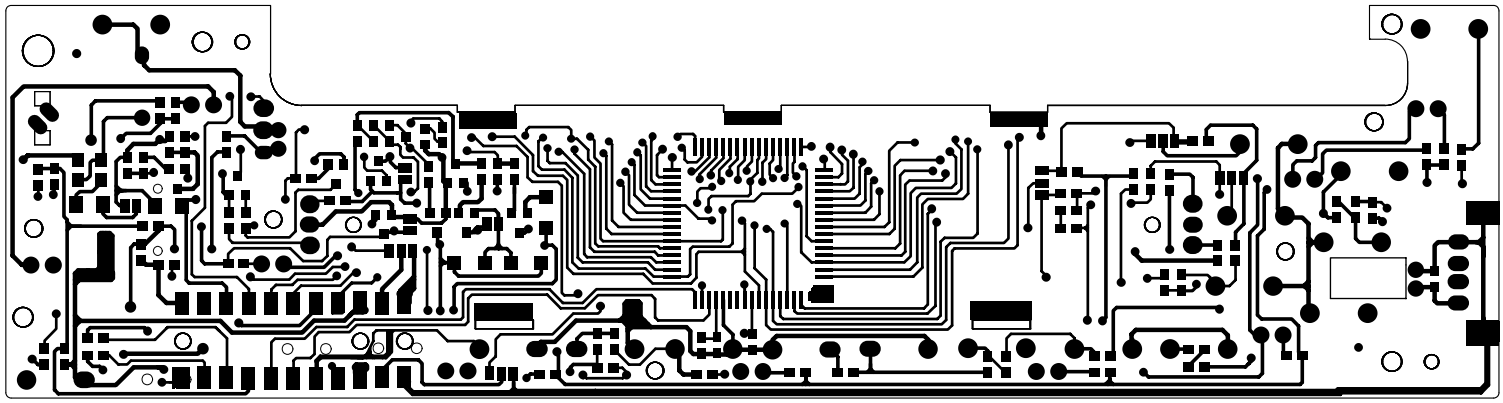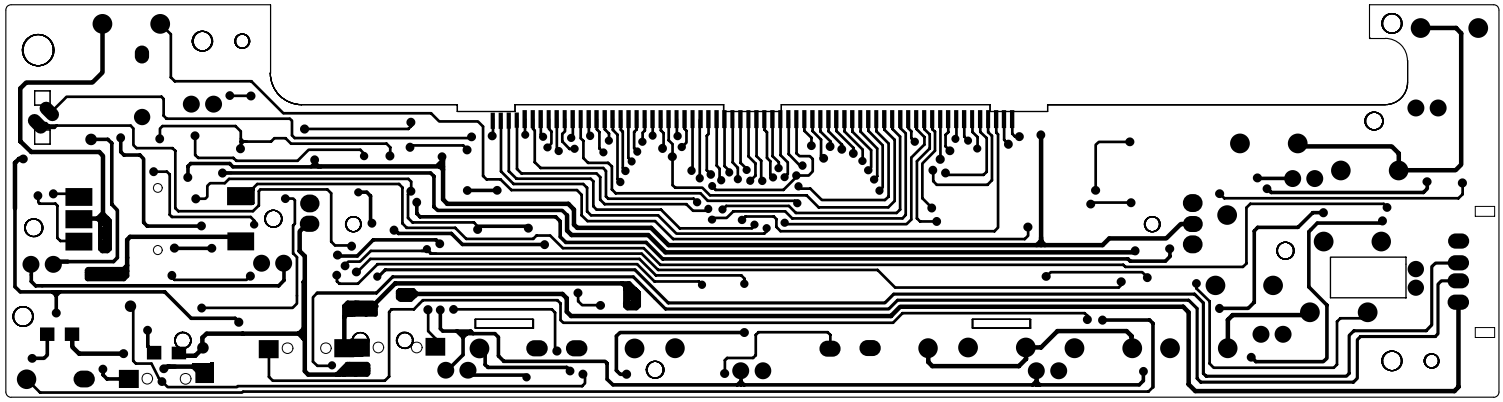
MUTE1
SW19
LED
LED8
MIC
REMO
REMOT
LCD1
EJECT
SW14
LED
LED12
MUTE/AF
SW23
SW8
SEEK/TUNE UP
LED
LED11
RED/B+
SW22
SW9
SEEK/TUNE DN
LED
LED1
GND
DSP/TA
BLUE SCAN/PTY
SW21
USB
RED/B+
LED2
LED
GND
BLUE
LED LED4
LED9
LED10
POWER LED
POWER
SW24
LED15
SW26
DSP(SOUND)
SW16
SW25
DISP/COLOR
LED5
LED
M1(PAUSE)
SW1
SW2
M2(SCAN)
SW3
M3(RPT)
LED6
LED
SW4
M4(SHF)
SW5
M5(DISC DN)
M6(DISC UP)
SW6
LED14
LED
SW7
BAND/LOUD
AS/PS
SW13
LED
LED13
MODE/FUNC
SW20