

Mono-Motronic control unit, throttle valve potentiometer, intake air temperature sender, coolant temperature sender, idling speed switch, throttle valve positioner


- D - Ignition/starter switch
- F60 - Idling switch
- G2 - Coolant temperature sender
- G42 - Intake air temperature sender
- G62 - Coolant temperature sender
- G69 - Throttle valve potentiometer
- G127 - Throttle valve positioner sender
- J257 - Mono-Motronic control unit
- J293 - Radiator fan control unit
- J362 - Immobilizer control unit
- K - Dash panel insert
- N30 - Injector, cylinder 1
- T1 - Single connector, behind the relay plate
- T1y - Single connector, behind the relay plate
- T3f - 3-pin connector, behind dash panel
- T2h - 2-pin connector, behind the relay plate
- air conditioning system -
- T12 - 12-pin connector, behind the relay plate
- T28 - 28-pin connector, on dash panel insert
- T28a - 28-pin connector, on engine
- T45 - 45-pin connector
- TV13 - Speed signal junction box, above the relay plate
- V60 - Throttle valve positioner

- (18) - Earth point, on cylinder block
- (173) - Earth connection -1-, in Mono- Motronic wiring harness
- (174) - Earth connection -2-, in Mono- Motronic wiring harness
- (L41) - Connection (air conditioner on), in air conditioner/radiator fan wiring harness

--- Automatic gearbox only

* - Resistance wire

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow

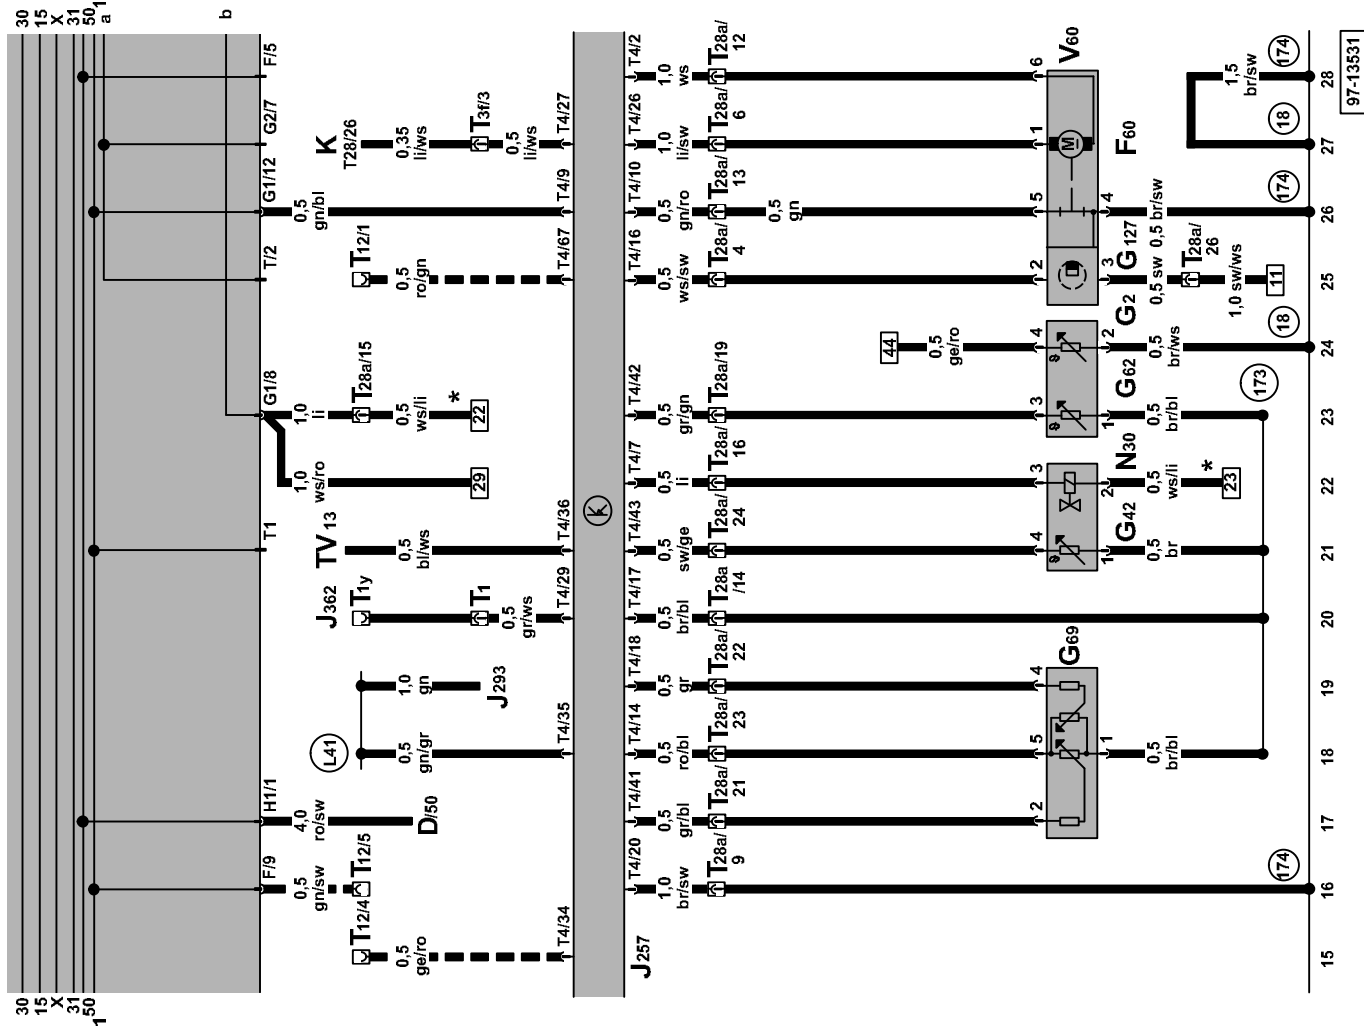

Mono-Motronic control unit, Lambda probe, ignition system, fuel pump

- G6 - Fuel pump (pre-supply pump)
- G39 - Lambda probe
- G40 - Hall sender
- J17 - Fuel pump relay
- J257 - Mono-Motronic control unit
- K - Dash panel insert
- N152 - Ignition transformer
- N157 - Ignition transformer output stage
- O - Ignition distributor
- P - Spark plug connector
- Q - Flame plug
- T3a - 3-pin connector
- T4 - 4-pin connector, near intake manifold
- T28 - 28-pin connector, in dash panel insert
- T28a - 28-pin connector, on engine
- T45 - 45-pin connector
- (18) - Earth point, on cylinder block
- (125) - Earth connection -3-, in headlight wiring harness
- (174) - Earth connection -2-, in Mono- Motronic wiring harness
- (E13) - Positive connection -2- (15), in Mono-Motronic wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = lilac
ge = yellow

